

PRODUCED BY THE OPERATIONS DIRECTORATE OF ENERGY NETWORKS ASSOCIATION

1



Technical Specification 41-24

Issue <1> 2016

Guidelines for the Design, Installation, Testing
and Maintenance of Main Earthing Systems in
Substations

www.energynetworks.org

© <year of publication> **Energy Networks Association**

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Energy Networks Association. Specific enquiries concerning this document should be addressed to:

**Operations Directorate
Energy Networks Association
6th Floor, Dean Bradley House
52 Horseferry Rd
London
SW1P 2AF**

This document has been prepared for use by members of the Energy Networks Association to take account of the conditions which apply to them. Advice should be taken from an appropriately qualified engineer on the suitability of this document for any other purpose.

<Insert publication history here, e.g. "First published, December, 2011">

Amendments since publication

Issue	Date	Amendment
Issue <1>	<April, 2016>	Draft updated in line with comments from previous meeting. References to S34 highlighted for discussion at April Meeting. Some comments included in body for guidance. Other changes accepted and tracked changes removed [RW].

1	Contents	
2	Foreword	9
3	1 Scope.....	10
4	2 Normative references	10
5	3 Definitions	11
6	4 Fundamental Requirements.....	15
7	4.1 Function of an earthing system.....	15
8	4.2 Typical features of an earthing system.....	15
9	4.3 The effects of substation potential rise on persons.....	16
10	4.3.1 Touch potential	17
11	4.3.2 Step potential	17
12	4.3.3 Transfer potential	17
13	4.3.4 General	17
14	4.3.5 Limits for LV networks	18
15	4.3.6 Limits for Other systems	18
16	4.3.7 Limits for Telecommunications Equipment (HOT/COLD sites).....	18
17	4.4 Safety criteria	18
18	4.4.1 General 'permissible' design limits	18
19	4.4.2 Effect of electricity on animals	22
20	4.4.3 Injury or shock to persons and animals outside the installation	22
21	4.5 Electrical Requirements	23
22	4.5.1 Method of neutral earthing.....	23
23	4.5.2 Fault Current	23
24	4.5.3 Thermal effects - general.....	24
25	5 Design.....	26
26	5.1 General approach (flowchart)	26
27	5.2 Design Considerations	27
28	5.2.1 Limiting values for EPR	27
29	5.2.2 Touch and Step voltages	27
30	5.2.3 Factors to include in calculation of EPR and Safety Voltages	27
31	5.2.4 Transfer Potential.....	27
32	5.3 Preliminary Arrangement and Layout	28
33	5.4 Design Guidelines	28
34	5.4.1 Outdoor Substations	28
35	5.4.2 Indoor Substations	29
36	5.4.3 Shared Sites.....	30
37	5.4.4 Distribution (or 'Secondary') Substations	30
38	5.4.5 Metallic Fences	30
39	5.4.6 Provision of Maintenance/Test facilities	31
40	5.5 Design data	31
41	5.5.1 Soil Resistivity.....	31
42	5.5.2 Fault currents and durations for EPR and safety voltage calculations.....	32
43	5.5.3 Fault currents and clearance times for conductor size calculations	33

44	5.5.4	Fault currents and clearance times for electrode size calculations	34
45	5.6	Conductor and Electrode Ratings.....	37
46	5.6.1	Earthing Conductors	37
47	5.6.2	Electrode Surface Current Density Ratings	44
48	5.7	Design Assessment	46
49	5.7.1	Assessment Procedure.....	46
50	5.7.2	Methods to improve design (Mitigation measures)	47
51	5.7.2.1	EPR reduction.....	47
52	5.7.2.2	Touch Voltage reduction.....	48
53	5.8	Risk Assessment.....	48
54	6	Construction of Earthing Systems.....	50
55	6.1	General Design Philosophy	50
56	6.1.1	Materials.....	50
57	6.1.2	Avoiding Theft.....	50
58	6.2	Jointing Conductors and Equipment Connections	51
59	6.2.1	General	51
60	6.2.2	Transition washers.....	51
61	6.2.3	Copper to Copper Connections	52
62	6.2.4	Copper to Earth Rods	52
63	6.2.5	Electrode Test Points.....	52
64	6.2.6	Copper to Equipment (Steel, or Galvanised Steel) Connections.....	52
65	6.2.7	Aluminium to Equipment Connections	52
66	6.2.8	Aluminium to Aluminium Connections.....	53
67	6.2.9	Aluminium to Copper Connections	53
68	6.2.10	Earthing Connections to Aluminium Structures.....	54
69	6.2.11	Steel Structures	54
70	6.3	Above Ground Earthing Installations	55
71	6.3.1	Fixing Above Ground Conductor to Supports	55
72	6.3.2	Prevention of Corrosion of Above Ground Conductors	55
73	6.3.3	Metal Trench Covers	55
74	6.3.4	Loops for Portable Earth Connections	56
75	6.4	Below Ground Earthing Installations	56
76	6.4.1	Installation of Buried Electrode within a Substation.....	56
77	6.4.2	Positioning of Buried Electrode	56
78	6.4.3	Other Earth Electrodes	57
79	6.4.3.1	Earth Rods	57
80	6.4.3.2	Earth Plates	58
81	6.5	Use of Structural Earths including Steel Piles and Rebar.....	58
82	6.5.1	Sheet Steel Piles.....	58
83	6.5.2	Horizontal Steel Reinforced Foundations.....	58
84	6.5.3	Vertical Steel Reinforced Concrete Columns.....	59
85	6.6	Metallic Fences	59
86	6.6.1	Independently Earthed Fences.....	59

87	6.6.2 Segregation between independently earthed fence and earthing	
88	system.....	60
89	6.6.3 Fences Bonded to the Substation Earthing System	61
90	6.6.4 Third Party Metallic Fences.....	62
91	6.6.5 Insulated Fence Sections.....	62
92	6.6.6 Chain Link Fencing (Galvanised or Plastic Coated)	62
93	6.6.7 Coated Fence Panels	63
94	6.6.8 Electric Security Fences	63
95	6.6.9 Anti-climbing Precautions	63
96	6.7 Specific Items	63
97	6.7.1 Water Services to Substations	63
98	6.7.2 Non-current carrying metalwork	63
99	6.7.3 Items normally bonded to the main earth grid:.....	64
100	6.7.4 Items NOT normally bonded to the Earth Grid.....	64
101	6.7.5 Non-standard bonding arrangements.....	64
102	6.8 Overhead Line Terminations.....	65
103	6.8.1 Tower Terminations Adjacent to Substation	65
104	6.8.2 Steel Tower Termination with Cable Sealing Ends.....	65
105	6.8.3 Terminal Poles with Stays Adjacent to Substation Fence	65
106	6.8.4 Down drop Anchorage Arrangement with Arcing Horns	65
107	6.8.5 Loss of Aerial Earth Wires	66
108	6.9 HV Cable Metallic Sheath / Armour Earthing	66
109	6.9.1 Insulated (Polymeric) Sheath Cables	66
110	6.9.2 Cables Entering Substations	67
111	6.9.3 Cables Within Substations.....	67
112	6.9.4 Outdoor Cable Sealing-Ends.....	67
113	6.9.5 Use of Disconnected, Non-Insulated Sheath/Armour Cables as an	
114	Electrode	67
115	6.10 Light-current Equipment Associated with External Cabling	68
116	6.11 Metal Clad and Gas Insulated (GIS) Substations.....	68
117	6.11.1 Metal Clad Substations	68
118	6.11.2 Gas Insulated Switchgear (GIS)	68
119	6.12 Fault Throwing Switches, Earth Switches and Disconnectors	69
120	6.12.1 Background	69
121	6.12.2 Fault Throwing Switches (Phase - Earth).....	70
122	6.12.3 Earth Switches	70
123	6.12.4 Isolators.....	70
124	6.13 Operating Handles, Mechanisms and Control Kiosks.....	70
125	6.13.1 Background.....	70
126	6.13.2 Earth Mats (Stance Earths)	70
127	6.13.3 Connection of Handles to the Earth Grid and Stance Earths	71
128	6.14 Surge Arrestors and CVTs.....	71
129	7 Measurements	72
130	7.1 General.....	72

131	7.2	Safety	72
132	7.3	Instrumentation and Equipment.....	73
133	7.4	Soil Resistivity Measurements.....	73
134	7.4.1	Objective	73
135	7.4.2	Wenner Method	73
136	7.4.3	Interpretation of Results.....	73
137	7.4.4	Sources of Error.....	74
138	7.4.5	Driven Rod Method.....	74
139	7.5	Earth Resistance/Impedance Measurements	75
140	7.5.1	Objective	75
141	7.5.2	Method	75
142	7.5.3	Interpretation of Results.....	76
143	7.5.4	Sources of Error	76
144	7.6	Comparative Method of Measuring Earth Resistance.....	77
145	7.6.1	Objective	77
146	7.6.2	Method	77
147	7.6.3	Interpretation of Results.....	79
148	7.6.4	Sources of Error	79
149	7.7	Earth Connection Resistance Measurements (Equipment Bonding Tests).....	80
150	7.7.1	Objective	80
151	7.7.2	Method	80
152	7.7.3	Interpretation of Results.....	80
153	7.8	Earth Conductor Joint Resistance Measurements.....	81
154	7.8.1	Objective	81
155	7.8.2	Method	81
156	7.8.3	Interpretation of Results.....	81
157	7.9	Earth Potential Measurements	81
158	7.9.1	Objective	81
159	7.9.2	Method	82
160	7.9.3	Interpretation of Results.....	82
161	7.10	Earth Electrode Separation Test.....	82
162	7.10.1	Objective	82
163	7.10.2	Method	82
164	7.10.3	Interpretation of Results.....	82
165	7.11	Buried Earth Electrode Location.....	83
166	7.11.1	Objective	83
167	7.11.2	Method	83
168	B	MAINTENANCE.....	84
169	8.1	Introduction.....	84
170	8.1.1	Inspection.....	84
171	8.1.2	Maintenance and Repairs.....	84
172	8.2	Types of Inspection	85
173	8.2.1	Introduction	85
174	8.2.2	Frequent Visual Inspection	85

175	8.2.3	Infrequent Detailed Visual Inspection.....	85
176	8.2.4	Detailed Visual Inspection, Testing and Analysis	86
177	8.2.4.1	Testing	86
178	8.2.4.2	Selected Excavation and Examination of Buried Earth	
179		Electrode.....	87
180	8.2.4.3	Analysis and Recording of Test Results	87
181	8.3	Maintenance and Repair of Earthing Systems	88
182	8.4	Procedure for the Remaking Defective Joints or Repairing Conductor	
183		Breaks	89
184	8.4.1	Introduction	89
185	8.4.2	Joint Repair Methods.....	89
186	8.4.3	Flexible Braids	90
187	9	Ground Mounted Distribution Substation Earthing	91
188	9.1	Introduction.....	91
189	9.2	Relocation of Pole Mounted Equipment to Ground Level.....	91
190	9.3	General design requirements.....	91
191	9.3.1	Design Data Requirements.....	92
192	9.3.2	Conductor and electrode sizing [New].....	92
193	9.3.3	Target resistance	92
194	9.3.4	EPR design limit.....	93
195	9.3.5	Calculation of EPR.....	93
196	9.3.5.1	Factors to consider:	93
197	9.3.5.2	Transfer Potential from source	94
198	9.3.6	Step/Touch Potentials at the Substation	94
199	9.3.7	Simplified approach	94
200	9.4	Network and other contributions	95
201	9.4.1	Additional Electrode	95
202	9.4.2	Parallel contributions from interconnected HV and LV networks.....	95
203	9.4.3	Ascertaining Network Contribution	96
204	9.4.4	Global Earthing Systems	96
205	9.5	Transfer Potential onto LV network	97
206	9.5.1	General	97
207	9.5.2	Touch voltage on LV system as a result of HV faults	97
208	9.5.3	Stress Voltage.....	98
209	9.6	Combined HV and LV earthing	98
210	9.7	Segregated HV and LV earthing.....	98
211	9.7.1	Separation Distance	98
212	9.7.2	Transfer voltage to third parties.....	99
213	9.7.3	Further Considerations	100
214	9.7.4	Multiple LV electrodes on segregated systems.....	100
215	9.8	Situations where HV/LV systems cannot be segregated	100
216	9.9	Practical Considerations	101
217	9.10	LV installations near High EPR sites	101
218	9.11	Supplies to/from High EPR (HPR) sites	101

219	9.11.1 Special Arrangements	102
220	10 Pole Mounted Substation and Equipment Earthing	103
221	10.1 General Comments & Assumptions.....	103
222	10.2 Pole Mounted Transformers	103
223	10.3 Electrode Configuration for Pole Mounted Equipment	103
224	10.4 HV Earth Electrode Value	104
225	10.5 Electrode Arrangement Selection Method.....	104
226	10.6 Earthed Operating Mechanisms Accessible From Ground Level	105
227	10.7 Air Break Switch Disconnecter (ABSD) with an isolated operating	
228	mechanism	109
229	10.8 Surge Arresters	111
230	10.9 Cable Terminations	111
231	10.10 Operations at Earthed Equipment Locations.....	112
232	10.11 Installation	112
233	10.12 Inspection & Maintenance of Earth Installations	113
234	10.12.1 Items to Inspect.....	113
235	10.12.2 Items to Examine	113
236	10.12.3 Items to Test	113
237	11 Case studies / examples	115
238		
239		
240		

Foreword

This Technical Specification (TS) is published by the Energy Networks Association (ENA) and comes into effect from July, 2016>. It has been prepared under the authority of the ENA Engineering Policy and Standards Manager and has been approved for publication by the ENA Electricity Networks and Futures Group (ENFG). The approved abbreviated title of this engineering document is "ENA TS 41-24".

This Specification is to be used in conjunction with Engineering Recommendation S34 (2015). In this document account has been taken of:

- (i) UK Adoption of IEC 50522:2010 (Earthing of Power Installations Exceeding 1kV a.c.), in particular with reference to acceptable touch/step voltage limits derived from IEC/TS 60479-1:2005 (Effects of current on human beings and livestock).
- (ii) changes to earthing practice as outlined in ESQC (Electrical Safety, Quality, and Continuity) Regulations, 2002, in particular with regard to smaller 'distribution' or 'secondary' substations. These are described in Section 10 and 11 of this specification.
- (iii) the requirements for Protective Multiple Earthing systems as outlined in Engineering Recommendation G12. (The relevant items concerning substation earthing in EREC G12/4 have now been transferred to this document);
- (iv) the increasing use of plastic sheathed cables;
- (v) the differing requirements of earthing systems at various voltages and for differing types of substation installation.

1 Scope

This Specification applies to fixed earthing systems for all electricity supply systems and equipment earthing within EHV, HV and HV/LV substations.

It also applies to:

- (i) terminal towers adjacent to substations and cable sealing end compounds;
- (ii) pole mounted transformer or air-break switch disconnector installations;
- (iii) pole mounted reclosers with ground level control.

It does not apply to earthing systems for quarries and railway supply substations.

2 Normative references

The following referenced documents, in whole or part, are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

BS 7430:2011 (Code of Practice for Protective Earthing of Electrical Installations)

ESQC (Electrical Safety, Quality, and Continuity) Regulations, 2002 (As amended)

IEC 50522:2010 (Earthing of Power Installations Exceeding 1kV a.c.)

IEC/TS 60479-1:2005 (Effects of current on human beings and livestock). (Part 1 – General Aspects)

IEC/TR 60479- 3 – Effects of currents passing through the body of livestock)

ITU-T: Directives concerning the protection of telecommunication lines against harmful effects from electric power and electrified railway lines: Volume VI: Danger, damage and disturbance (2008)

CIGRE Working Group 23.10 Paper 151 (044) (Dec. 1993): Earthing of GIS – An Application Guide

Other references as included in this document: ER 134, S34, BS EN 62305, IEEE 80, IEEE 81, BS EN 62561-2

290 **3 Definitions**

APPROVED EQUIPMENT	Equipment Approved in operational policy document for use in the appropriate circumstances.
AUXILIARY ELECTRODE	See SUPPLEMENTARY ELECTRODE
BACKUP PROTECTION	Protection set to operate following failure or slow operation of primary protection – see NORMAL PROTECTION below. For design purposes the backup protection clearance time may be taken as a fixed (worst case) clearance time appropriate to the network operator's custom and practice.
BONDING CONDUCTOR	A protective conductor providing equipotential bonding.
CROSS COUNTRY FAULT	Two or more phase-to-earth faults at separate locations and on different phases. Effectively this creates a phase-phase fault with current flowing through earth electrode and/or bonding conductors. The result can be an increased 'EARTH FAULT CURRENT' for design purposes at some locations. CROSS COUNTRY FAULTS are usually considered only if a first phase-earth fault does not automatically clear within a short period, or if significant phase voltage displacement (neutral voltage displacement) could occur. If an accurate figure is not available, a value of 85% of the double phase-to-earth fault current may be assumed.
EARTH	The conductive mass of earth whose electric potential at any point is conventionally taken as zero.
EARTH ELECTRODE	A conductor or group of conductors in intimate contact with, and providing an electrical connection to, earth.
EARTH ELECTRODE POTENTIAL	The difference in potential between the 'EARTH ELECTRODE' and a remote 'EARTH'.
EARTH ELECTRODE RESISTANCE	The resistance of an 'EARTH ELECTRODE' with respect to 'EARTH'.
EARTH ELECTRODE RESISTANCE AREA	That area of ground over which the resistance of an 'EARTH ELECTRODE' effectively exists. It is the same area of ground over which the 'EARTH ELECTRODE POTENTIAL' exists.
EARTH FAULT	A fault causing current to flow in one or more earth-return paths. Typically a single phase to earth fault, but this term may also be used to describe two phase and three phase faults involving earth.
EARTH FAULT CURRENT	The worst case steady state (symmetrical) RMS current to earth, i.e. that returning to the system neutral(s) resulting from a single phase to earth fault. This is normally calculated (initially) for the 'zero ohm' fault condition. Depending on the circumstances, the value can be modified

by including 'earth resistance'. Not to be confused with 'GROUND RETURN' current which relates to the proportion of current returning via soil.

In some situations, particularly 'CROSS COUNTRY FAULTS', a different single phase to earth fault at two separate locations can result in 'EARTH FAULT CURRENT' (as seen at the fault-point) that does not return to the system neutrals yet should still be considered at the design stage.

EARTH POTENTIAL RISE (EPR) OR GROUND POTENTIAL	The difference in potential which may exist between a point on the ground and a remote 'EARTH'. Formerly known as RoEP (Rise of Earth Potential). The term 'GPR' (Ground Potential Rise) is an alternative form, not used in this standard.
EARTHING CONDUCTOR OR EARTHING CONNECTION	A protective conductor connecting a main earth terminal of an installation to an 'EARTH ELECTRODE' or to other means of earthing.
EARTH MAT	Definition requested by WPD. Group to decide form of words, e.g.: A buried or surface laid mesh or other electrode, usually installed at the operator position close to switchgear or other plant, intended to control or limit hand-feet TOUCH POTENTIAL.
EARTHING SYSTEM	The complete interconnected assembly of 'EARTHING CONDUCTORS' and 'EARTH ELECTRODES' (including cables with uninsulated sheaths).
EHV	Extra High Voltage, typically used in UK to describe a voltage of 33kV or higher.
ELECTRODE CURRENT	The current entering the ground through the substation's electrode system under earth fault conditions. This term is generally used in the context of electrode sizing calculations and is slightly different to Ground Return Current since the ground return current may flow through alternative paths such as auxiliary electrodes etc. For design purposes the electrode current may be taken as the worst case current flowing into a substation's electrode system under foreseeable fault conditions including, where relevant, the loss of metallic return paths and/or cross country faults.
GLOBAL EARTHING SYSTEM	An earthing system of sufficiently dense interconnection such that all items are bonded together and rise in voltage together under fault conditions. No 'true earth' reference exists and therefore safety voltages are limited.
GROUND RETURN CURRENT	<p>The proportion of EARTH FAULT CURRENT returning via soil (as opposed to metallic paths such as cable sheaths or overhead earth wires)</p> <p>If there is a metallic return path for EARTH FAULT CURRENT (e.g. a cable screen or overhead earth wire), this</p>

will typically convey a large proportion of the earth fault current. The remainder will return through soil to the system neutral(s). Reduction factors for neutral current flows (multiple earthed systems) and sheath/earth wire return currents may be applied to calculate the GROUND RETURN CURRENT. The GROUND RETURN CURRENT is used in EPR calculations as it flows through the resistance formed by a substation's overall earth electrode system (and that of the wider network) and thus contributes to voltage rise of that system. Annex I of BS EN 50522 describes some methods for calculating this component. Further guidance is given in ENA **EREC S34**.

GROUND VOLTAGE PROFILE

The radial ground surface potential around an 'EARTH ELECTRODE' referenced with respect to remote 'EARTH'.

HOT / COLD SITE

A HOT site is defined as one which exceeds ITU limits for EPR, typically these thresholds are 650 V (for reliable fault clearance time ≤ 0.2 seconds), or 430 V otherwise. The requirements derive from telecommunication standards relating to voltage withstand on equipment.

Note: These thresholds have formerly been applied as design limits for EPR in some areas. The terms HOT and COLD were often applied as a convenience (on the basis that many COLD sites do achieve safe step/touch limits) but do not relate directly to safe design limits for touch and step voltages in substations. Refer to 'HIGH EPR' below.

HIGH EPR / HPR

High Potential Rise resulting from an earth fault. An EPR greater than twice the permissible touch voltage limit (e.g. 466 V for 1 second faults on soil or outdoor concrete).

HV (High Voltage)

A voltage greater than 1kV and less than 33kV. Typically used to describe 6.6kV, 11kV and 20kV systems in UK.

MES (Main Earthing System)

The interconnected arrangement of earth electrode and bonds to main items of plant in a substation.

NORMAL PROTECTION OPERATION

Clearance of a fault under normal (usual) circumstances. The normal clearance time will include relay operating time and mechanical circuit breaker delays for all foreseeable faults, and may be calculated for design purposes. Alternatively a network operator may work to the 'worst case' protection clearance time applicable to the network in a given area. This time assumes that faults will be cleared by normal upstream protection and does not allow for e.g. stuck circuit breakers or other protection failures/delays. Certain parts of an earthing design should consider slower 'BACKUP PROTECTION' operation (see above) which allows for a failure of normal protection.

NETWORK OPERATOR	Owner or operator of assets. Includes DNO (Distribution Network Operator), IDNO (Independent or 'Inset' DNO) and Transmission Network Operator (TNO) as defined in the Distribution Code (DCode) or System Operator Transmission Code (STC) as appropriate.
SUPPLEMENTARY ELECTRODE	Electrode that improves the performance of an earthing system, and may increase resilience, but is not critical to the safety of the 'as designed' system.
STEP POTENTIAL	See Section 4.3.2 for definition.
STRESS VOLTAGE	Voltage difference between two segregated earthing systems, which may appear across insulators/bushings etc. or cable insulation.
TOUCH POTENTIAL	See Section 4.3.1 for definition.
TRANSFER POTENTIAL	See Section 4.3.3 for definition.
WITHSTAND VOLTAGE	The maximum STRESS VOLTAGE that can be safely permitted between items of plant or across insulation without risk of insulation breakdown or failure.

4 Fundamental Requirements

4.1 Function of an earthing system

Every substation shall be provided with an earthing installation designed so that in both normal and abnormal conditions there is no danger to persons arising from earth potential in any place to which they have legitimate access. The installation shall be able to pass the maximum current from any fault point back to the system neutral whilst maintaining step, touch, and transfer potentials within permissible limits (defined in Section 4.3) based on normal* protection relay and circuit breaker operating times. In exceptional circumstances where the above parameters may not be economically or practically kept below permissible limits a probabilistic risk assessment may be carried out. Where this shows the risk to be below accepted ALARP levels the level of earth potential rise mitigation may be reduced (refer to Section 5.8).

The earthing system shall be designed to avoid damage to equipment due to excessive potential rise, potential differences within the earthing system (stress voltages), and due to excessive currents flowing in auxiliary paths not intended for carrying fault current.

The design shall be such that the passage of fault current does not result in any thermal or mechanical damage [for backup protection clearance times] or damage to insulation of connected apparatus. It shall be such that protective gear, including surge protection, is able to operate correctly.

Any exposed normally un-energised metalwork within a substation, which may be made live by consequence of a system insulation failure can present a safety hazard to personnel. It is a function of the station earthing system to eliminate such hazards by solidly bonding together all such metalwork and to bond this to the substation earth electrode system in contact with the general mass of earth. Dangerous potential differences between points legitimately accessible to personnel shall be eliminated by appropriate design.

The earthing system shall maintain its integrity for the expected installation lifetime with due allowance for corrosion and mechanical constraints.

The earthing system performance shall contribute to ensuring electromagnetic compatibility (EMC) among electrical and electronic apparatus of the high voltage system in accordance with IEC/TS 61000-5-2.

4.2 Typical features of an earthing system

The earthing installation requirements are met principally by providing in each substation an arrangement of electrodes and earthing conductors which act as an earthing busbar. This is called the 'main earth grid' or 'main earth system' (MES) and the following are connected to it:

- (i) all equipment housing or supporting high voltage conductors within the substation such as transformer and circuit breaker tanks, arcing rings and horns and metal bases of insulators;
- (ii) neutral connection of windings of transformers required for high voltage system earthing. For high voltage systems the connections may be via earthing resistors or other current limiting devices, as described in Section 4.4. (The neutral earthing of low-voltage systems is separately considered in Section 9);

* See 'Definitions' in Section 3

- 334 (iii) earth electrodes, additional to the main earth grid which may itself function as an
335 earth electrode;
- 336 (iv) earth connections from overhead line terminal supports and the sheaths / screens
337 of underground cables;
- 338 (v) earth mats, provided as a safety measure, to reduce the potential difference
339 between points on the area of ground adjacent to manually operated plant and the
340 metalwork including handles of that plant (but see also 10.6);
- 341 (vi) 'Grading Electrodes' (intended to reduce touch voltages on equipment), which as
342 a minimum consist of a horizontal ring electrode around all items of earthed plant
343 and the equipment and bonded to it. This often must be supplemented by
344 additional grading electrodes inside the ring;
- 345 (vii) 'High Frequency Electrodes', conductors and electrodes specifically configured to
346 reduce the impedance to lightning, switching and other surges at applicable
347 locations, e.g. surge arresters, CVTs and GIS bus interfaces;
- 348 (viii) all other exposed and normally un-energised metalwork wholly inside the
349 substation perimeter fence, e.g. panels (excluding floating fence panels), kiosks,
350 lighting masts, oil tanks, etc. Conductive parts not liable to introduce a potential
351 need not be bonded (e.g. metal window frames in brick walls). Items such as
352 fences, cables and water pipes which are not wholly inside the substation are
353 separately considered in Sections 6.6 and 6.7.
- 354 (ix) Fences may be bonded to the main earth system in some situations – refer to
355 Section 6.6.

356 Substation surface materials, for example stone chippings which have a high value of
357 resistivity, are chosen to provide a measure of insulation against potential differences
358 occurring in the ground and between ground and adjacent plant. Although effective bonding
359 significantly reduces this problem the surface insulation provides added security under
360 system fault conditions. Permissible 'touch/step' voltages are higher where an insulated
361 surface layer is provided – refer to 'Safety Criteria' below.

362 **4.3 The effects of substation potential rise on persons**

363 During the passage of earth-fault current a substation earth electrode is subjected to a
364 voltage rise (Earth Potential Rise, or 'EPR', sometimes denoted as U_E). Potential gradients
365 develop in the surrounding ground area. These gradients are highest adjacent to the
366 substation earth electrode and the ground potential reduces to zero (or 'true earth potential')
367 at some distance from the substation earth electrode.

368 A person will be at risk if he/she can simultaneously contact parts at different potential; thus
369 in a well designed system the voltage differences between metallic items will be kept to safe
370 levels regardless of the voltage rise (EPR) on the system.

371 Ground potential gradients around the electrode system, if great enough, can present a
372 hazard to persons and thus effective measures to limit them must be incorporated in the
373 design.

374 The three main design parameters relate to 'Touch', 'Step' and 'Transfer' voltages as defined
375 below. These terms are shown as U_{VT} , U_{VS} and 'A' in Figure 1.

376

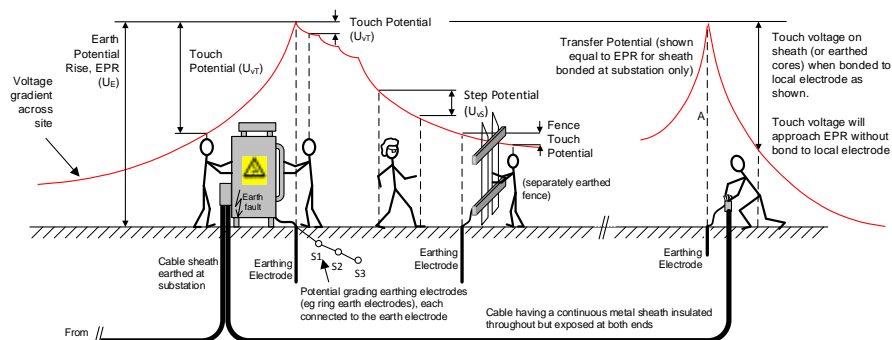


Figure 1 – Showing Touch, Step, and Transfer Voltages resulting from an earth fault

4.3.1 Touch potential

This term describes the voltage appearing between a person's hands and feet. It arises from the fact that the ground surface potential at a person's feet can be somewhat lower in value than that present on the buried earth electrode (and any connected metalwork). If an earthed metallic structure is accessible, a person standing on the ground 1 metre away and touching the structure will be subject to the 'touch potential'. For a given substation the maximum value of 'touch potential' can be up to two or three times greater than the maximum value of 'step potential'. In addition, the permissible limits for step potential are usually much higher than for touch potential. As a consequence, if a substation is safe against 'touch potentials', it will normally be safe against 'step potentials'.

In some situations, the 'hand-hand' touch potential needs to be considered, for example if 'unbonded' parts are within 2 metres. The permissible limits for this scenario can be calculated as described in IEC 60479-1, using the body impedance not exceeded by 5% of the population. In general, such situations should be designed out, e.g. by increasing separation or introducing barriers if the systems must be electrically separate, or by bonding items together. The siting of fences needs consideration in this regard.

4.3.2 Step potential

As noted above, a potential gradient in the ground is greatest immediately adjacent to the substation earth electrode area. Accordingly the maximum 'step potential' at a time of substation potential rise will be experienced by a person who has one foot on the ground of maximum potential rise and the other foot one step towards true earth. For purposes of assessment the step distance is taken as one metre. This is shown as U_{S1} in Figure 1.

4.3.3 Transfer potential

4.3.4 General

A metallic object having length - a fence, a pipe, a cable sheath or a cable core, for example, may be located so as to bring in ('import') or carry out ('export') a potential to or from the site.

By such means a remote, or 'true earth' (zero) potential can be transferred into an area of high potential rise (HPR) or vice-versa. For example a long wire fence tied to a (bonded) substation fence could export the site EPR to the end of the wire fence, where it may pose an electric shock hazard to somebody standing on soil at 'true earth' potential. Similarly, a metallic water pipe (or telephone cable, or pilot cable, etc.) could 'import' a zero volt

reference into a substation, where local voltage differences could be dangerous. Bonding the cable or pipe to the substation system might reduce local risk but could create a problem elsewhere; isolation units or insulated inserts (for pipework) are typical solutions that may need to be considered.

The limits for permissible transfer voltage relate to shock risk (Touch and Step Voltage), and equipment damage / insulation breakdown (Stress Voltage).

4.3.5 Limits for LV networks

Safety criteria (as defined in Section 4.4.1) apply to the voltage that may be transferred to LV networks. Further information is given in Section 9.5.

4.3.6 Limits for Other systems

Voltages carried to pipelines, fences, and other metallic structures during HV fault conditions must not exceed permissible touch and step voltage limits as defined below (Section 4.4.1). In some circumstances (for example pipelines connected to gas or oil pumping or storage facilities), lower limits may apply as defined in relevant standards.

4.3.7 Limits for Telecommunications Equipment (HOT/COLD sites)

Care must be taken to ensure that telecommunications and other systems are not adversely impacted by substation or structure EPR; in general these systems must be routed so that the insulation withstand is not exceeded by passing through an area of high potential rise. Where the EPR on substations (or structures) exceeds certain levels, the operators of these systems must be notified. Refer to ENA ER S36 for more information.

ITU Directives[†] presently prescribe limits (for induced or impressed voltages derived from HV supply networks) of 430 V rms or, in the case of high security lines, 650 V rms. (High security lines are those with fast acting protection which, in the majority of cases, limits the fault duration to less than 200 milliseconds.) Voltages above and below these limits are termed 'HOT' and 'COLD' respectively, although it should be noted that these terms do not relate directly to safety voltages.

For telecoms connections to 'HOT' sites, consultation with telecommunications provider may be necessary to arrive at a solution, e.g. isolation transformers or optic fibre links to ensure the telecoms system is segregated from the substation earth.

4.4 Safety criteria

4.4.1 General 'permissible' design limits

An effective earthing system is essential to ensure the safety of persons in, and close to substations, and to minimise the risk of danger on connected systems beyond the substation boundaries. The most significant hazard to humans is that sufficient current will flow through the heart to cause ventricular fibrillation.

The basic criteria adopted in this specification for the safety of personnel are those laid down in BS EN 50522, which in turn derive from IEC/TS 60479-1. In addition, ITU-T directives are considered where relevant, and where their limits might be lower than BS EN 50522.

The relevant limits for touch and step voltages are given in Tables 1 and 2 below.

These use the body impedance values not exceeded by 5% of the population, and the 'C2' current curve as described in National Annexe NA of 50522:2010.

[†] (ITU-T: Directives concerning the protection of telecommunication lines against harmful effects from electric power and electrified railway lines: Volume VI: Danger, damage and disturbance (2008))

452 In selecting the appropriate limits, the designer must consider the type of surface covering,
453 and if footwear will be worn. Within substations, it should be assumed that footwear will be
454 worn. IEC/TS 60479-1 states that these design limits are sufficiently conservative to apply to
455 all humans including children; however it is recommended that further reference be made to
456 that standard, and relevant (lower) limits adopted as necessary if a substation is in close
457 proximity to, or might otherwise impinge on high risk groups.

458

Table 1 – Permissible touch voltages for typical fault clearance times:

Permissible touch voltages V ^(A)		Fault clearance time, seconds																			
		0.1	.15	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1	1.1	1.2	1.3	1.4	1.5	2	3	5	≥10 ^(B)
Contact area	Bare feet (worst case) ^(C)	405	362	320	247	185	135	106	89	78	72	68	65	63	61	59	58	55	52	50	50
	Bare feet (with contact resistance)	521	462	407	313	231	166	128	106	92	84	80	76	73	71	69	67	63	60	58	57
	Shoes on soil or outdoor concrete	2070	1808	1570	1179	837	578	420	332	281	250	233	219	209	200	193	188	173	162	156	153
	Shoes on 75mm chippings	2341	2043	1773	1331	944	650	471	371	314	279	259	244	232	223	215	209	192	180	173	170
	Shoes on 150mm chippings or dry ^(D) concrete	2728	2379	2064	1548	1095	753	544	428	361	321	298	280	266	255	246	239	220	205	198	194
	Shoes on 100mm Asphalt	13500	11800	10200	7600	5300	3600	2500	2000	1600	1400	1370	1300	1200	1100	1100	1080	990	922	885	866
NOTE: These values are based on fibrillation limits. Immobilisation or falls/muscular contractions could occur at lower voltages. Steady state or standing voltages may require additional consideration.																					
<p>A) Additional resistances apply based on footwear resistance as well as contact patch, as defined in BS EN 50522, i.e. each shoe is 4kΩ and the contact patch offers 3xp, where p is the resistivity of the substrate in Ω·m. Thus for touch voltage, the series resistance offered by both feet is 2150 Ω for shoes on soil/wet concrete (effective p=100 Ω·m). For 75 mm chippings, each contact patch adds 1000 Ω to each foot, giving 2500 Ω (effective p=333 Ω·m). For 150mm chippings (and a conservative estimate for dry concrete), the total resistance is 3000 Ω (effective p = 670 Ω·m). Concrete resistivity typically will vary between 2,000-10,000 Ω·m (dry) and 30-100 Ω·m (saturated). For asphalt, an effective p =10,000 Ω·m gives 34kΩ per shoe.</p> <p>B) The ≥ 10s column is an asymptotic value which may be applied to longer fault duration. This is a fibrillation limit only; it may be prudent to apply lower limits to longer duration faults or steady state voltages sufficient to limit body current to ‘let-go’ threshold values.</p> <p>C) This assumes no contact resistance but does apply the ‘dry’ body impedance values with large contact areas. For other scenarios (e.g. salt-water wet) refer to IEC 60479-1.</p> <p>D) Dry assumes indoors. Outdoor concrete, or that buried in normally ‘wet’ areas or deep (>0.6m) below ground level should be treated in the same way as soil.</p>																					

Commented [RW1]:
No limits have been specified for continuously held currents

Group considers that C2 curve asymptotic value of 48mA acceptable for 10 seconds or greater.

IEEE 80 suggests that long term voltage should be that where current is below the threshold of let-go, since death by asphyxiation (rather than fibrillation) can occur for long durations if an individual's chest muscles contract to prevent breathing. This lower limit (approx. 10mA) reduces the touch voltage limit to around 35V on soil, or 44V on deep chippings/concrete. There is a limit of 80V in 50522 but this considers only fibrillation.

These factors are alluded to but not spelled out in footnote to tables.

461 **Table 2 – Permissible step voltages for typical fault clearance times:**

Permissible step voltages $V^{(B)}$		Fault clearance time, seconds																			
		0.1	.15	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1	1.1	1.2	1.3	1.4	1.5	2	3	5	$\geq 10^{(C)}$
Contact area	Bare feet (worst case) ^(D)	11131	9663	8357	6233	4360	2959	2100	1625	1354	1195	1101	1032	976	929	892	864	788	733	705	692
	Bare feet (with contact resistance)	22753	19763	17077	12715	8905	6044	4290	3320	2770	2434	2249	2098	1992	1897	1823	1771	1616	1503	1442	1412
	Shoes on soil or outdoor concrete	A)	A)	A)	A)	A)	A)	A)	A)	21608	19067	17571	16460	15575	14839	14267	13826	12629	11727	11250	11012
	Shoes on 75mm chippings	A)	A)	A)	A)	A)	A)	A)	A)	24906	21976	20253	18971	17951	17103	16445	15936	14557	13517	12967	12692
	Shoes on 150mm chippings or dry concrete	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	24083	22559	21347	20338	19555	18951	17311	16074	15420	15092
	Shoes on 100mm Asphalt	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)	A)
NOTES:																					
1) As for touch voltage, these limits are calculated according to fibrillation thresholds. Immobilisation or falls / involuntary movements could occur at lower voltages.																					
2) In general, compliance with touch voltage limits will achieve safe step voltages.																					
A) Limits could not be foreseeably exceeded, i.e. 25kV or greater.																					
B) Additional footwear / contact resistances appear in series (rather than parallel for the hand-foot case), and are therefore 4x those in equivalent touch potential case.																					
C) The ≥ 10 s column is an asymptotic value which may be applied to longer fault duration. This is a fibrillation limit only; it may be prudent to apply lower limits to longer duration faults or steady state voltages sufficient to limit body current to 'let-go' threshold values.																					
D) This assumes no contact resistance but does apply the 'dry' body impedance values. For wet or salt-water wet, scenarios refer to IEC 60479-1.																					

The figures above give acceptable touch and step potentials as a function of fault current duration. Note that touch and step voltages are normally a fraction of the total EPR, and therefore if the EPR (for all foreseeable fault conditions) is below the limits above then it follows that the site will be compliant. (The full design assessment procedure is given in Section 5.)

Permissible limits are a function of normal protection clearance times. Figure B2 of BS EN 50522 shows curves showing intermediate values, if required.

Touch and Step Voltages are sometimes collectively referred to as 'Safety Voltages' since they relate directly to the safety of persons or animals.

Substations shall be designed so that 'Safety Voltages' are below the limits defined in Table 1 and Table 2 above. It will be appreciated that there are particular locations in a substation where a person can be subjected to the maximum 'step' or 'touch' potential. Steep potential gradients in particular can exist around individual rod electrodes or at the corner of a meshed grid.

The presence of a surface layer of very high resistivity material provides insulation from these ground potentials and greatly reduces the associated risks. Thus substations surfaced with stone chippings/concrete or asphalt are inherently safer than those with grass surfacing, and permissible limits are higher. These relate to the 'Additional Resistance' rows in the tables above.

4.4.2 Effect of electricity on animals

The main focus of this document is human safety. However, horses and cattle are known to be particularly susceptible to potential gradients in soil. There are no safety limits prescribed for animals but technical report (IEC/TR 60479-3) provides some limited experimental data. Interpretation of this data suggests that voltage gradients (e.g. around remote electrodes or structures placed in fields) not exceeding 25 V/m will generally not result in animal fatality.

4.4.3 Injury or shock to persons and animals outside the installation

(This from S34 – probabilistic approach. Safety voltage limits for animals should be considered only where necessary)

These can be introduced by metallic transfer (fence, pipe, cable) or via the soil. Where a hazardous transferred potential can occur due to metallically conductive means, that eventuality should be removed by the introduction of insulation or other protective measures (examples include insulated sections introduced into external metal fences). Where metal fences are bonded to the substation earthing system, the touch and step potentials external to them must be controlled by the design, such that they are within the acceptable limits. In other words, most risks should be managed by design. An ideal application for risk assessment is coated type fencing (such as expanded metal) where parts of the coating may degrade over time. Where HV and LV earthing systems are combined, the EPR is transferred from the installation into domestic, commercial or industrial properties and must be at a level that complies with the requirements of section 9.5.

(We consider some research is needed to determine the threshold voltage for this from a safety perspective. At present it is 430 V – an ITU equipment limit value). [NB 466 V now introduced from 50522]

[Review once project complete]

Commented [RW2]: [WPD SS]:

This paragraph needs rewording as it refers to 'Some guidance is needed'. It would be helpful to keep the limit for transfer voltage at 430V/650V; perhaps this can be based on UK experience. Complete research/risk assessment and suitable guidance.

Issues include identification of the realistic shock scenarios in a range of property types, and the probability of this occurring and risking electrocution at a range of voltage levels. Where HV and LV systems are combined, the EPR (or part of it) will be transferred to the LV system.

For potentials transferred via the soil, the risk is related to the EPR magnitude (together with proximity of the person, animal or property to the installation), the likely presence of humans or animals and the degree/time of exposure. If the substation has an elevated EPR, obvious concerns are shock risk to humans who do not have appropriate footwear (beach-side or camping site locations) and if applicable electrocution to animals (such as a horse – especially one that is being trained/ridden at the time).

Some guidance is needed for areas of high EPR. The situation here is related to safe touch and step potentials, not equipment thresholds. For example – risk of shock in a house (similar scenario to the HV/LV bonded issue at a distribution substation), risk of shock in a field, risk of shock to a horse whilst being ridden in an adjacent field.

4.5 Electrical Requirements

4.5.1 Method of neutral earthing

The method of neutral (or 'star point') earthing strongly influences the fault current level. The earthing system shall be designed appropriate to any normal or 'alternative' neutral earthing arrangements, in a similar way that it will be necessary to consider alternative running arrangements that may affect fault levels or protection clearance times.

Note, if the system uses a tuned reactor (arc suppression coil (ASC) / Petersen coil) connected between the transformer neutral and earth, the magnitude of the current in the earthing system may be small due to the tuning of the ASC reactance against the capacitance to earth of the unfaulted phases. However, other conditions can occur that require a higher current to be considered. For instance, if the tuned reactor can be shorted out (bypassed), e.g. for maintenance or protection purposes whilst the transformer is still on load, then it is necessary to design for this (refer to sections 5.5.2 and 5.5.3). Furthermore, even if there is no alternative method of system earthing it is still necessary to consider the possibility of a neutral bushing fault on the tuned reactor effectively shorting out the tuned reactor. Such considerations also apply to all impedance earthed systems if there is a foreseeable risk of the impedance 'failing' and remaining out for any significant time.

The likelihood of phase-to-earth insulation failure is increased on ASC systems, particularly if earth faults are not automatically disconnected. This is because a first earth fault will cause phase displacement such that the two healthy phases will become at increased voltage relative to earth (approaching line-line voltage). Consideration should be given to a 'cross-country' fault where two phase-to-earth faults occur simultaneously on different phases. The current can approach phase-phase levels if the earth resistance at each fault site is minimal or if there is metallic interconnection between the sites.

4.5.2 Fault Current

BS EN 50522-1 describes the need to consider single phase to earth, two phase, and three phase to earth fault current flows, as well as 'cross country' faults in some situations.

The relevant currents for earthing design are summarised in Table 3 below. Further detail, including guidance on protection clearance times for design purposes, is given in Section 5.5.

553

Table 3 – Relevant currents for earthing design purposes:

Commented [RW3]: This table now simplified and references included to the relevant sections for more detail

Type of System Earth Supplying Fault	Relevant for thermal effects		Relevant for EPR and Safety Voltages
	Earth Electrode	Earthing Conductor	
Solid Earthing	Maximum foreseeable electrode current . This is the ground return current or value between ground return current and earth fault current , taking into account the loss of any metallic return paths (cable sheath or overhead earth wire) where relevant.	Earth fault currents for all voltage levels at the substation. Three phase (or phase-phase) faults should be considered if phase-phase fault current can flow through earthing conductor (e.g. separately earthed items of plant, particularly single phase equipment).	Worst case earth fault current Ground return current may be used if known, and if earth-return paths (e.g. cable sheaths and gland connections) are known to be reliable and rated for duty. See Section 5.5.2.
Impedance Earthing	See sections 5.5.4 and 5.6.2	See section 5.5.3.	
Arc Suppression Coil (ASC or Petersen Coil) N.B. ASCs are generally used in addition to solid or impedance earthing. It is therefore usually appropriate to design to the alternative solid or impedance arrangement which is termed the 'bypass' arrangement.	Maximum foreseeable electrode current associated with bypass running arrangements (i.e. solid or impedance earthing) as described above. In addition to the solid/impedance fault currents above, the electrode current calculation must consider cross-country faults since these are more likely on ASC systems. Solid earth-fault level should be used if there is any doubt. Furthermore, long term (steady state) current flows can cause drying of soil, and must be considered in addition to normal faults. See section 5.5.4.	Worst-case fault currents for all voltage levels at the substation, as described above for the relevant solid or impedance bypass system. See Section 5.5.3	Worst case of bypass (solid or impedance) earth fault current (as above) or cross-country fault current. Steady state currents (i.e. the maximum current that can flow in the earthing system without protection operation) may impose additional requirements on the designer. Refer to Section 5.5.2
<p>Notes:</p> <p>Fault currents associated with all voltages levels in substations must be considered. The appropriate protection clearance times for each voltage level must be applied – refer to Section 5.5.2</p>			

554

555 Refer to Sections 5.5.2 and 5.5.3, or to Table 1 in BS EN 50522-1 for further details.

556 4.5.3 Thermal effects - general

557 The earthing system shall be sized according to the maximum foreseeable current flow and
558 duration to prevent damage due to excessive temperature rise. For main items of plant in
559 substations (switchgear, transformers, VTs, CTs, surge arrestors, etc.), consideration needs
560 to be given to the possibility of simultaneous phase-earth faults on different items of plant,
561 which could result in phase-phase current flows through the MES. Refer also to Section
562 5.5.3.

563 Any current flowing into an electrode will give rise to heating at the electrode and surrounding
564 soil. If the current magnitude or duration is excessive, local soil can dry out leading to an
565 increase in the resistance of the electrode system. Section 5.6.2 defines a 'surface current
566 density' limit (in terms of Amps per cm² of electrode area). In some situations, even if target


567 resistance and design EPR values are achieved, it may be necessary to increase the
568 electrode contact surface area to ensure compliance with this requirement.

569

570 5 Design

571 5.1 General approach (flowchart)

572 The general approach is summarised in the flowchart below:

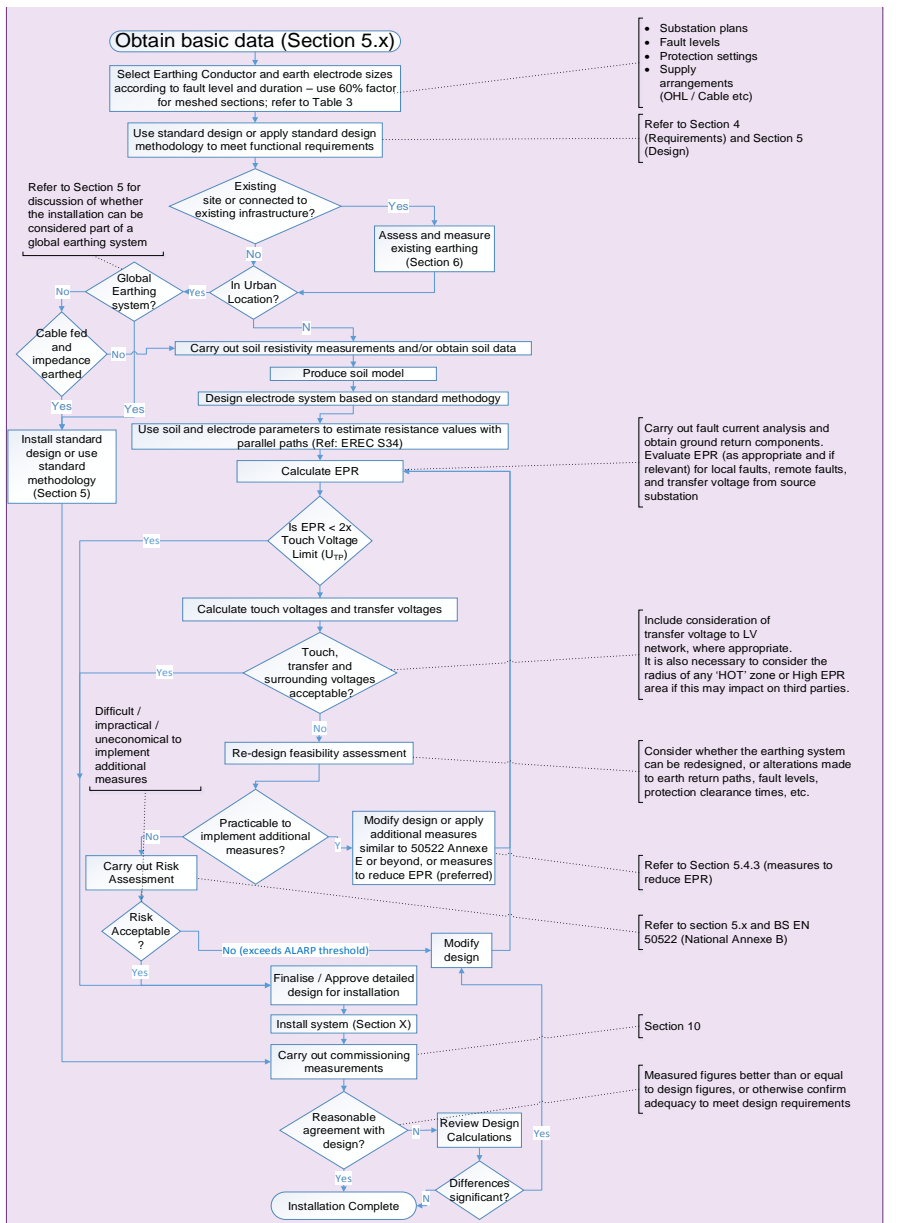

Commented [RW4]: [ROB TO DO - remove annotation and replace with references to section numbers, once these are finalised. Adjust alignment. Move to S34 when complete. NOT YET FINISHED]

5.2 Design Considerations

This section describes general arrangements applicable to all substations. Further discussion relating to those items specific to distribution substations is included in Section 10, and pole-mounted systems are further described in Section 11

5.2.1 Limiting values for EPR

The design shall comply with the safety criteria (touch, step and transfer voltages) and with the earthing conductor and earth electrode conductor current ratings, and will need to allow sufficient current flow for reliable protection operation.

There is no design requirement which directly limits the overall EPR of a substation to a particular value, however, the design will need to consider insulation withstand between different systems, and voltage contours in surrounding soil. The need to comply with these requirements, and safety limits, will naturally tend to restrict the acceptable EPR. In practice, an upper EPR limit may be applied by different network operators based on equipment specifications and/or proximity to third party systems.

5.2.2 Touch and Step voltages

Touch and Step voltages (collectively referred to as 'Safety Voltages') are the most important design criteria. A substation that fails to achieve permissible touch voltage limits will not be safe. Formulae for calculating touch and step voltages are presented in EREC S34.

5.2.3 Factors to include in calculation of EPR and Safety Voltages

For each operating voltage at a substation, two conditions of earth fault should be considered to determine the maximum value of earth electrode current. In one, the earth fault is external to the substation; here the current of concern is that returning to the neutral(s) of the transformer(s) at the substation under consideration. The other is for an earth fault in the substation; here the current of concern is now that value returning to the neutral(s) of the transformer(s) external to the substation under consideration. These currents are components of the system earth fault currents. If these return currents have available to them other conducting paths directly connected to the earthing system of the substation, for example overhead line earth-wires and cable sheaths, then the currents in these paths shall be deducted from the appropriate return current to derive the value of current passing through the earth electrode system of the substation. Evaluation of this 'ground-return' current component is described in EREC S34. See also Section 5.5.2.

5.2.4 Transfer Potential

A further factor that needs to be considered is 'transfer voltage' that may arise from a fault at the source substation(s), if there is a metallic connection (cable sheath or earth wire) between the substation earthing systems. Methods for calculating the transferred potential are described in ENA EREC S34.

A person at a remote location could theoretically receive the full (100%) EPR as a touch potential since he/she will be in contact with 'true earth'. This may be disregarded if the EPR at the source substation is known to meet the safety criteria, i.e. is within acceptable touch voltage limits. However, particular care is needed if there is a possibility of hand-hand contact between a transfer potential source, and other earthed metalwork. The possibility should be excluded by appropriate barriers (e.g. insulated glands, enclosures) or bonding. If this cannot be ensured, then lower voltage limits apply to the hand-hand shock case (refer to IEC/TS 60479-1).

Commented [RW5]: Previous discussion with group decided not to include hand-hand touch potential limits, agreed to keep as such despite SS comments which raised the issue again.

Rob W's spreadsheet has numbers which could be inserted if required.

5.3 Preliminary Arrangement and Layout

In order to determine fully the requirements for and adequacy of an earthing system it is necessary to produce a preliminary design arrangement of that earthing system. From a site layout drawing showing the location of the plant to be earthed, a preliminary design arrangement of the earthing system for the substation should be prepared, incorporating the relevant 'functions' of Section 4.1 and the relevant 'features' of Section 4.2. The particular layout arrangement will be unique to each substation but all will have some dependence on, inter alia, a combination of the factors described in Section 5.5.3, relating to fault level, fault duration, electrode current and soil type.

5.4 Design Guidelines

This Section gives an outline of those features of earthing system arrangements which have proved to be most satisfactory in practice.

5.4.1 Outdoor Substations

Except for pole mounted equipment, it is recommended that the earthing arrangement be based on a bare 'perimeter electrode' (peripheral buried horizontal earthing electrode), generally encompassing the plant items to be earthed such that the perimeter earth electrode is at least 1m out from the plant items to provide touch voltage control at arm's reach. Internal connections shall connect from the perimeter electrode to the items of plant. These internal connections function as earthing conductor if not in contact with soil, or electrode otherwise. Where reasonably practicable, the amount run above the surface shall be minimized to deter theft. In addition, discrete earth electrodes, e.g. rods or plates, may be connected to this perimeter electrode. These may variously be employed to reduce the surface current and/or the electrode resistance of the overall earth electrode system. The overall electrode system is termed the Main Earthing System (MES).

The electrode system may be augmented with inter-connected, buried, bare cross-connections to form a grid. Such cross-connections increase the quantity of earth electrode conductor and mesh density of the grid, reduce touch voltages on plant within the grid, and provide local main conductors to keep equipment connections short; in addition they increase security/resilience of connections by introducing multiple paths for fault current, which is an important consideration.

In all substations it is recommended that duplicate connections are made from the Main Earthing System (MES) to main items of plant, in order to increase resilience (refer to section 5.5.3 for conductor sizing).

Where regular contact of an operator with an earthed structure is anticipated, e.g. at a switch handle, the earthing system shall be enhanced by providing an earth mat (or, if a mat poses difficulties, appropriate grading electrode) at or just below the surface of the ground and bonded to the metalwork, so arranged that the metalwork can only be touched while standing above the mat (or enhanced area).

Pole-mounted equipment presents a particularly difficult ground potential gradient problem and the special precautions noted in Section 10 shall be observed. It may be necessary to apply these precautions in some ground-mounted substations.

Fault current flowing through an earth electrode system to ground uses the outer extremities of the electrode system to a greater extent than the inner parts of the system. Thus, adding more earth electrode, whether as vertical rods or as horizontal tape, to the inner area of a small loop or well integrated grid electrode system, will have little impact in reducing earth resistance or the current density in the outer electrode conductors of the system (however this can help to control step/touch potentials around specific items of plant).

665 Such reductions (in overall earth resistance) as may be desirable are best achieved by
666 extending the electrode system to cover a greater area of ground (e.g. by buried 'radial'
667 electrodes), or by driving rods around the periphery of the system or by a combination of
668 both.

669 The vertical rod electrode is most effective for use in small area substations or when low soil
670 resistivity strata, into which the rod can penetrate, lies beneath a layer of high soil resistivity.
671 Rods are least effective where there is a high resistivity layer beneath one of lower resistivity,
672 e.g. where underlying bedrock is near to the surface. In these locations extended horizontal
673 electrodes in the low resistivity surface layer are more effective.

674 For large area substations employing a grid electrode system, the addition of vertical rods,
675 even when optimally installed around the periphery of the system, may make only a marginal
676 improvement.

677 **5.4.2 Indoor Substations**

678 The plant of indoor substations will normally be erected on a concrete raft, often containing a
679 steel reinforcing mesh (re-bar). To control touch and step potentials around plant, it is
680 common for re-bar to be bonded to the main earthing system, or for a dedicated 'grading
681 mesh' (usually consisting of prefabricated steel or copper mesh) to be buried in concrete
682 screed in the substation area. These measures are to control potential gradients and are not
683 intended to act as an 'electrode' (they may be employed for example above basement
684 areas); dedicated electrodes will also be required to provide a connection to the mass of
685 earth and achieve the functional requirements. For new substation buildings a buried
686 peripheral horizontal electrode may be conveniently installed around the building foundation
687 and supplemented with vertical rod electrodes as required. Coordination with the civil
688 engineering design can result in a cost-effective installation.

689 Where reinforcing mesh in concrete is to function as supplementary earth electrode, it must
690 be designed to carry the current without cracking the concrete, be constructed with mesh
691 panels welded together and be welded to the peripheral buried earth electrode at suitable
692 intervals (e.g. 5 m).

693 The provision of a buried main earth bonding conductor within the confines of an existing
694 building is often impractical and thus a surface mounted main earthing conductor loop, is
695 normally installed with surface run (and duplicate) spur connections to the various items of
696 plant. The earth electrode system employed with this arrangement may differ depending on
697 the magnitude of earth fault current that the electrode system is required to carry.
698 Marshalling earth bars are sometimes used in addition to, or instead of, a surface laid loop,
699 and (if properly labelled) can facilitate measurement/maintenance. The convenience of such
700 an arrangement often brings with it a high reliance on bolted connections and so the
701 'resilience' aspect needs to be balanced with convenience.

702 Substations in buildings may require a buried loop/ring electrode outside the building if any
703 extraneous metalwork (e.g. metal cladding, steel joists, handrails, communications antennae
704 etc.) is bonded to the substation earthing system and could otherwise present a touch
705 potential issue to those outside the building. The same considerations apply where a
706 substation is installed in an existing building (for example in the basement of a tower block),
707 even if the building is not recognisable as a 'substation building'; in fact risks associated with
708 members of the public will often be higher in such installations and warrant additional
709 consideration.

710 Electrode systems (rod nests, etc.) should not be sited close to main access/egress routes
711 without consideration of step and touch voltage in these areas.

712 Grading electrode (where required) should be positioned 1 m from metal-clad buildings, and
713 bonded to the building's internal HV or EHV earthing system at two or more separate points.

714 If the building is to be provided with a lightning protection system that will be bonded to the
715 main earthing system, the LPS electrodes may contribute to potential grading. Calculations
716 and/or computer modelling will normally be necessary to demonstrate whether such
717 measures can be used in place of dedicated grading electrodes.

718 Sparsely positioned rods (e.g. associated with a lightning protection system to BS EN / IEC
719 62305-1) may serve this function if compliance can be demonstrated at the design stage.

720 A lightning protection electrode system if purposely designed with regard to power system
721 fault currents and with closely spaced rods (or interconnecting electrode ring), could serve
722 the dual purpose of lightning protection and potential grading. Care is needed to ensure that
723 such a system cannot be disconnected from the building, e.g. by removal of test links.

724 Conversely, any earthing system designed for power system fault current may be used for
725 lightning protection system if compliant with BS EN / IEC 62305-1, particularly with regard to
726 high frequency components and down-conductor routing (free of tight bends etc.)]

727 5.4.3 Shared Sites

728 Where the customer operates HV (and/or EHV) switchgear, there will be a natural boundary
729 between Network Operator's ownership, and customer ownership. Ideally the Network
730 Operator should not rely on the customer's earthing system to ensure electrical safety
731 around the Network Operator's assets, unless maintenance agreements can be made. In
732 practice, the systems may need to be connected together, but each system should (where
733 reasonably practicable) be designed to be safe (touch voltages) in the absence of any
734 (electrode) contribution from the other system.

735 Neither party should rely on the other's earthing system unless regular maintenance/testing
736 of both systems can be assured.

737 5.4.4 Distribution (or 'Secondary') Substations

738 Distribution (HV:LV) substation earthing is particularly important given that LV system
739 neutral/earth conductors may be connected to, or close to HV earthing systems and
740 consequently could export 'transfer potential' to customer installations. Specific examples for
741 ground mounted substations are given in Section 9, and pole mounted equipment is covered
742 in Section 10.

743 5.4.5 Metallic Fences

744 Substation fences are typically either a) Bonded to the MES, or b) Separately earthed. In
745 general, a bonded design will be required if 2m separation (or barriers/effective insulation)
746 cannot be established to prevent simultaneous contact (hand-hand) between the systems. A
747 separately earthed system is preferable otherwise to minimise the EPR (and resulting touch
748 voltage) that may be accessible externally.

749 In the case of bonded fences, consideration must be given to touch voltages that appear on
750 the fence under fault conditions; an external peripheral electrode may be required 1m around
751 the outside of the fence to achieve acceptable levels. Care must also be taken to ensure that
752 voltage rise is not 'exported' via third party fences etc. that may be in contact with the fence.

753 Refer to Section 6.6 for more details.

5.4.6 Provision of Maintenance/Test facilities

Facilities for Monitoring Earth System Efficiency (described in Section 6.2.5) should be included at the design stage. Refer to Section 7.5 for information on earth resistance measurements.

Test points (e.g. for clamp meter testing) should be shown on earthing drawings.

5.5 Design data

The final design of the earthing system can only be undertaken when sufficient knowledge is available of the proposed physical and electrical arrangements of the substation.

As a minimum, the designer must have knowledge of:

- 1) value of fault current
- 2) fault duration (or protection settings)
- 3) soil resistivity
- 4) substation dimensions

Any special features about the site, such as subsoil of a corrosive nature and the suitability of the site for driven earth rods or other forms of electrode, must be ascertained. Other relevant features, such as existing earth electrodes, nearby earthed structures, buried pipes or piled foundations are also required to be noted and taken into consideration.

In urban areas in particular the substation may be served by an underground cable network which (particularly if incorporating non-insulated sheaths/armours) will make a 'contribution' which may be taken into consideration. Refer to Section 9.4.3 for details on the contribution from typical 11kV networks.

5.5.1 Soil Resistivity

The value of the specific resistivity of the soil may be ascertained by reference to published data or by direct measurement. Table 4 (below) sets out typical values relating to types of soil but these should be used for very preliminary assessments only.

[Nationally available soil survey data can also be used for this purpose, e.g.

<http://mapapps.bgs.ac.uk/geologyofbritain/home.html>].

Table 4 - Typical soil resistivity values

Resistivity in $\Omega \cdot m$

SOIL	RESISTIVITY ($\Omega \cdot m$)
Loams, garden soils, etc	5 – 50
Clays	10 – 100
Chalk	30 – 100
Clay, sand and gravel mixture	40 – 250
Marsh, peat	150 – 300
Sand	250 – 500
Slates and slaty shales	300 – 3,000
Rock	1,000 – 10,000

Multi-layer soil models and computer modelling may offer more effective / optimal designs than typical or 'homogeneous' soil models. Except for some smaller substations, (where the additional expense may not be warranted), direct measurement will normally be necessary prior to detailed design. The recommended method, using the Wenner Array, is described in Section 7.4.

It should be noted that the top layers of soil may be subject to significant seasonal variation due to fluctuating moisture content. Designs should utilise deeper more 'stable' strata wherever possible; the depth of this 'stable' layer is variable depending on soil type and weather/climate.

5.5.2 Fault currents and durations for EPR and safety voltage calculations

The fault current applicable to EPR calculation (and therefore safety voltage calculations) is the maximum (symmetrical RMS) current to earth (**earth-fault current**) that the installation will see under fault conditions.

Consideration should be given to future network alterations and alternative running arrangements. A margin may be added to allow for future changes without detailed assessment (e.g. 10-20% increase). **Normal operating time** of protection relays and breakers should be used, rather than worst-case (back-up) protection clearance times.

Cable sheath or earth wire return paths should be included if they are reliable and rated for duty, in which case the resultant **Ground Return Current** may be used for design purposes. Designs should consider touch voltage that may result under various failure scenarios and for all voltage levels at a substation.

If specific protection settings are not available, the design should use 'upper bound' clearance times associated with normal protection operation, as specified by the network operator.

These considerations apply whether the source substation (i.e. that supplying the fault) is impedance or solidly earthed. EPR should be calculated for all voltage levels at any substation, for faults at the substation and on circuits fed from it ^(Note 1). LV faults can usually be shown to be insignificant in this regard.

Commented [RW6]: WPD 33: Single layer or uniform models may be incorrect with regard to touch voltage assessment and Hot Zone contour assessment.

Suggest: Multi-layer soil models and computer modelling may offer more effective / optimal/accurate designs than typical or 'homogeneous' soil models. **Note that safety voltages and voltage contours calculated using 'homogeneous' soil models may be inaccurate.** Except for...
[REJECTED – refer this to S.34]

For substations with Arc Suppression Coils (ASCs), consideration should be given to the alternative (bypass) running arrangements that may exist to allow for maintenance of the ASC etc. In general terms the relatively low **ASC limited current must not be used for design** unless the ASC installation facilitates fast and automatic disconnection of earth faults without any bypass system ^(Notes 2,3,4,5). The worst case (higher) of bypass earth-fault level and cross-country fault level shall be used for EPR and safety voltage calculations both at the substation and on circuits/substations supplied from it.

Substations (in particular those equipped with ASCs) supplying standing faults or unbalanced charging currents may be subject to a steady state EPR caused by unbalanced network charging current returning to the system neutral. The magnitude of this current should be used for 'steady state' EPR and current density (section 5.5.4) design calculations in addition to higher current, but shorter duration fault conditions described above. The touch voltages appropriate to the duration of such standing voltages shall be used as necessary (e.g. 153 V to limit fibrillation risk for long duration faults).

NOTES:

- 1) Or on in-feeds in the case of 132kV systems ~~with~~ earthed primary windings
- 2) The possibility of internal/bushing failures on an ASC (or other current limiting devices such as a resistor or reactor) should be considered. Whether to design for increased fault levels that can result from such failures is the subject of operational experience and risk assessment.
- 3) The source substation EPR and safety voltages must be calculated for all in-feeds to the substation, as well as for outgoing (feeder) faults.
- 4) The value for design purposes in such cases is the vector sum of residual earth fault current and summated ASC current ratings in the substation. Refer to EN 50522 Table 1 for more information.
- 5) Open circuit faults on neutral earthing impedances or ASCs are rare and consequently require no additional consideration in the context of earthing.

Commented [RW7]: All notes subject to further revision and group comment.

5.5.3 Fault currents and clearance times for conductor size calculations

Methods for calculating the appropriate values of fault current are included in **EREC S34**.

Conductor sizing calculations should be based on **backup** protection clearance time, i.e. the design shall allow for failure of primary protection without damage to the earthing system. In the absence of network specific data, the following operating times should be assumed, both of which may be considered to be more onerous than actual backup clearance times:

HV and EHV systems up to and including 132 kV: 3 seconds

275 kV and higher voltages: 1 second

Earthing conductors used to bond plant may be subject to higher currents than earthing electrodes used solely to provide contact with soil (e.g. which may be meshed and therefore subject to current division).

For earthing conductors and electrodes in substations it is recommended that the design fault-current value should be the worst case foreseeable value (earth fault, phase-phase, or three-phase) as described in Table 3, including that which may result from a broken or missing metallic return path (cable sheath or overhead earth wire).

The likely growth of fault current with time should be taken into consideration at the design stage, and measures put in place to ensure that the earthing system's rating is not exceeded. It may be appropriate to apply a 'growth factor' to allow for future development of the network, or to revisit/recalculate fault levels at future intervals to ensure ongoing compliance with Electricity At Work Regulations and ESQCR.

If fault levels are expected to approach the switchgear rating in the foreseeable future, the **switchgear rating may be used as the design figure**. In any case the rating of the earthing system should be reviewed if plant is to be upgraded such that higher fault levels may be possible.

For thermal/sizing design purposes, this maximum fault current includes foreseeable phase-phase current which could flow between main items of plant, if two different phase-earth faults can happen simultaneously within a substation. This relatively rare event could occur (for example) as a result of displaced phase voltages immediately following a first earth fault.

As a guide, this maximum current is relevant for earthing conductors of all HV and EHV plant (between switchgear, insulators, surge arrestors, transformers, CTs/VTs, or other plant supporting or containing phase conductors or with single phase portable earth points) within the confines of a substation.

The maximum fault current applies wherever this may be borne by one spur connection, in which case that spur must be sized accordingly. In grid (mesh) earthing designs there will often be parallel paths to share the current; if the current is to flow in two or more paths (e.g. around a ring) then each individual path shall be sized to no less than 60% of the fault current.

Installations connected to, or part of the one where the highest fault current occurs, may only be required to carry a portion of that current and the earth conductors may be sized accordingly. For example, in lower voltage areas peripheral to a higher voltage one, their earth conductors must be sized to meet the lower voltage fault current and calculations may show that they are also adequate for their proportion of the HV or EHV fault current.

5.5.4 Fault currents and clearance times for electrode size calculations

The discrete earth electrode shall at all times retain its functional properties, i.e. both its current carrying capability and its value of resistance to earth. For these reasons the temperature rise of the electrode conductor and the density of current dissipation from electrode to soil, during the passage of fault current through it, shall be limited.

The soil surrounding earth electrodes is of a much higher sensitivity than the electrode conductor material and thus the passage of current through the soil will develop, relatively, a much higher temperature rise. The effect of high temperature in the soil causes drying of the surrounding soil, thus further increasing its resistivity, or even the production of steam which can force a separation between the electrode conductor and its interfacing soil.

For this reason the current rating of an earth electrode is specified in terms of its surface current density (A/mm^2). As a consequence the current rating of buried electrodes in practical installations is very much less than equivalent sized above-ground earthing conductors (Section 5.6.2 gives typical ratings).

Where a multi-mesh buried main earth grid is installed, the density of fault current in the earth electrode should rapidly reduce as the distance from the point of fault increases. Provided, therefore, that a sufficient quantity of grid conductor is buried and is well distributed, the surface current density will generally be satisfactory and high surface temperature restricted to a small area close to the fault point and thus have negligible effect on the value of total earth electrode resistance or on the efficacy of the earthing system as a whole.

The surface area of the main electrode through which the fault current flows to ground shall, as a minimum, be sufficient to disperse the maximum foreseeable electrode current.

Electrode sizing needs to consider the maximum **electrode current**, i.e. the current that will flow in the local electrode system. The calculated **ground return current** (i.e. the total current returning to source via local and connected electrode systems) may be used for this purpose, but cross-country faults can give rise to larger electrode current.

For ASC systems, the current used for design purposes should be the cross-country fault level, or bypass (solid or impedance) ground return current if this is higher.

For design economy, it is normal practice to assess the value of **electrode current** based on the value of earth fault current corresponding to the foreseeable future, up to the plant rating, but allowing for current division.

In most cases this requirement is satisfied by normal installation practice; care is needed for systems where a small electrode system is otherwise thought to be satisfactory. The appropriate fault current, as described in this section, should be divided by the surface area of the electrode system (as [NOT] described in EREC S34) to demonstrate that the current density at the electrode-soil interface is within limits given in Section 5.6.2.

$$\text{Surface Current Density} = \frac{\text{Electrode Current}}{\text{Surface Area of Electrode}}$$

It is permitted to use the surface area of all connected electrodes (main and auxiliary) in this calculation. However, it is good design practice, wherever possible, to ensure that sufficient main electrode meets this requirement.

In some situations, the surface area of auxiliary electrodes (including metallic cable sheaths) may not be known. The analysis may be constrained to the (known) substation earthing system, in which case a factor (based on the ratio of resistances) can be applied to the Ground Return Current to represent the electrode current that will return through the substation's earthing system.

NOTE: In situations such as substations in urban areas where the overall Ground Return Current is significantly increased by interconnection to a larger network or other auxiliary electrode system, dividing this **overall ground return current** (returning via a wide area electrode system) into the **local** electrode surface area will provide a safety margin. It is permissible, for design economy, to calculate the local electrode current (i.e. by evaluation of the ground return current 'split' between the local electrode system and other paths), and dividing this resultant electrode current into the local electrode area. This approach should be used with caution, or combined with the risk assessment approach outlined in Section 5.8 as failure of auxiliary electrode connections etc. could result in overheating/failure of the local electrode system under fault conditions.

The fault current value for thermal rating of conductors is not to be used for this calculation; otherwise the installation cost and complexity will far outweigh the operational requirements. For older 'legacy' networks, or other systems where there may be increased risk of failure of the metallic earth-return path, it may be appropriate (and simpler) to use the full earth-fault current in this calculation; ultimately this decision is driven by appropriate risk assessment. If deemed appropriate, the design should withstand increased electrode currents (up to the **earth fault level**) that may result from broken or missing earth return path(s) such as a failed cable sheath / gland connection, overhead earth-wire or similar.

Backup protection clearance time should be used for all electrode sizing calculations, since primary protection may be slow to clear some earth faults (particularly with the loss of a metallic return path) and thus slow protection should not be considered as a 'second failure' in this case.

The design must take into account the worst case earth fault level that will result from maintenance or alternate running arrangements / network reconfiguration. Relatively rare faults (e.g. bushing failures or internal faults) which may cause an ASC or impedance to be shorted out should be considered if necessary, based on operational experience.

If significant ground-return current can flow for prolonged duration (i.e. without protection operation), the effect of this current should be considered separately; it can lead to drying at the electrode-soil interface and impose a steady state (or 'standing voltage') on plant which can require additional measures to ensure safety. This may be relevant for ASC systems where earth faults are not automatically disconnected, or where moderate current can return via earth to the system neutral in normal circumstances due to un-balanced capacitance or leakage. The magnitude of this current may be taken as the ASC coil rating or earth-fault protection relay current settings.

NOTE: A maximum surface current density of 40 A/m² is appropriate for long term current flows. This is unlikely to cause drying at the electrode-soil interface.

Soil and existing earthing installation data required for calculations shall be obtained in accordance with the procedures set out in Sections 5.5.1 and 5.5.3.

5.5.5 Limiting values of surface current rating calculated for some typical electrodes are given in Electrode Surface Current Density Ratings

Table 8 below shows the current rating of typical electrodes. The limiting factor tends to be heating at the electrode-soil interface, consequently the ratings are dependent on soil resistivity.

Table 8 below.

The following notes (carried from earlier table) to be deleted and incorporated into the body of the text, if necessary. Group to review:

NOTE: Faults at all voltage levels in each substation must be considered.

NOTE 2: For all thermal ratings, three scenarios should be considered – a) long term loading (normal running), b) short term overload (fault), and c) long term overload (e.g. fault on ASC system or earth leakage below trip settings).

NOTE 3: For electrode surface current density calculations – the design current should be at least the highest (forecast) calculated ground return current for the substation; in addition the electrode design must allow for realistic worst case (backup clearance time and/or failure of metallic return paths) to limit the possibility of ground drying under onerous fault conditions. The maximum steady state earth fault current should also be calculated and considered with regard to electrode surface current density, refer to Note 5 below.

NOTE 4: It may be prudent to use a design figure somewhere between the ground return current value and the ultimate earth fault or double phase-earth fault values. The value to be used is subject to risk assessment and operational experience. The maximum current flow into individual electrode groups (where there is more than one) should be assumed to be 60% of the ultimate figure used above.

NOTE 6: Foreseeable growth in fault level throughout the life of the installation should be considered, and appropriate factors applied.

NOTE 7: It is permissible to use calculated ground return currents (for all foreseeable scenarios, where stated above) if this provides some design economy.

NOTE 8: Normal (ASC) limited current or ASC current ratings must not usually be used in this assessment in order to ensure safety should the ASC be bypassed or otherwise ineffective at limiting current (e.g. cross-country fault condition, faulted bushing, etc).

NOTE 9: Phase-phase fault currents flowing through a substation's earthing system, or via soil in the form of cross-country faults are considered more likely on ASC systems due to increased phase displacement and/or fault duration, which can stress insulation following a first earth fault. If automatic disconnection of earth faults does not occur within 3 seconds, conductor sizing and electrode sizing should consider cross-country fault level if this is likely to be greater than the solid/bypass value.

NOTE 10: Reduction factors for neutral current flows (multiple earthed systems) and sheath/earth wire return currents may be applied in the normal way.

NOTE 11: If the system relies on a single aerial earth return wire (or similar) then the likelihood of failure must be considered in any risk assessment and the full earth-fault current used (instead of ground return current) if necessary.

NOTE 14: In normal circumstances, earth fault levels associated with ASC systems are relatively low. Typically, ASCs can be by-passed by solid links or reactors. If such devices are present, the design fault current (including that for the electrodes) should be that for the relevant solid or impedance earthed system described above.

- 996 NOTE 17: Switchgear ratings may be used if these define the ultimate upper limit for the substation fault levels.
- 997 NOTE 18: The consideration of phase-to-phase fault current in this context allows for two simultaneous faults which may occur e.g. as a
998 result of phase displacement. The designer may consider that phase-to-phase current is unlikely to flow through some parts of the system
999 and this may lead to some design economies.
- 1000 NOTE 19: 'Solid' earth fault level or phase-phase fault levels might be more onerous and can be applied for 'worst case' designs, if
1001 necessary to avoid the need to calculate accurate figures.
- 1002 NOTE 20: Unless suitable protection/monitoring systems are in place to reduce the likelihood of such events.
- 1003
- 1004 **5.6 Conductor and Electrode Ratings**
- 1005 The earthing system must remain intact following a protection failure, i.e. the earth
1006 conductors, electrodes and their joints must withstand the electrical and mechanical effects
1007 for the fault magnitude(s) and duration(s) as described in section 5.5.3.
- 1008 **5.6.1 Earthing Conductors**
- 1009 Earthing conductors should normally be selected from standard copper or aluminium
1010 sections; this does not exclude the use of other materials if longevity and resilience
1011 (especially to corrosion) can be demonstrated. For alkaline or acidic soils (i.e. those where
1012 the pH is greater than 10 or less than 4), or in other situations where corrosion is likely, it
1013 may be necessary to oversize electrodes, or to apply other measures to give a reasonable
1014 lifetime. Refer to BS 7430 for further details.
- 1015 Based on maximum fault clearance times, the conductor temperature should not exceed
1016 405°C for copper and 325°C for aluminium based on an initial temperature of 30°C. A lower
1017 limit of 250°C (absolute) is relevant for bolted connections, since extreme thermal cycling can
1018 lead to loosening over time.
- 1019 Table 4 and

1020 Table 5 (below) give declared current ratings for a range of standard conductor sizes for both
1021 1 second and 3 second fault duration times. The short time rating of other conductors can be
1022 calculated from formulae given in EREC S34.
1023

Table 5 - CONDUCTOR RATINGS (COPPER)

(a) 405°C maximum temperature (Copper)

These copper sizes are based on a temperature rise of 375°C occurring in 3 seconds and 1 second above an ambient temperature of 30°C (i.e. achieving a maximum temperature of 405°C) with the currents in columns (a) and (b) respectively applied to the conductors. For each substation it will be necessary to specify whether column (a) or (b) should apply.					
Fault Current (kA) Not Exceeding		Copper Strip (mm)		Stranded Copper Conductor	
(a)	(b)				
(3 secs)	(1 sec)	Single (spur) Connections	Duplicate or Loop Connections	Single (spur) Connections	Duplicate or Loop Connections
4		25 x 4	25 x 4	35mm ²	35mm ²
8		25 x 4	25 x 4	70mm ²	50mm ²
12		25 x 4	25 x 4	95mm ²	70mm ²
13.2		31.5 x 4	25 x 4	120mm ²	70mm ²
18.5		40 x 4	25 x 4	150mm ²	95mm ²
22		50 x 4	31.5 x 4		120mm ²
26.8		40 x 6.3	40 x 4		150mm ²
40		-	50 x 4		
	40	50 x 4	31.5 x 4		
	60	50 x 6.3	50 x 4		
	63				
<p>NOTE:</p> <p>Equivalent sizes for stranded conductor include, but are not limited to the following, quoted as number of strands/strand diameter:</p> <p>35mm²=19/1.53mm; 50mm²=19/1.78mm; 70mm²=19/2.14mm or 7/3.55mm(e.g. HDC); 95mm²= 37/1.78mm; 120mm²=37/2.03mm; 150mm²=37/2.25mm.</p> <p>Consideration of corrosion risk may lead to the decision to specify minimum strand diameters (e.g. 1.7mm or larger as per BS EN 502164-2). A minimum strand diameter of 3mm is preferred by some DNOs for longevity of the electrode system particularly if corrosive soils exist.</p>					

1029

(b) 250°C maximum temperature (Copper) – bolted connections

These copper sizes are based on a temperature rise not exceeding 250°C , from an ambient temperature of 30°C with the currents in columns (a) and (b) respectively applied to the conductors. For each substation it will be necessary to specify whether column (a) or (b) should apply. These figures are generally applicable to bolted connections between tapes or lugs etc. which offer a relatively small thermal mass.					
Fault Current (kA) Not Exceeding		Copper Strip (mm)		Stranded Copper Conductor	
(a)	(b)				
(3 secs)	(1 sec)	Single (spur) Connections	Duplicate or Loop Connections	Single (spur) Connections	Duplicate or Loop Connections
4		25 x 4		50mm ²	35mm ²
8		25 x 4		95mm ²	50mm ²
12		25 x 6		120mm ²	95mm ²
13.2		25 x 6		150mm ²	95mm ²
18.5		38 x 5		185mm ²	120mm ²
22		40 x 6			150mm ²
26.8		50 x 6			185mm ²
40		-	40 x 6		
	40	40 x 6	50 x 3		
	60	-	50 x 6		
	63	-	50 x 6		
<p>NOTE:</p> <p>Equivalent sizes for stranded conductor include, but are not limited to the following, quoted as number of strands/strand diameter:</p> <p>35mm²=19/1.53mm; 50mm²=19/1.78mm; 70mm²=19/2.14mm or 7/3.55mm(e.g. HDC); 95mm²= 37/1.78mm; 120mm²=37/2.03mm; 150mm²=37/2.25mm.</p> <p>Consideration of corrosion risk may lead to the decision to specify minimum strand diameters (e.g. 1.7mm or larger as per BS EN 502164-2). A minimum strand diameter of 3mm is preferred by some DNOs for longevity of the electrode system particularly if corrosive soils exist.</p>					

1030

1031

1032

Table 6 - CONDUCTOR RATINGS (ALUMINIUM)

(a) 325°C maximum temperature (Aluminium)

These aluminium sizes are based on a temperature rise of 295°C occurring in 3 seconds and 1 second above an ambient temperature of 30°C with the currents in columns 1(a) and 1(b) respectively applied to the conductors. For each substation it will be necessary to specify whether column 1(a) and 1(b) should apply.					
Fault Current (kA) Not Exceeding		Aluminium Strip (mm)		Stranded Aluminium Conductor (mm)	
(a)	(b)				
(3 secs)	(1 sec)	Single (spur) Connections	* Duplicate or Loop Connections	Single (spur) Connections	Duplicate or Loop Connections
4		20 x 4	20 x 2.5	70mm ²	35mm ²
7.5		25 x 4	20 x 4	120mm ²	70mm ²
12		40 x 4	25 x 4		120mm ²
13.2		50 x 4	25 x 4		120mm ²
18.5		40 x 6	40 x 4		150mm ²
22		50 x 6	50 x 4		
26.8		60 x 6	40 x 6		
40		60 x 6	50 x 6		
	40	50 x 6	50 x 4		
	60	80 x 6	50 x 6		
<p>NOTE:</p> <p>Equivalent sizes for stranded conductor include, but are not limited to the following, quoted as number of strands/strand diameter:</p> <p>35mm²=19/1.53mm; 50mm²=19/1.78mm; 70mm²=19/2.14mm or 7/3.55mm; 95mm²= 37/1.78mm; 120mm²=37/2.03mm; 150mm²=37/2.25mm.</p>					

1039

1040

(b) 250°C maximum temperature (Aluminium) – bolted connections

These aluminium sizes are based on a temperature rise not exceeding 250°C in 3 seconds and 1 second from an ambient (initial) temperature of 30°C with the currents in columns 1(a) and 1(b) respectively applied to the conductors. For each substation it will be necessary to specify whether column 1(a) and 1(b) should apply. These figures are generally applicable to bolted connections between tapes or lugs etc. which offer a relatively small thermal mass.					
Fault Current (kA) Not Exceeding		Aluminium Strip (mm)		Stranded Aluminium Conductor (mm)	
(a)	(b)				
(3 secs)	(1 sec)	Single (spur) Connections	* Duplicate or Loop Connections	Single (spur) Connections	Duplicate or Loop Connections
4		20 x 4	20 x 2.5	70mm ²	50mm ²
7.5		25 x 5	25 x 3	120mm ²	70mm ²
12		50 x 4	25 x 5	185mm ²	120mm ²
13.2		50 x 4	25 x 5		120mm ²
18.5		50 x 6	50 x 4		185mm ²
22		60 x 6	50 x 4		
26.8		-	40 x 6		
40		-	60 x 6		
	40	60 x 6	40 x 6		
	60	-	60 x 6		
<p>NOTE:</p> <p>Equivalent sizes for stranded conductor include, but are not limited to the following, quoted as number of strands/strand diameter:</p> <p>35mm²=19/1.53mm; 50mm²=19/1.78mm; 70mm²=19/2.14mm or 7/3.55mm; 95mm²= 37/1.78mm; 120mm²=37/2.03mm; 150mm²=37/2.25mm.</p> <p>Duplicate or loop connections have been rated to carry 60 per cent of the full fault current.</p>					

1041

1042

1043 **Table 7 - Cross sectional areas for steel structures carrying fault current**

These sizes are based on the maximum temperature achieved after the passage of fault current for 3 seconds and 1 second from an ambient (initial) temperature of 30°C. For each substation it will be necessary to specify whether column 1(a) or 1(b) should apply.			
Fault Current (kA) Not Exceeding		250°C (applicable to bolted structures)	400°C (applicable to welded/continuous structures which are galvanised)
(a)	(b)		
(3 secs)	(1 sec)	mm ²	mm ²
4		109	91
7.5		204	171
12		327	273
13.2		359	301
18.5		503	421
22		599	501
26.8		729	610
40		1087	910
	40	628	525
	60	942	789

1044
1045
1046

5.6.2 Electrode Surface Current Density Ratings

Table 8 below shows the current rating of typical electrodes. The limiting factor tends to be heating at the electrode-soil interface, consequently the ratings are dependent on soil resistivity.

Table 8 - MAXIMUM CURRENT RATING OF TYPICAL ROD, TAPE AND PLATE ELECTRODES

Soil Resistivity $\Omega \cdot m$	3 – Second Current Rating				1 - Second Current Rating			
	Rod 16mm Dia. A (per metre length)	Plate 915 x 915mm A	Plate 1220 x 1220mm A	25 x 4 mm tape	Rod 16mm Dia. A (per metre length)	Plate 915 x 915mm A	Plate 1220 x 1220mm A	25 x 4 mm tape
10	69.7	2322	3135	80.3	120.7	4022	6979	138.9
30	40.2	1340	2217	46.4	69.7	2322	4128	80.3
40	34.9	1161	1568	40.1	60.4	2011	3575	69.3
50	31.2	1038	1402	35.9	54	1799	3197	61.7
60	28.4	948	1280	32.7	49.3	1642	2919	56.8
70	26.3	878	1185	30.3	45.6	1520	2702	52.6
80	24.6	821	1108	28.3	42.7	1422	2528	49.2
100	22	734	991	25.4	38.2	1272	2261	44
150	18	600	810	20.7	31.2	1038	1846	35.9
200	15.6	519	701	17.9	27	899	1599	31.2
250	13.9	464	627	16	24.1	804	1430	27.8
300	12.7	424	572	14.6	22	734	1305	25.4

In most practical installations the actual values of surface current density will be considerably less than the above limiting values, due to the quantity of bare buried conductor (electrode) employed in the installation to provide effective bonding and in some installations where extra electrodes have been added, to comply with the touch potential limits. Further detail is given in EREC S34; note that this current density limit is independent on electrode material, and therefore the limits can be applied to rebar/piling/other 'fortuitous' or auxiliary electrodes, providing that temperature rise in these structures under fault conditions will not cause issues such as cracking/distortion etc.

1062 Where an electrode is encased in a material such as concrete, or material/agent other than
1063 surrounding soil, the surface area calculation should be carried out at the electrode-material
1064 interface, using the surface area of the metallic electrode itself and the properties of the
1065 'agent'. In some cases it will also be necessary to carry out a similar calculation at the
1066 interface of the 'agent' with surrounding soil, noting that the larger surface area offered by the
1067 agent will apply.

1068 A well designed earthing system should provide sufficient surface area to satisfy this
1069 requirement without reliance on rebar or other fortuitous / auxiliary electrodes.

5.7 Design Assessment

The assessment procedure outlined in 5.7.1 begins with an approximation which, if furnishing satisfactory results, avoids the need for a more detailed assessment. If the results of this approximate assessment indicate that the safety criteria could be exceeded or the rise of earth potential is considered to be excessive, then the more refined assessment should be employed.

When an entirely theoretical approach is used for assessing the design of an earthing system, doubts on the reliability of the result may arise due to uncertainties as to the correct value of soil resistivity to be used or of the effects that other buried structures may have. In these circumstances recourse may have to be had to direct measurement to obtain a more reliable result.

Recommended methods of measurement are given in Section 7.5. On the basis that the earth electrode system will not yet be installed, measurement may be made on representative test electrodes and the results extrapolated to the intended final design. Measurement may be delayed until a sufficiently representative part of the intended system is installed to obtain a better prediction of any improvements necessary. In any event a final check measurement of the completed installation is recommended prior to energisation.

5.7.1 Assessment Procedure

An approximate assessment considers both the internal and external earth fault conditions as explained above but disregards any contribution that external electrodes, e.g. overhead line earth-wires or cable sheaths, may have. An approximate assessment may be all that is required in many cases providing compliance with the safety criteria is demonstrated.

By reference to the flowchart above:

- 1) Establish the soil resistivity (by measurement or enquiry)
- 2) Estimate the resistance of the site electrode system (using computer modelling or calculations as detailed in **EREC S34**).
- 3) Obtain the worst-case fault current flowing through the electrode system, disregarding the effect of 'fortuitous' electrode systems or cable sheath/earthwire return paths.
- 4) Estimate the EPR, which is the product of resistance (point 2 above) and current (point 3).
- 5) If the value derived in (4) above does not exceed 2x the permissible 'touch' potential then no further assessment needs to be done. The finalised design of the earthing system may be prepared taking into account the earthing and electrode conductor ratings.

If the value derived under (4) above exceeds the appropriate safety voltages by a factor of 2 or more, then a more refined assessment shall be made as detailed below.

- 6) Determine the soil resistivity by measurement.
- 7) Estimate the value of the substation earth electrode system resistance, including the contributions made by any overhead earthwires and/or earthed cable sheaths radiating from the site using the preliminary design assessment layout and the data provided in **EREC S34**.
- 8) Obtain the appropriate total values of system earth fault current for both an internal and external earth fault and deduce the greater value of the two following quantities

1113 of earth fault current passing through the earth electrode system. Refer to EREC S34
1114 for guidance on this evaluation.
1115 9) For an internal fault, establish the total fault current less that returning to any local
1116 transformer neutrals and that returning as induced current in any earthwire or cable
1117 sheath/armour.
1118 10) For an external fault, that returning to local transformers less that returning as
1119 induced current in any earthwire or cable sheath/armour.
1120 11) Estimate the rise of earth potential (EPR) based on the product of items (7) and (9) or
1121 (10) above, whichever is the greater.
1122 12) If the EPR value derived under (11) above exceeds 2x the appropriate touch or step
1123 voltages, an assessment covering touch, step, and transfer potentials shall be made.
1124 The design should consider LV, telecoms, and remote systems where relevant (ref:
1125 EREC S34 Section XXX)
1126 13) If the earthing system is safe against 'touch' potential it will almost always be safe
1127 against 'step' potential*, although special consideration may be needed in certain
1128 situations such as wet areas, livestock, etc.

1129 Reference should be made to EREC S34 for equations giving ground surface potential
1130 contours; the touch potential is the difference between EPR and ground surface potential up
1131 to 1m from plant / bonded items. Computer modelling may be necessary for complex
1132 systems.

1133 Depending on the results of the evaluation, further improvements in the design of the earth
1134 electrode system may be necessary until the appropriate safety criteria for touch, step and
1135 transfer potentials are met and any necessary isolation or additional insulation is provided to
1136 avoid contact with transferred potentials which exceed the appropriate safety limit.

1137 5.7.2 Methods to improve design (Mitigation measures)

1138 Following assessment, if the safety criteria are not met, the designer shall consider ways to
1139 either a) reduce overall EPR, or b) reduce the step/touch voltages.

1140 5.7.2.1 EPR reduction

1141 As described in 4.4.1, there is no specified limit to the rise of earth potential of the substation
1142 and the ultimate design limit is dependent on a number of factors. However, improvements
1143 may sometimes be justified to lower this value by reducing the value of the earth electrode
1144 resistance. If, for example, the surface potential outside the substation exceeds that which is
1145 acceptable to third parties in that area (e.g. telecoms or pipeline operators), then lowering the
1146 earth electrode resistance (and consequent EPR) may be considered.

1147 Reduction of earth resistance by extending electrode area may increase transfer potential
1148 onto third party metallic services and this must be considered in the design. Note that it may
1149 be cheaper and more practical instead to protect the other authorities' plant by isolation or
1150 additional insulation.

1151 EPR (arising from local faults) can generally be reduced by one or more of: a) earth
1152 resistance reduction, b) fault level reduction, or c) reducing the ground return component.

1153 a) Is probably more practical to achieve by installation of additional electrode.

* As stated in BS EN 50522-1: As a general rule meeting the touch voltage requirements satisfies the step voltage requirements, because the tolerable step voltage limits are much higher than touch voltage limits due to the different current path through the body.

b) Can be achieved by impedance earthing (section 4.5.1), or changes to running arrangements, or possibly more accurate calculation of earth fault level including earth resistance values (which may be of benefit in marginal situations).

c) Can be achieved by lower impedance metallic return paths (e.g. enhanced cable sheaths or earth-wires, or undergrounding a section of overhead line to make a complete cable circuit).

An excessive EPR arising from transfer voltage, e.g. carried along the cable sheath from the source substation, can be reduced by lowering earth resistance as a) above, or by introducing a sheath break into the cable (e.g. by using an insulated gland or un-earthed overhead line section); special care is required in such circumstances to ensure that an individual cannot contact two earthing systems simultaneously. There may be other considerations which make a sheath break unacceptable or ineffective in some circumstances. Alternatively, measures could be employed to lower the EPR at the source substation. In any case, the design must be re-assessed to consider these revised arrangements.

5.7.2.2 Touch Voltage reduction

If reduction of EPR is not practicable or economic, touch voltage can be reduced by adopting measures to equalise potential between an operator's hands and feet; generally these measures involve additional bonded grading electrode or mesh under the operator's position, or insulated platforms.

Equations are provided in **EREC S34** which give simple touch voltage calculations.

The touch and step voltages must be re-calculated or re-modelled following any changes to the electrode layout. The touch voltages appearing on external parts of a substation (fences/doors/substations) must also be considered as these could cause issues for members of public.

In some circumstances, asphalt (tarmac) or similar ground coverings may be used to justify an increase in the permissible limits so that the touch voltages are acceptable (see Section 4.4.1). Protection enhancement (faster fault clearance) may be also explored in similar circumstances, since permissible limits for touch/step voltage are higher if faster fault clearance times can be achieved. These two measures should not be considered an alternative to a properly designed earthing system and should be used only as a last resort, or in conjunction with the risk assessment approach outlined below.

5.8 Risk Assessment

[park for now]

[include worked examples here]

In some situations it may not be possible to achieve compliance with permissible safety voltages, but (for example) in unmanned locations with restricted access, it may be deemed to be an acceptably low risk. A risk-based approach needs to consider the statistical probability of injury occurring, and to weigh this against the cost needed to mitigate against that risk.

1197

1198 Consideration Needed of: ESQCR Part(II) 8.2b – Gen or Dist shall ensure that.... installed in
1199 a manner to prevent danger occurring in LV network as result of fault on HV....

1200

1201 [Make clear that Risk Assessment is a last resort – refer to flow chart].

1202

1203 [Refer to BS EN 50522:2010 National Annex NB]

1204

1205 [From new S34: *"It can be extremely expensive to control the risks of damage, shock or*
1206 *electrocution to levels that are risk free. It is recognised in new standards that risks must be*
1207 *accepted in order to provide electrical infrastructure to society. As set out in BS EN 50522,*
1208 *risk assessment is one of the acceptable tools for analysis of situations where the cost of*
1209 *removing an identified risk appears to be disproportionately high."*]

1210

6 Construction of Earthing Systems

6.1 General Design Philosophy

Above ground connections may use copper or aluminium conductors. Metal structures may be used to provide connections between equipment and the earth grid where appropriate.

Below ground earth grids will normally be installed using copper conductor.

When designing and installing both above and below ground earthing installations the risk of theft and corrosion must be considered and mitigation measures put in place where necessary.

6.1.1 Materials

- The use of copper earthing conductor is preferable due to its electrical and material properties.
- Copper tape and (hard drawn) stranded copper conductor (min strand diameter 2mm) may be used as buried electrode.
- Bare aluminium or copper rope (fine braided) conductors must not be used underground in any circumstances due to risk of accelerated corrosion.
- Aluminium (which is less prone to theft) may be used at least 150mm above ground.
- Galvanised steel may be used as supplementary electrode where it is already installed for other reasons. Consideration should be given to the risk of corrosion over the lifetime of the installation. [Galvanised steel has an electropotential different to that of copper and can erode quickly if connected to a system which has copper electrodes]
- In very hostile environments it may occasionally be necessary to use more resilient materials such as stainless steel.

6.1.2 Avoiding Theft

At the design stage all exposed copper electrode should be reduced to a minimum. On new installations above ground exposed copper and aluminium sections should be fixed using anti-theft fixing techniques. See Section 6.3.1 for conductor fixing detail.

At new and existing high risk sites the use of additional anti-theft precautions must be considered.

Precautions above ground may include:

- application of anti-climb paint on above ground sections and / or above ground copper may be painted to look like aluminium or galvanised steel;
- fitting galvanised steel anti-theft capping over the conductor to a height of at least 3 m or the equipment position;
- fitting steel banding around structures and pinning the fixings;
- stamping copper tape electrode with the owner's name;
- earth connections to such items as metal cladding, metal structures, metal door frames or any other metallic panels should be made inside buildings;
- additional site security precautions such as the application of alarms, electric perimeter fences, CCTV etc.;
- use of forensic traceable liquids;
- avoiding yellow/green insulated coverings (use e.g. grey instead).

Precautions below ground may include:

- placing concrete or concrete anchor blocks over buried electrode;
- attaching earth rods every few metres to prevent removal of electrode;

Commented [RW8]: Chosen as consistent with 50522, group to consider also 'Installation' or 'Practical applications' etc

- 1257 • pinning electrode at least every 300 mm where it is installed in concrete trench work or
- 1258 over concrete plinths;
- 1259 • laying electrode in conductive concrete or similar materials.

1260 Earthing conductors located in pre-formed concrete trenches (or similar) containing power
1261 and/or multicore cables should be fixed to the walls near the top (e.g. 100mm from the top).
1262 Where possible they should be concealed or otherwise protected against theft.

1263 **6.2 Jointing Conductors and Equipment Connections**

1264 **6.2.1 General**

1265 Exothermic welded, brazed and compression type joints are acceptable above and below
1266 ground.

1267 Bolted joints are only permissible above ground. For replacement work following theft this
1268 may not be initially practical but any temporary bolted underground joints must be replaced to
1269 make the repairs permanent.

1270 For connections made to equipment welded joints may be possible, but in the majority of
1271 cases, bolted joints will be necessary. The provision of bolted earth connections on
1272 equipment needs special consideration to achieve a low resistance arrangement which can
1273 withstand the maximum earth fault current without deterioration. Purpose designed
1274 connections should preferably be provided by the equipment manufacturer.

1275 Bolted connections should preferably be of the double bolt / double hole lug fixing type,
1276 however this generally requires drillings to be provided at the equipment procurement stage.
1277 Where single bolt / single hole lug fixings are provided the application of a washer and
1278 second (lock) nut provides extra security.

1279 With aluminium conductors in particular surface preparation is critical to achieving
1280 connections with ongoing low resistance.

1281 Nuts, bolts and washers are to be of high tensile stainless steel or galvanised steel, except
1282 for transition washers used for joining dissimilar metals.

1283 **6.2.2 Transition washers**

1284 A transition washer may be used to minimise corrosion when joining dissimilar metals with a
1285 bolted connection. Transition washers designed for copper-aluminium joints shall be surface
1286 penetrating, grease protected washers manufactured from corrosion resistant copper alloy to
1287 BS2874 (grade CZ121). They are designed to provide a stable corrosion resistant interface
1288 between aluminium and copper or tinned copper, and are usually provided as a pack
1289 including appropriate matched nuts, bolts and washers.

1290 Different transition washers may be required for connections from copper to galvanised
1291 metal.

1292 Transition washers tend not to be widely used for connections between aluminium and zinc
1293 coated (galvanised) steel, because zinc and aluminium are very close in the galvanic series.
1294 Such connections are likely to corrode however once the zinc coating has been lost, and
1295 therefore precautions should be taken to exclude moisture by use of an appropriate grease
1296 or paint applied after the joint is made.

1297 All bolted joints should be painted with two coats of bitumen paint, where practicable, as an
1298 aid to preventing corrosion.

6.2.3 Copper to Copper Connections

Tape to tape connections must be brazed or exothermically welded.

Stranded to stranded connections must be exothermically welded or joined using compression joints.

Stranded to tape connections must be exothermically welded or a lug must be compressed onto the stranded conductor, which for underground use is bolted and then brazed or welded onto the copper tape. For above ground purposes, the lug may be bolted to the tape but should preferably have a double bolt fitting.

Soft soldered joints (e.g. lead-tin or lead free solder) shall not be used.

6.2.4 Copper to Earth Rods

Connections must be brazed or exothermically welded. Bolting and U-bolts are not acceptable. [Except for smaller distribution substations where hot works may not be practicable].

6.2.5 Electrode Test Points

Electrode test points may be required either at the rod top for long single rods or inline between a rod group and the main earthing system. To allow individual rod resistance values to be tested with a clip-on meter and facilitate electrode tracing all test points should be suitably constructed to allow the test clamp to fit and to avoid corrosion.

Test links are not recommended, but where installed special procedures must be adopted to avoid inadvertent disconnection and to permit safe management/testing techniques.

A test point associated with pile cap connections is useful but only if the design of the rebar is electrically separated from the rest of the site. At most sites the rebar will be connected together and while this provides an excellent earth, testing the individual pile cap earths is impossible. In these cases separate earth pins should have been provided in the design perhaps for high frequency and/or lightning protection which will allow testing between individual earth rods and the main earth grid.

6.2.6 Copper to Equipment (Steel, or Galvanised Steel) Connections

Connections should, wherever possible, be in the vertical plane. Remove paint from the metal at joint position on the equipment earth, sand metal smooth and apply neutral jointing compound. Drill the copper tape to accommodate the bolts (normal diameter is 10 mm) and then tin the complete contact area. The bolt holes must be less than one-third the width of the tape. Failing this a copper flag must be jointed to the copper tape and the holes drilled into this. A two bolt fixing is preferred, unless a suitably rated fixing is provided by the manufacturer. Copper joint surfaces, once drilled should be cleaned using aluminium oxide cloth (grade 80). Copper is tinned at all bolted connections; the tinning needs to be thin, and should not exceed an average of 0.5 mm, otherwise it will 'flow' from bolted sections under pressure. Neutral jointing compound is then to be applied to the joint faces.

The same procedure should be used when joining to galvanised steel, in which case the zinc coating shall be removed from the joint faces.

6.2.7 Aluminium to Equipment Connections

Aluminium conductor connections to equipment should, where possible be in the vertical plane. In all cases joints must be made in accordance with Section 6.2.6 above. However,

the aluminium tape should not be tinned, and appropriate transition washers should be used at the aluminium to steel interface.

6.2.8 Aluminium to Aluminium Connections

The preferred method is either inert-gas tungsten-arc (TIG) or inert-gas metal arc (MIG) welding provided that the area of the welded material at least matches that of the tape cross section. Bolted joints are acceptable since aluminium is only used above ground.

For bolted joints the following applies:

- All joints require a two bolt fixing.
- Bolts must be high tensile galvanised steel, fitted with large diameter galvanised steel washers, or (optionally), transition washers designed to penetrate the aluminium oxide coating.
- The surface aluminium must be cleaned using grade 80 aluminium oxide cloth or equivalent and coated with neutral compound grease. This may not be necessary if a transition washer is used, in which case manufacturer's guidance should be followed.
- Bolts must be tightened using a torque wrench, to avoid over stressing in accordance with Table 9 below. It is important not to compress aluminium connectors by excessive tightening, as loss of 'elasticity' by plastic deformation can result in loosening of the connection when subject to thermal cycling.
- All excess grease must be wiped off the finished joint.
- The joint must be sealed with two coats of bitumastic paint or equivalent.

Commented [C9]: Grade 80 aluminium cloth or equivalent specified from previous electricity industry tests as it creates the optimum surface conditions for forming aluminium connections. Use has been carried forward into NG instructions.

Table 9 – Bolt sizes and torques for use on aluminium

Dimensions in millimetres

Bar Width	Bar Overlap	Bolt Diameter	Hole Size	Recommended Torque (Nm)	Washer Size	Washer Thickness
40	80	10	12	35	OD 25 ID 11	2.5
60	100	12	14	50	OD 28 ID 12.5	3.0

6.2.9 Aluminium to Copper Connections

Connections are to be in the vertical plane, at least 150mm above the ground or concrete plinth. They must be located in positions where water cannot gather and the aluminium will be above the copper. Bimetallic joints must not be made on buried sections of electrode.

All connections involving dissimilar metals must be cleaned with abrasive cloth and coated with neutral compound grease, before making a bolted connection. Copper must be pre-tinned. The finished joint should be sealed using bitumastic paint, compound, water proof tape or a heat shrink tube filled with neutral grease. A transition washer [section 6.2.2] may be used to minimise corrosion at bolted joints.

Where joints have been made closer to ground level than 150 mm (usually following theft), a corrosion risk assessment is necessary. If the ground is well drained and there is little

1376 chance of water being retained around the joint then the above arrangement is acceptable. If
1377 not then the copper must be extended upwards to reduce risk of corrosion.

1378 **6.2.10 Earthing Connections to Aluminium Structures**

1379 The following procedures are necessary to ensure that aluminium structures used to support
1380 substation equipment do not corrode:

1381 (i) The bottom surface of the structure base and the top surface where galvanised
1382 steel or other equipment is to be fitted, must be painted with two coats of
1383 bitumastic paint, prior to bolting into position on the concrete plinth. (Note - this
1384 reduces the possibility of bimetallic action which would corrode the aluminium). A
1385 conducting strap is required between any steel of the top level equipment support
1386 and the aluminium structure.

1387 (ii) Provision should be made for connecting below ground conductor to the structure
1388 via a suitable drilling and bi metallic connection (ref. 6.2.9).

1389 (iii) Except for fault throwers and high frequency earths (capacitor voltage
1390 transformers and surge arresters) the aluminium structure leg(s) may be used to
1391 provide earth continuity down to the connection to the main earth grid. The
1392 following is also necessary:

1393 Any bolted sections of the structure that may be subject to bimetallic corrosion, and/or may
1394 be of insufficient cross section, should be bridged using aluminium earth tape. The bridged
1395 joint must be made as any other aluminium to aluminium earth connection. Totally tinned
1396 copper straps can be used if necessary on connections to insulator supports from the
1397 aluminium. The copper and completed connection must be painted to prevent moisture
1398 ingress and corrosion.

1399 The aluminium structure must be connected to the main substation earth grid, using copper
1400 tape that is tinned at the joint position.

1401 Where the legs of the support structure are greater than two metres apart or the structure
1402 forms a bolted TT (or goalpost type) formation, an earth connection must be made on two
1403 legs of the structure.

1404 **6.2.11 Steel Structures**

1405 Steel structure legs should be used wherever practicable to provide the connection between
1406 the earth grid and equipment at the top, except for fault throwers and earth switches. For
1407 equipment requiring high frequency earths (e.g. capacitor voltage transformers and surge
1408 arresters), refer to section 6.14.

1409 Ideally the structure should be of the welded type or have one or more legs formed with a
1410 continuous section from ground to equipment level.

1411 If a steel structure is used to convey fault current, it must be reliable, and of sufficient current
1412 carrying capacity to avoid excessive temperature rise. If there is reliance on a single joint or
1413 leg, bolted shunts shall be considered. Where bolted shunts are used, the temperature rise
1414 of bolted connections shall be limited to 250 °C. Refer to Section 0.

1415 Joints should be reliable. Galvanising (zinc coating) of the steel forms an oxide which
1416 increases in thickness with age and could create a high resistance at steel - steel joint
1417 surfaces.

1418 Where aluminium tape is connected to a galvanised steel structure a transition washer is not
1419 required, however adequate preparation of the joint surfaces, and protection from water

1420 ingress is required in accordance with normal best practice. Refer to Section 6.2 for more
1421 detail of jointing practices.

1422

1423 **6.3 Above Ground Earthing Installations**

1424 **6.3.1 Fixing Above Ground Conductor to Supports**

1425 Previous standards required that above ground copper or aluminium tape was fixed to
1426 structures at 1m intervals using cleats. This is acceptable from a technical prospective;
1427 unfortunately the cleats used provide a convenient way for the above ground conductor to be
1428 stolen.

1429 To prevent theft, the following methods of fixing shall be used:

1430 Pinning at least every 300 mm for higher security using stainless steel pins. (The pins should
1431 have plastic spacers to separate the pin from the conductor and in the case of aluminium,
1432 plastic spacers to separate the aluminium from galvanised steelwork).

1433 Drilling and screwing with tamper proof screw heads. This method is more appropriate if the
1434 concrete support may be damaged by use of percussion driven pins. Again a plastic spacer
1435 is required to separate the screw from the metal. The screws should be stainless steel.

1436 It is important that the pins or screws are fitted such that water cannot gather and cause
1437 corrosion. Aluminium should preferably not be in direct contact with concrete, so if
1438 practicable, the back of the conductor should be coated with a high temperature aluminium
1439 grease or other heat-proof coating to prevent this.

1440 Consideration must be given to the reduction of conductor cross sectional area and current
1441 carrying capability due to drilling. Any holes introduced into the earth conductor should not
1442 exceed 10mm in diameter and one third of the width.

1443 Note that the design final temperature of a bolted connection is 250 °C, compared to that of
1444 405°C (copper) and 325°C (aluminium). Consequently earthing conductors with bolted
1445 connections have a rating that is between 80% and 90% of their normal value.

1446 **6.3.2 Prevention of Corrosion of Above Ground Conductors**

1447 Copper strip conductor supported from or in contact with galvanised steel should either be
1448 tinned or coated in a high temperature grease to prevent electrolytic action.

1449 Unless it is protected, aluminium earthing conductor should not be laid within 150 mm of
1450 ground level.

1451 **6.3.3 Metal Trench Covers**

1452 Within substation buildings, trench covers need to be indirectly earthed. This is best achieved
1453 by installing a copper strip (25mm x 3mm) along one edge of the trench top edge. The
1454 covers will be in contact with this when in position. The copper strip should be bonded to the
1455 switchgear earth bar or internal earthing system.

1456 [Feedback awaited re: Computer flooring / suspended flooring]

Commented [RW10]: Don't think this is correct? Al electropotential similar to that of Zn, but Cu and Zn should be separated?

6.3.4 Loops for Portable Earth Connections

Earth loops of aluminium or copper strip conductor connected to the structure earth connection, must be provided at appropriate locations where portable earth leads need to be applied. The loops, if not provided as part of the structure shall preferably be formed separately and jointed to the aluminium or copper tape. Recommended size should be not less than 230 mm long and 75 mm high.

Loops must not be installed in the run of high frequency earths associated with CVTs and surge arrestors since these will introduce a high impedance to high frequency/steep fronted surges. A loop for portable earths may be added in parallel to the straight earthing conductor rather than as a loop formed in the earthing conductor itself. 'D' loops should only be installed on fully rated conductors.

6.4 Below Ground Earthing Installations

6.4.1 Installation of Buried Electrode within a Substation

The electrode must be installed at least 600 mm deep. This gives physical protection to the electrode and connections. It also tends to place the electrode in moist soil below the frost line so helping ensure its resistance is stable. The resistivity of ice is in the region 10,000 to 100,000 Ohm.m (e.g. compared with 10-1000 Ohm.m for most soils), therefore an earthing system's resistance will increase significantly if it is not clear of frost.

Buried earth electrode should be surrounded by 150 mm of fine texture non-corrosive soil, firmly consolidated. The use of pulverised fuel ash (PFA) or coke breeze as backfill is not recommended as it may induce rapid corrosion of buried electrode and metallic cable sheaths. Where there is a risk of corrosion, the electrode size may need to be increased.

If the indigenous soil is hostile to copper, i.e. acidic with a pH value of less than 6 or alkaline with a pH value of more than 10, suitable surrounding soil should be imported. However, if groundwater is present (which may serve to remove the imported soil) then other methods may be necessary to protect the electrode. More regular testing or inspection may be required.

When laying stranded conductor, care should be taken to avoid distorting and opening the individual strands, because this increases the probability of accelerated corrosion.


6.4.2 Positioning of Buried Electrode

The laying of earth electrode close and parallel to hessian served power cables, multicore cables, or bare metal pipes, is to be avoided. This is to reduce the risk of them being punctured due to high currents or voltage transients on the electrode.

Electrode must be at laid at least 300 mm away from hessian served power cables and bare metal pipes and 150 mm away from plastic sheathed cables. Where a crossing is necessary, PVC tape or a split plastic duct must be applied around the cable or pipe for 0.5 m either side of a position where the cable or pipe crosses an earth electrode, or for the distance over which the 0.3 m separation cannot be maintained.

Where copper tape within the site is to be buried under proposed cable routes care must be taken to ensure it is buried deep enough or otherwise protected in a duct so that it is not damaged during cable installation.

Where electrode connected to the earthing system is laid under metal fencing, and the fencing is independently earthed, the electrode should be insulated for at least 2 m each side of the fence.

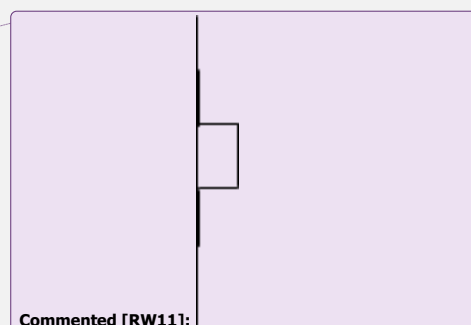

1504 Earthing conductors laid near drainage pits or other civil works should maintain a separation
1505 of at least 500 mm to avoid mechanical damage during subsequent works.

1506 Where bare electrode has to cross permanent trench routes:

- 1507 • short lengths of electrode may be laid under the trench for later connection to the
- 1508 grid;
- 1509 • a short duct may be laid under the trench to accommodate the electrode.

1510 Subsidiary connections to equipment may be laid at shallower depth. Due to variation of soil
1511 resistivity near the surface, their contribution to the overall earth resistance should be ignored
1512 in the design. Their contribution towards reducing touch and step potentials should be
1513 included.

1514 In cases where a concrete plinth covers the whole substation site, (e.g. 11 kV/LV unit type or
1515 urban 33kV substations) earth electrodes should be installed prior to construction of the
1516 plinth. Provision should be made to bring multiple connections out through the concrete. The
1517 extent of the electrode mesh required will be influenced by whether steel reinforcing is used
1518 and bonded, within the foundation.

1519 When routing bare electrode off site, either to reduce the overall earth resistance or to
1520 provide a connection to external equipment such as terminal poles, routes that may be
1521 frequented by people with bare feet or animals are to be avoided.

1522 If this is not possible, calculations or computer modelling should be used to confirm that the
1523 step potentials in these areas are acceptable (a design figure of 25 V/m may be used for
1524 livestock areas as described in Section 4.4.2). Where electrode crosses land that is
1525 ploughed it should be installed a minimum of 1m deep.

1526 When rebar is installed in building and equipment foundations duplicate connections may be
1527 made from the rebar to the grid for touch voltage control. (See section 6.5).

1528 Burying copper in concrete below ground level, and at a depth such that the moisture content
1529 remains reasonably stable, does not reduce the effectiveness of the earthing [except where
1530 damp-proof membranes are installed].

1531

1532 **6.4.3 Other Earth Electrodes**

1533 **6.4.3.1 Earth Rods**

1534 These are generally convenient to install where the subsoil is free from boulders and rock.
1535 Rod electrodes and their connections should be in accordance with ENA TS 43-94. The
1536 earth resistance of a rod or group of rod electrodes may be calculated from formulae given in
1537 **EREC S34**.

1538 A number of rods may be connected in parallel but they should be installed with sufficient
1539 spacing apart such that each is essentially outside the resistance area of any other. For
1540 worthwhile results the mutual separation should be not less than the depth of the rod.

1541 The rods may be connected to the earth grid via a test chamber which is capable of
1542 accepting a clip on resistance meter.

1543 Deep earth electrodes should, as far as possible, be driven into the earth vertically. If rods
1544 are installed in drilled holes they may be backfilled with a proprietary low resistance backfill
1545 material.

1546 Rods may be particularly advantageous if the earth resistivity falls with depth. If several deep
1547 earth electrodes are necessary in order to achieve a required parallel resistance, then, where

space is available, the mutual minimum separation could usefully be double that of the effective length of an individual earth electrode.

Substations in large urban developments are often located below ground level in tanked structures. In such situations special facilities for installing earth electrodes are required.

6.4.3.2 Earth Plates

Earth plates tended to be used in older earthing system designs when they were often situated in groups or “nests” near the main transformers. Modern designs make little use of plates, except where the soil is such that it is difficult to drive in earth rods or at the corners of the earth grid perimeter electrode. In this case a plate will be installed in the vertical plane and acts as a replacement for a rod.

In older sites, should an earth plate require replacement, it is likely that the earthing system itself will require redesign and this may render the plate obsolete. Where there is any doubt, the plate can be replaced on a like for like basis, or by several 2.4m rods in parallel, close together. Plates are typically 1220 mm or 915 mm square in size, of ribbed cast iron and approximately 12 mm thick.

6.5 Use of Structural Earths including Steel Piles and Rebar

Structural metalwork (piles and foundations) can make a valuable contribution to an earthing system, specifically providing parallel paths for earth fault current, reducing overall earth resistance and increasing resilience. Such contributions should be viewed as additional, rather than instead of, a dedicated earthing system.

Horizontal (meshed) rebar installed in concrete or in a screed below plant can provide good control of touch voltages. In this sense it should be viewed in terms of touch voltage control, rather than as an electrode system.

6.5.1 Sheet Steel Piles

Sheets that are more than 3m long and 2m wide are to be bonded to the earthing system, as specified by the Design Engineer. Stainless steel studs are to be exothermically welded to each second sheet at a suitable height (normally 600mm below finished ground level) and a strip of 40mm x 4mm copper tape will be bolted to these. The strip will in turn be connected to the main substation earthing system. If the piles form a separate electrode connected to the earthing system at one point, then the connection should be via a test chamber such that the contribution of the piles may be monitored. Bolted connections should be avoided where possible.

6.5.2 Horizontal Steel Reinforced Foundations

For transformer and switch rooms, the most significant benefit of shallow rebar mesh is in potential grading (touch voltage control). Where this is necessary to ensure operator safety (i.e. in situations where the EPR exceeds safe touch voltage limits), it is important to ensure the integrity of any connections.

For touch voltage control, rebar will be installed normally at shallow depth (i.e. with the rebar strips bound with soft steel wire, or as a prefabricated mesh), but with two or more rebar connections left protruding from the concrete for approximately 150mm sufficient to allow connection to copper or aluminium conductors. Alternatively connections may be provided before concrete is poured using a rebar clamp with flexible earth conductor. In either case any inaccessible rebar extension used for the final connections must be welded to the main rebar assembly.

Ideally the rebar should be arranged with welded connections along at least two orthogonal edges such that welded joints connect each bar.

If the rebar in concrete is to function as an auxiliary earth electrode (e.g. it is installed at sufficient depth to make a contribution), then current rating considerations may mean that exothermic welding is necessary for connections to the rebar and between rebar meshes.

NOTE: Protruding rebar may not be acceptable in some circumstances due to concerns with water ingress etc.

6.5.3 Vertical Steel Reinforced Concrete Columns

Where these columns have steel reinforcing that extends further into the ground than it is possible to bury a conventional earthing system, then the design may require these to be bonded to the earthing system. The easiest method is to leave a section of bonded rebar 150mm out of the concrete for a connection to be made later by the earth installers. This steel reinforcing bar must have its electrical continuity maintained at joint positions by welding the connection. Some designs require electrical connections between the piles made with rebar. In this case supervision of the civil works will be required before concrete is poured.

NOTE: Protruding rebar may not be acceptable in some circumstances due to concerns with water ingress etc.

6.6 Metallic Fences

Two alternative earthing arrangements may be applied to metallic substation fences. These are:

- an independently earthed (or segregated) fence arrangement where the fence is kept electrically isolated from the substation main earth system (Figure 2) or:
- a bonded fence arrangement where the fence is bonded to the substation main earth system (Figure 3).

Occasionally it may be appropriate to employ both methods on different fence sections at the same site. In this case insulated sections are used to physically link the fences with different earthing arrangements.

Where the fence panels are supported by steel posts that are at least 1m deep in the ground, the posts can be considered as earth electrodes.

Where it is important (mainly overhead lines crossing or in parallel with the fence or proximity to magnetic fields) to provide electrical continuity between adjacent panels, this can be provided by attention to the bolt/fixing connections or by providing a separate continuity conductor (buried or supported on the fence).

6.6.1 Independently Earthed Fences

Where the substation earthing system is effectively within the substation perimeter fence, the fence should be separately earthed with rods approximately 2.4 m long located at:

- all fence corners;
- one metre either side of each point where HV overhead conductors cross the fence;
- additional locations such that the interval between rods sites shall not exceed 50m.

Gate posts should be bonded together with below ground connections to ensure that difference potentials do not arise when the two parts are bridged by a person opening the

1634 gates. Flexible copper bonds (minimum 16mm² cu or equivalent) should also be used to
1635 bond the gates to the posts as an additional safety measure.

1636 **6.6.2 Segregation between independently earthed fence and earthing system**

1637 A segregation distance above ground of at least 2 metres should be maintained between the
1638 substation fence and the substation earthing system including all items connected to it. (This
1639 is based on personnel avoiding simultaneous contact with the independently earthed fence
1640 and equipment connected to the earthing system.) A similar distance shall be maintained
1641 below ground, where practicable, taking into account the location of substation perimeter
1642 electrodes etc.

1643 The 2m segregation between the independently earthed fence and the earthing system shall
1644 be maintained on an ongoing basis. This must not be compromised by alterations such as
1645 the addition of lighting or security installations, where e.g. cable armours can compromise
1646 the segregation of the systems.

1647 Where the required segregation cannot be achieved then mitigation measures should be
1648 considered (e.g. insulating paint or barriers (that do not compromise security)). Alternatively,
1649 the risk assessment approach outlined in section 5.8 may be applied.

1650 Methods to calculate the transfer potential onto fences are described in **EREC S34.**


1651

1652

1653

Figure 2 – Arrangement of separately earthed fence

[RW to update: Rods as circles (show key); include gate; insulated ducts; palisade fence; annotation to be added – not yet complete]

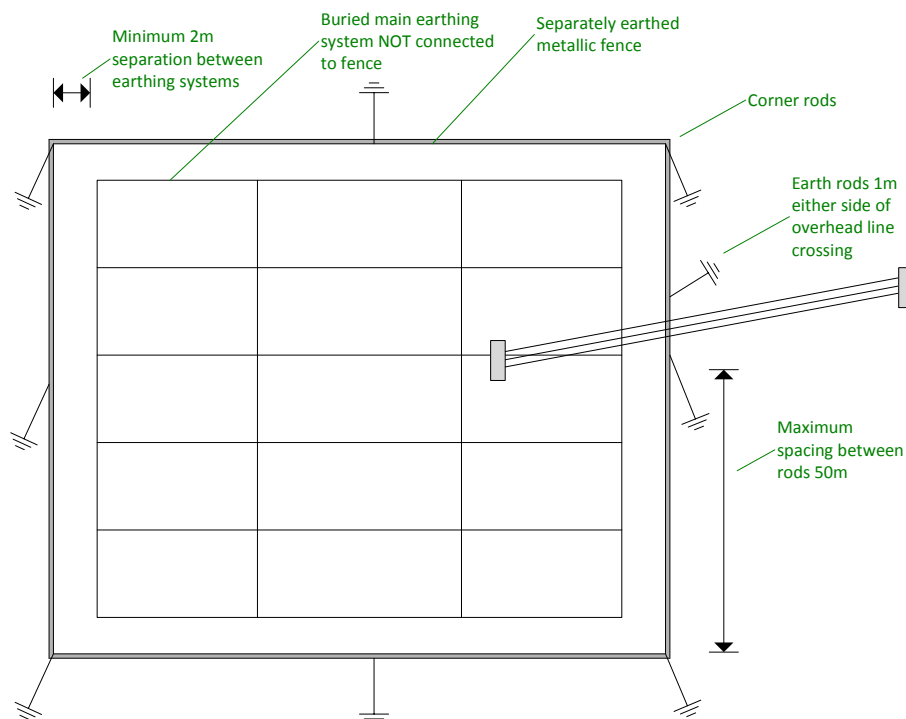

6.6.3 Fences Bonded to the Substation Earthing System

This arrangement is used where substation plant and equipment is located with 2m of a metallic fence and where internal fences which are located within the area encompassed by the substation earthing system. The fences should be connected to the earth grid using discrete but visible connections located at:

- all fence corners;
- one metre either side of each point where HV overhead conductors cross the fence;
- additional locations such that the interval between connections does not exceed 50m.

Where the fence which is connected to the substation earthing system is the perimeter fence, and where the touch potential external to the fence could exceed the safety limits set out in Table 1, then the following requirements apply.

- A bare electrode conductor shall be buried in the ground external to the perimeter fence at approximately a distance of 1 metre away and at a depth of 0.5 metres.

In agricultural locations risk of disturbance due to ploughing should be addressed;

- The conductor should be connected to the fence and to the earthing system at intervals of 50 metres or less such that it becomes an integral part of the substation earthing system. One method to achieve this is to 'expand' the substation grid such that the fence is located within the area of this grid. (Figure 3);
- Chippings or asphalt around the substation perimeter will provide additional protection to animals/persons outside the substation.

At locations where fencing connected to the substation earth grid abuts with independently earthed fencing and this presents a touch hazard, there should be electrical isolation between the two fence systems. See para. 6.6.5 for methods of achieving electrical isolation between fences using insulated fence sections.

Figure 3 – Arrangement of bonded fence

[RW to do]

Note S34 to contain drawing/calcs showing fence touch voltages

6.6.4 Third Party Metallic Fences

Third parties shall not directly connect their metal fences to a metallic substation fence, as this may introduce a transfer potential risk. Where such third party fences are present or are likely to be present within 2 m of the substation, one of the options listed below should be implemented to maintain electrical isolation between the two fence systems.

Note: Security considerations may preclude this if the third-party fence could act as a climbing aid.

6.6.5 Insulated Fence Sections.

Insulated fence sections to segregate lengths of fencing which are bonded to the main earth grid from those which are independently earthed or connected to third party fences may be used. The insulated sections may be formed by:

- a) Installing a 2 m (or longer) insulated fence panel made wholly of insulating material.
- b) Installing a 2 m (or longer) metal fence panel mounted on insulated supports / standoff insulators. (The insulators need a voltage withstand capability in excess of the highest EPR at the perimeter of the site whilst at least maintaining the equivalent physical strength of the fence).

Coated fences (section 6.6.7) must not be treated as insulated sections unless specifically designed and tested for such purposes.

6.6.6 Chain Link Fencing (Galvanised or Plastic Coated)

Such fencing should be earthed by bonding the support posts, fence and straining wires and any anti-climbing devices to the independent or bonded fence earth electrode system as appropriate. This may conveniently be achieved by the addition of an electrode run with the fence to aid bonding/earthing. The fence shall be treated as if it were bare metal, i.e. no insulation withstand should normally be assumed.

1716 If a touch potential issue exists with a plastic coated chain link fence it should be addressed
1717 by installing a grading electrode rather than by relying on the integrity of the plastic fence
1718 coating which may not be comprehensive and is also likely to deteriorate.

1719 **6.6.7 Coated Fence Panels**

1720 These typically consist of galvanised steel support posts and galvanised steel mesh panels,
1721 all of which are coated. When used for enclosing electrical apparatus or a substation, they
1722 shall be earthed and precautions are necessary to cater against damage or erosion of the
1723 coating. The support posts shall be earthed via a bolted connection and ideally the metal of
1724 each panel should in turn be similarly connected to the post. Ideally these should be via
1725 manufacturer provided facilities. The overall fence is connected to earth in a similar manner
1726 to a separately earthed or bonded metal palisade fence.

1727 Such fences should not be treated as insulating, unless the covering is specifically designed
1728 for this purpose and its longevity can be assured.

1729 If a touch potential issue exists with a coated fence it should be addressed by installing a
1730 grading electrode.

1731 **6.6.8 Electric Security Fences**

1732 When electric security fencing is installed on independently earthed fence installations, the
1733 isolation of segregated fence sections from the main substation earthing system must be
1734 maintained. This may require independent electric fence zones and special consideration of
1735 electric fence earth connections.

1736 **6.6.9 Anti-climbing Precautions**

1737 Where barbed wire or other metal anti-climbing devices are erected along the top of brick
1738 walls or other non-metallic barriers they may be connected to earth using the same
1739 procedure as with fencing. Note that metallic parts not liable to introduce a potential need not
1740 be bonded (e.g. short lengths of barbed wire or spikes etc.).

1741 Care should be taken to ensure that anti climbing guards do not bridge fencing sections that
1742 are designed to be separately earthed or isolated. This includes e.g. the metal centre rods of
1743 plastic 'vane' guards etc.

1744 **6.7 Specific Items**

1745 **6.7.1 Water Services to Substations**

1746 Water supplies to substations shall be run in non-metallic pipes. This avoids the substation
1747 potential rise being transferred outside so endangering other users of the water supply
1748 system. This is now largely a legacy issue at older sites as insulated pipes are used for new
1749 construction. When such an existing site is being refurbished or upgraded at least a section
1750 of insulated plastic pipe should be inserted in the incoming metallic water service.

1751 Any metallic pipe used within the substation site should be bonded to the substation earthing
1752 system and adequately segregated from separately earthed fence sections.

1753 **6.7.2 Non-current carrying metalwork**

1754 Most non-current carrying metalwork of all kinds within the perimeter fence shall be securely
1755 bonded to the main earthing system to ensure that all such items are held to the same
1756 potential and, if called upon to do so, will carry fault currents without damage. Exceptions
1757 apply to conductive parts not liable to introduce a potential, and these need not be bonded.

1758 The cross section of any bonding conductors shall be as described in

Table 5 and Table 6. If there is no likelihood of current flow or corrosion/erosion, equipotential bonding conductors should be no smaller than 16mm² copper or equivalent.

NOTE: Small metallic items (extraneous metalwork) that are unlikely to introduce or carry a significant potential, need not be bonded to the main earthing system (ref: 4.2). Such items may include, but are not limited to, window frames, signposts, wall brackets, small access steps/handrails etc.; However if there is any foreseeable likelihood of them adopting a potential in service (sufficient to cause a touch voltage hazard), such items should be bonded to the main earthing system.

Larger items, even if some distance from current carrying metalwork, may adopt a stray voltage due to induction or capacitive coupling and should always be bonded.

6.7.3 Items normally bonded to the main earth grid:

These include:

- overhead line termination structures including towers, gantries and earthed wood pole structures within or adjacent to the substation;
- power cable sheaths and armours (at one or more points);
- transformer and reactor tanks, coolers and radiators, tap changers, earthing resistors, earthing reactors, high voltage transformer neutral connections;
- metal clad switchgear assemblies and cases, isolators and earth switch bases;
- metal gantries and structures and metalwork mounted on wood structures;
- metallic building structures including steel frames (bonded at each corner), rebar and piles. Miscellaneous metalwork associated with oil and air tanks, screens, steel structures of all kinds;
- all panels, cubicles, kiosks, LV AC equipment, lighting and security masts.

Critical items such as transformer tanks and terminal towers shall have duplicate connections to the main earth grid.

6.7.4 Items NOT normally bonded to the Earth Grid

The following list is not exhaustive, and includes some typical items that a designer may specify to remain un-bonded.

- The perimeter fence is only bonded to the main earth system if all or part of it cannot be kept at least 2 m clear of earthed structures and the main earthing system. (Section 6.6)
- Screens of telephone cables where they are taken into HOT sites. (Refer to 4.3.7);
- Extraneous non-current carrying metalwork as described in Section 6.7.2
- Parts intended to be isolated from earth (e.g. floating fence panels, some stay wires, etc.)
- Some protection equipment, or equipment connected to (e.g.) frame leakage protection, which must be connected to earth in a specific manner.
- LV neutrals/earths in some circumstances.

6.7.5 Non-standard bonding arrangements

Sometimes it may be necessary to isolate cable sheaths and screens from the main substation earth grid to avoid transfer potential issues. Such arrangements must be the subject of a bespoke design and precautions taken at the earth isolation point to avoid touch potential issues.

NOTE: There may be other considerations which make a sheath break unacceptable or ineffective in some circumstances. ENA EREC C55 provides further related information.

6.8 Overhead Line Terminations

6.8.1 Tower Terminations Adjacent to Substation

Where the aerial earth wire of an incoming overhead line terminates on a steel tower / terminal support adjacent to a substation, continuity shall be provided for current in the earth wire to flow into the main earthing system. Continuity is to be provided by:

- bonding the aerial earth wire to the top of the line gantry, or;
- bonding the aerial earth wire to the top of the tower, and bonding the base of the tower to the main substation earthing system.

The rating of the bonds must at least be equal to that of the aerial earth wire.

If not bonded via aerial earth wire, the tower must be bonded to the main earth grid via two continuous conductors which run from different tower legs via separate routes and connect to two different points on the main earth grid. Each below ground conductor must be fully rated. The bonds should be buried and be installed so as to minimise risk of theft. If the bonds run under an independently earthed fence they must be insulated for a 2 metre distance on either side of the fence.

If the tower legs are located within 2 m of an independently earthed metal fence then the section of fence adjacent to the tower should be bonded to the tower and electrically isolated from the rest of the fence. Alternatively the relevant metal fence panels may be replaced by insulated panels, or suitable insulating coating applied (ref: 4.4.3 and 6.6). If this is not practicable a risk assessment should be carried out (section 5.8).

6.8.2 Steel Tower Termination with Cable Sealing Ends

Where an aerial earth wire terminates on a tower with a sealing end platform or an associated cable sealing-end compound that is well outside the substation, continuity between the base of the tower and the main earthing system will be provided by either the sheaths of the power cables or by an earth continuity conductor laid and installed in accordance with ENA EREC C55.

6.8.3 Terminal Poles with Stays Adjacent to Substation Fence

Stay wires that are external to the site and more than 2 m from the fence or earthed metalwork may be left un-earthed, if this is in accordance with normal practice. They should be earthed within the substation compound where possible to minimise risk from current leakage across the stay insulator.

Earthed stay wires can present a touch potential risk if the stay is in very close proximity to an independently earthed fence, and may form an inadvertent connection between the independently earthed fence and the main earth grid. To address this, in addition to installing the normal upper stay insulator a second stay insulator should be installed as close to ground level as possible leaving the centre section of the stay unearthed. 2 m segregation must be achieved between the lower earthed section of the stay including the rod and the fence.

Unless the earthed stay rod is inside the earth grid, a loop of buried electrode should be laid around the rod at a 1m radius, and bonded to the rod/main earthing system to control touch potential.

6.8.4 Down drop Anchorage Arrangement with Arcing Horns

Where it is necessary to have an assembly of ferrous fittings such as turn buckles, links, shackles etc. between the insulators and an earthed structure or ground anchor point, precautions may be required if the earth fault current is very large.

1846 The earthed end arc-ring (or horn) anchorage arrangement may be attached to the main
1847 earth connection by means of a flexible copper shunt, in order to limit earth fault current
1848 flowing through the discontinuous ferrous fittings. This prevents mechanical damage due to
1849 arcing.

1850 **6.8.5 Loss of Aerial Earth Wires**

1851 If alterations are carried out to overhead lines which break an otherwise continuous aerial
1852 earth wire between substation sites, consideration must be given to the increase in ground
1853 return current and consequent increase in EPR which arises.

1854 There may also be a further increase in EPR due to reduction of the chain impedance
1855 contribution. It may be necessary to consider the installation of an overhead or buried earth
1856 conductor to provide continuity of the aerial earth wire.

1857 **6.9 HV Cable Metallic Sheath / Armour Earthing**

1858 This section covers all HV power cables contained within or entering HV substations but
1859 excludes those HV cables which feed HV/LV transformers located in the substation where
1860 the LV supply is exclusively for use in the substation. The requirements for these latter
1861 cables are dealt with under Section 9.

1862 **6.9.1 Insulated (Polymeric) Sheath Cables**

1863 The metallic sheath/armour of cables can, due to their inductive coupling properties, provide
1864 a very low impedance return path for earth fault current flowing in the cable phase
1865 conductors. This can greatly reduce the current that returns to source though the ground and
1866 subject to the sheath being continuous significantly reduce the EPR at associated terminal
1867 substations.

1868 To achieve this, the sheath/armour must be earthed at least at both ends. This arrangement
1869 of earthing is generally satisfactory for three-core and TRIPLEX type high voltage cables
1870 forming part of general distribution system circuits.

1871 Simply bonding sheaths/armours at both ends of single-core cables or very heavily loaded
1872 circuits such as transformer interplant cables can cause de-rating as large steady-state
1873 currents may flow in the sheath/armours, causing additional heating and risking damage.

1874 Consequently two methods of installation have been developed for single-core cables where
1875 the length is sufficient to cause this problem.

1876 a) Single Point Bonding – where the sheaths are connected to earth at one point. A parallel
1877 Earth Continuity Conductor may be laid with the cables to provide continuity between
1878 items of plant.

1879 b) Cross bonding – where the sheaths are connected to earth at each end, and periodically
1880 transposed to cancel circulating currents flowing in the sheaths.

1881 Single-point bonding preserves the rating of the cables, but permits a voltage to develop
1882 between the sheaths/armours and earth at the unearthed ends of the cables which could, on
1883 long cable runs, require shrouding or other measures to ensure safety.

1884 Cross-bonding provides a return path for earth fault current in the sheaths without permitting
1885 significant steady-state de-rating current to flow or exceeding the sheath voltage rise limit.
1886 Care is needed at link boxes/transposition points.

1887 Both methods, together with their merits and disadvantages are described in detail in ENA
1888 EREC C55 “Insulated Sheath Power Cable Systems”, together with solutions to the problems

Commented [RW12]: To distinguish from earlier reference to sheath breaks which also relates to pilot cables and comms

1889 described above. A bespoke cable and earthing / bonding design is usually required for very
1890 heavily loaded circuits (e.g. interplant cables) or circuits operating above 33 kV.

1891 Methods for calculating the sheath return current and resulting ground return current (for
1892 systems with sheaths earthed at both ends) are given in **ENA EREC S34**.

1893 **6.9.2 Cables Entering Substations**

1894 The sheath/armour at the substation end of the cable should be earthed to the substation
1895 earthing system.

1896 TRIPLEX, three-core, and fully cross-bonded cables will, in addition, be earthed at their
1897 remote ends. This provides both a conductive and inductive path for fault current. With cross-
1898 bonded single-core cables, it is the usual practice to install further additional sheath earths
1899 along the route of the cable. The additional sheath earths will normally produce an
1900 insignificant benefit, and can be ignored in the assessment of the substation earth
1901 resistance.

1902 **6.9.3 Cables Within Substations**

1903 Three-core cables will have their sheath/armour earthed at both ends.

1904 Single-core cables will usually be short enough to allow single-point sheath/armour earthing,
1905 without causing serious sheath voltage rise problems. The single sheath/armour bond to
1906 earth should be located where personnel are most frequently present, for example at
1907 switchgear. Screens should be shrouded at the unearthed end. An earth continuity conductor
1908 may be required. Refer to ENA EREC C55 for further details.

1909 For the higher voltage systems, sheath voltage limiting devices (SVLs) may be installed
1910 between the sheath and earth at the unearthed end of the cable to protect the integrity of the
1911 sheath and its terminating point insulation against transient voltage surges on the sheath.

1912 **6.9.4 Outdoor Cable Sealing-Ends**

1913 Where cables terminate at outdoor sealing-ends, pedestal-type insulators are fitted to
1914 insulate the sealing-end base and gland from its support structure. If sheath earthing is made
1915 at this location special earthing bonds are required in accordance with ENA TS 09-15 or
1916 EREC C55 as appropriate.

1917 When the standing sheath-voltage at a termination can exceed 10 volts to earth, the base
1918 metalwork of the sealing-end shall be screened against accidental contact by means of an
1919 insulating shroud of the type illustrated in EREC C55.

1920 Sealing-end support insulators should be used only for short single-core cable tails with an
1921 earth bond made at the trifurcating point of any three-core cable.

1922 **6.9.5 Use of Disconnected, Non-Insulated Sheath/Armour Cables as an Electrode**

1923 Metallic sheathed/armoured hessian served cables are often decommissioned or replaced
1924 with insulated sheath cables. Where these are laid direct in soil, they can provide a valuable
1925 electrode contribution. Where practicable (particularly if the buried length exceeds 200 m)
1926 these redundant cables should be retained as earth electrodes to maintain their contribution
1927 towards lowering overall substation earth resistance and EPR.

1928 If such sections are retained, the phase conductors and sheaths/armours of these cables,
1929 once disconnected should be joined together to maintain their contribution to the electrode
1930 system. The start ends should ideally be connected to the earth grid via test chambers to
1931 permit continuity or resistance measurements. The remote ends should, if practicable, be
1932 connected to the electrode system at a joint or distribution substation. Cable and earthing

1933 records should be annotated to show such cables are being used as substation earth
1934 electrode.

1935 Constant-force springs (CFS) or plumbed joints may be appropriate for connecting stranded
1936 copper conductor to lead sheathed cables; other types of connection may loosen in service
1937 as the lead continues to flow or 'creep' under contact pressure. In any case moisture should
1938 be excluded from such joints using heat shrink boots or similar. Manufacturer's guidance
1939 should be sought if connecting to sheaths of other cable types.

1940 **6.10 Light-current Equipment Associated with External Cabling**

1941 All exposed conductive parts of light current equipment shall be earthed to the main earthing
1942 system as required. Where pilot or communication cables operate between two remote
1943 points and the rise of earth potential at each end of the circuit does not exceed the
1944 appropriate ITU-T limit, any required circuit earth may be made at either end. If the rise of
1945 earth potential at either end exceeds the appropriate ITU-T limit, then protective measures
1946 shall be applied to those circuits. Refer to ENA EREC S36, and sections 4.3.7 and 6.9.3.

1947 **6.11 Metal Clad and Gas Insulated (GIS) Substations**

1948 **6.11.1 Metal Clad Substations**

1949 Metal clad substations will normally be erected on a concrete raft. The provisions for an earth
1950 electrode system in these circumstances will be similar to those described under item 9.3.1.
1951 Where touch potential is an issue consideration should be given to using an enclosure made
1952 of insulating material and to using surface-laid earth mat/grating.

1953 **6.11.2 Gas Insulated Switchgear (GIS)**

1954 Gas Insulated Switchgear (GIS) employing single-phase busbar enclosures require
1955 additional earthing precautions incorporated into the design of the substation earthing
1956 system.

1957 Due to close coupling with individual phase conductors busbar enclosures can experience
1958 high levels of induction. Steelwork used to support the enclosures and adjoining items of
1959 plant may form closed paths in which induced inter-phase and earth currents flow under both
1960 steady-state and fault conditions. These currents can be undesirably high and may approach
1961 the phase conductor current. The flow of circulating current renders secondary wiring more
1962 vulnerable to inductive interference.

1963 A further issue with GIS is the creation of surge voltages on the enclosures and associated
1964 steelwork during switching or other transient/high frequency system disturbances.

1965 To help minimise the above effects it is recommended that an earth grid, well integrated and
1966 with locally enhanced electrode (e.g. increased mesh density and vertical rods) in the regions
1967 close to the plant, be laid over the raft from which short spur connections can then be taken
1968 to the specific earthing points on the equipment. Typical arrangements are described in
1969 CIGRE Paper 044/151 - "Earthing of GIS – An Application Guide", issued by Working Group
1970 23.10 (December 1993).

1971 To retain current in the busbar enclosures, short circuit bonds, together with a connection to
1972 the earthing system, should be made between the phase enclosures at all line, cable and
1973 transformer terminations, at busbar terminations and, for long busbar runs, at approximately
1974 20 metre intervals. Switchboards > 20 m long will require intermediate connections. Except
1975 where adjacent enclosures are insulated from each other the interface flanges of the
1976 enclosures should have bonds across them and the integrity of bolted joints of all bonds
1977 should be checked.

1978 As a guide the resistance of the bonded flanges should not exceed 5 micro-ohm. At insulated
1979 flanges consideration should be given to the installation of non-linear resistive devices to
1980 prevent transient flash-over.

1981 **6.12 Fault Throwing Switches, Earth Switches and Disconnectors**

1982 **6.12.1 Background**

1983 Fault throwing switches, earth switches and disconnectors are normally mounted on steel,
1984 aluminium, steel reinforced concrete or wood pole structures.

1985 Metallic structures may be of electrically continuous all welded construction or assembled
1986 using several large pre welded sections or individual bolted members. In some cases though
1987 the structure is of bolted construction there may be a continuous metallic section from ground
1988 to equipment level. Where there is more than one metallic section in series in a fault current
1989 path continuity between sections needs to be considered.

1990 Where steel or aluminium support structures are used to support isolators and / or earth
1991 switches it is desirable to use the structure itself to carry earth fault current in order to reduce
1992 the need for above ground earth conductors with consequent risk of theft. This arrangement
1993 is only acceptable where the metallic structure can provide a reliable earth connection with
1994 adequate current carrying capacity.

1995 NOTE: Some Network Operators may not use support structures in lieu a dedicated earthing conductor. See also
1996 6.2.6

1997 When installing earth connections to fault throwing switches, earth switches and isolators the
1998 design will take in to account the magnitude and duration of the prospective earth fault
1999 currents involved.

2000 The main earth connection to these devices carries earth fault current under the following
2001 conditions:

2002 **Table 10 – Conditions for the passage of earth fault current**

Device	Condition For Passage of Earth Fault Current
Fault Throwing Switch	By design when protection operates
Earth Switch	When there is an equipment failure or switching error. May also carry lightning induced current when closed.
Isolator	When the isolator or its connections fault, or when the isolator is used in a sacrificial mode if main protection fails.

2003

2004 The main options for earthing fault throwers, earth switches and isolators are to use either:

- 2005 • a fully rated earth conductor, fixed to the structure. This method is most applicable to
2006 higher fault current applications (e.g. systems operating at 90kV and above) or where the
2007 support structure cannot provide an adequate earth fault current path. See

- 2008 • Table 5 and Table 6 for conductor ratings;
- 2009 • alternatively a metallic structure may be used to conduct earth fault current from the top
- 2010 of the structure equipment to the grid. This is subject to the structure having sufficient
- 2011 current carrying capability and being electrically continuous. The method is more
- 2012 applicable to lower fault current applications (e.g. 33 kV systems) which use welded or
- 2013 continuous metallic structures.

2014 The following earthing arrangements apply to fault throwing switches, earth switches and
2015 isolators located within secured substation sites fitted with earth grids.

2016 Different arrangements (e.g. insulated down-leads) may be required for equipment located
2017 outside substations in areas accessible to the public.

2018 **6.12.2 Fault Throwing Switches (Phase - Earth)**

2019 A direct earth connection shall be made from the switch earth contact to the main earth grid
2020 using a conductor fixed to the structure.

2021 **6.12.3 Earth Switches**

2022 Connections from earth switches to the main earth grid may be made by either:

- 2023 a) An earth conductor, fixed to the structure or:
- 2024 b) By using the metallic support structure as a conductor subject to the aluminium or steel
- 2025 structure having sufficient current carrying capability and being electrically continuous.

2026 **6.12.4 Isolators**

2027 Connections from isolator support metalwork to the main earth grid may be made by either:

- 2028 a) A fully rated earth conductor, fixed to the structure or:
- 2029 b) By using the metallic support structure as a conductor subject to the aluminium or steel
- 2030 structure having sufficient current carrying capability and being electrically continuous.

2031 **6.13 Operating Handles, Mechanisms and Control Kiosks**

2032 **6.13.1 Background**

2033 Earthing arrangements for operating handles of isolators, circuit breakers, earth and fault
2034 throwing switches must provide touch and step potential control for the operator.

2035 These are critical locations which require careful consideration and sound construction.

2036 A full earth grid may not always be present at some older sites and additional precautions
2037 may be required when operational work and/or minor alterations are being carried out to
2038 ensure safe touch and step potentials. Generally, with exceptions outlined below, stance
2039 earths shall be provided at all locations where operators may stand to operate high voltage
2040 equipment handles, mechanisms and control equipment.

2041 **6.13.2 Earth Mats (Stance Earths)**

2042 New installations will have touch and step potential control provided by a purpose designed
2043 earth grid. If it can be demonstrated that such measures are adequate to ensure operator
2044 safety, and if a network operator's operational policy allows, an additional stance earth may
2045 not be required. In making this assessment, the likelihood of deterioration due to theft or
2046 corrosion should be considered. Portable or visible (surface laid) stance earths may be
2047 required in addition to any buried grading electrode as a risk reduction measure.

2048 NOTE: Surface-laid earth mats are preferred over buried earth mats; they give much better touch control and their
2049 presence can readily be checked. The size and position of the mat must match the operator stance position(s) for

Commented [RW13]: Delete this? It's described in next few paragraphs anyway. But the advice on fault throwers is contradictory. Use the structure or not?

the given equipment. Galvanised steel grating earth mats can be readily extended to cover the operator path followed with horizontal operation handles. Buried earth mats may be a suitable alternative to surface-laid earth mats where the resulting touch voltage is sufficiently low.

6.13.3 Connection of Handles to the Earth Grid and Stance Earths

The earth connection from the handle to the grid shall always be separate to that for the switch metalwork and be as short as possible.

The earth connection shall use standard copper conductor connected direct to the main substation earth.

In some cases an insulated insert may be fitted between the operating handle and the switch metalwork to help prevent any fault current flowing down the handle and mechanism into the earth grid.

Refer also to Section 10.6 (Earthed Operating Mechanisms Accessible From Ground Level).

6.14 Surge Arrestors and CVTs

Plant including surge arresters and CVTs (Capacitor Voltage Transformers), which are connected between line and earth, present relatively low impedance to steep-fronted surges and permit high-frequency currents to flow through them to earth.

Unless a low impedance earth connection is provided, the effectiveness of the arrester could be impaired and high transient potentials appear on the earthing connections local to the equipment. The following installation earthing arrangements are recommended:

Two connections to earth are required for both surge arresters and capacitive voltage transformers (CVTs):

- The first connection (for power frequency earthing) will use the structure to the main substation earth grid.

- The second (high frequency) connection should be direct to an earth rod, installed vertically in the ground as near to the surge arrester base as possible, with a tee connection to the support structure if metal. High frequency earth rods shall be driven vertically into the ground to a depth of approximately 4.8m. Where this is not achievable, a high density earth mesh arrangement or four (or more) long horizontally buried conductors (nominally 10m in length, minimum depth 600mm) dispersed at 90° (or less, equally spaced across the full 360°) may be used in place of the rod. Calculations must be provided to demonstrate that any proposal is equivalent to the 4.8m long earth rods. The high frequency connection shall be made to the centre of the alternative HF earthing designs. Dedicated earth mats or similar may be considered in difficult circumstances.

Refer to BS EN 62305 (Lightning Protection Standard) and BS EN 62561-2 (Lightning Protection System Components – requirements for conductors and earth electrodes), or ENA ER 134 for more information.

The benefit of surge arresters over arc gaps is greatest when the resistance to earth is less than 20 Ohms. When a surge arrester is provided at a cable termination, the earth side of the arrester should be connected to the cable crucifix and thereby to the cable sheath. Surge arresters should be sited as close as practical to the terminals of the plant, (e.g. transformer bushings or cable sealing ends) which they are protecting.

The support structure and plinth will be designed to allow the high frequency earth connection to either pass through its centre, or through an angled slot to ensure that the connection is as short and straight as possible. This will aid performance and deter theft. It is

Commented [RW14]: This text from Fraser, replaces: If a rod is not possible, several 2 m spur electrodes can be taken out from the injection point at 600 mm depth and spaced about 60 degrees apart. Dedicated earth mats or similar may be considered in difficult circumstances.

Commented [RW15]: Section 6.6 Surge Arresters "Surge Arresters should always be connected as close as practicable to the apparatus and the earth side fixed to or connected to the frame of the apparatus. Surge arresters should be positioned directly across the cable/sheath or transformer HV winding and tank.

Commented [RW16]: This para is from ER 134 and could be omitted?

particularly important to avoid sharp bends. This connection must not be enclosed within a steel support tube or box.

Fully rated conductors must be used for both high frequency and power frequency connections. High frequency downleads should be insulated from the support structure (except where bonded to the structure at low level) to accommodate surge counters, and also to facilitate testing of the electrode with a clamp meter (Section 7.6.2(b)).

7 Measurements

7.1 General

This section describes some of the most common measurements which may be required during the design, commissioning or maintenance of an earthing system at an electrical installation. An overview of the important measurement and interpretation methods is provided together with some guidance on avoiding sources of error. More detailed guidance and method statements would be expected to be available in company manuals and operational documentation.

7.2 Safety

The earthing related measurements described in this section are potentially hazardous. They must be carried out by competent staff using safe procedures following a thorough assessment of the risks. The risk assessment should include, but not be limited to, consideration of the following aspects and the necessary control measures implemented, e.g. personal protective equipment, special procedures or other operational controls.

- a) Potential differences that may occur during earth fault conditions between the substation earthing system and test leads connected to remote test probes. The likelihood of an earth fault occurring should be part of this assessment, e.g. not allowing testing to proceed during lightning conditions or planned switching operations.
- b) Potential differences that may occur between different earthing systems or different parts of the same earthing system. In particular, approved safe methods must be used when disconnecting earth electrodes for testing and making or breaking any connections to earth conductors which have not been proven to be effectively connected to earth*.
- c) Potential differences occurring as a result of induced voltage across test leads which are in parallel with a high-voltage overhead line or underground cable.
- d) Environmental hazards of working in a live substation or a construction site as governed by the electricity company safety rules or the CDM regulations as applicable.
- e) Injury when running out test leads for large distances in surrounding land.

* NOTE: Disconnection from earth can cause voltage differences to arise in the case of the path from tower line-earthing system due to induction; as it is related to current in the tower line, and therefore present continuously, it represents a particularly serious hazard.

7.3 Instrumentation and Equipment

It is imperative that measurements are taken using the most suitable instrumentation for the required task which is in good working order and has a valid calibration certificate. The instrumentation will be used for field measurements in all weather conditions. It must therefore be robust, have a sufficient level of water resistance and be suitably protected from electrical transients (e.g. by fuses) and shielded for use in high-voltage installations. Further advice on this may be sought from a reputable instrument manufacturer.

Instruments shall be calibrated regularly (e.g. annually) to a traceable national standard. Heavily used instruments should be checked more frequently, e.g. against other calibrated instruments or standard resistors, between formal calibration periods. Instruments must be periodically serviced/safety tested and any identified damage or faults must be rectified before re-use.

Many of the measurements require ancillary equipment such as test leads, earth rods, connection clamps, etc. and it is equally important that these are also fit-for-purpose and well-maintained.

7.4 Soil Resistivity Measurements

7.4.1 Objective

Site specific measurements are required to determine the resistivity of the materials (soil, rock, etc.) that make up the ground where an earth electrode is installed. The results obtained can be interpreted to provide a uniform equivalent resistivity for use in standard design equations (EREC S34) or a multi-layer soil model, which can be used in commercially available computer simulation tools. Important design parameters such as the earth resistance and EPR are strongly dependent on the soil resistivity so it is essential for the accuracy of the design that proper attention is given to these measurements and their interpretation as early as possible in the design process.

7.4.2 Wenner Method

A four-terminal earth tester is used for these measurements. There are a number of available measurement techniques which involve passing current through an array of small probes inserted into the surface of the soil and measuring the resulting potentials at specified points. Using Ohm's law a resistance can be calculated which may be related to the apparent resistivity at a particular depth using suitable formulae. Varying the positions of the probes, and hence forcing the current to flow along different paths, allows the apparent resistivity at different depths to be measured. The most commonly used arrangement for earthing purposes is the Wenner Array (Dr Frank Wenner, UK Bureau of Standards – now NIST) and this is described in more detail in BS EN 50522 UK National Annex C.

NOTE: There are variations on the Wenner Array method using uneven electrode spacings that can be used and these include the Schlumberger Array method and the General Array method.

For large substations it is important to take measurements at a number of different locations around the site so that an average may be used. In urban areas meaningful measurements may only be obtained from the nearest parks or open ground and so results from several locations around the substation are essential.

7.4.3 Interpretation of Results

It is difficult to interpret measurement results by inspection other than for a uniform or two-layer soil model. Formulae for interpretation of data for soils with three or more layers are cumbersome and practically requires the use of software. There are a number of suitable software tools available commercially. Because most of these are based on a curve-fitting approach, geo-technical information such as borehole records are useful to reduce

2184 uncertainty in the soil resistivity model by indicating layer boundary depths, materials, water
2185 table height, bedrock depth, etc and should be used where available.

2186 Knowledge of the soil resistivity at different depths is important when designing the most
2187 effective electrode to reduce the substation earth resistance. For example, vertical rods are
2188 better suited to a soil with a high resistivity surface layer and low resistivity material beneath.
2189 Conversely, where there is low resistivity material at the surface with underlying rock then
2190 extended horizontal electrodes will be more effective.

2191 7.4.4 Sources of Error

2192 There are a number of sources of measurement error which must be considered when
2193 planning and carrying out these measurements. These include, but are not limited to:

2194 (a) influence of buried metallic structures such as bare cable armouring/sheaths, earth
2195 electrodes, pipes, etc. Measurements taken above or near buried metallic services
2196 will indicate lower resistivity values than actually exists. This can lead to under-
2197 designed earthing systems which may be costly to rectify at the commissioning stage.
2198 Measurement locations must be carefully planned to avoid interference from metallic
2199 structures by consulting service records and, where there remains uncertainty, the
2200 use of scanning methods on site. It is also important that measurements are taken at
2201 a number of different locations (minimum of two) around the site of interest so that
2202 any influenced results become apparent in comparison to unaffected results. Two
2203 orthogonal sets of measurements can also help to indicate an error;

2204 (b) interference from stray voltages in the soil or induction from nearby electrical systems
2205 may adversely affect measurement results, normally evident as an unstable reading
2206 on the instrument or unexpectedly high readings. This may be reduced by avoiding
2207 test leads running in parallel with high voltage power lines/cables or near other
2208 potential sources of interference, e.g. electric traction systems.

2209 (c) the wenner spacings used must be appropriate for the size of the earthing system
2210 and recommended spacings are provided in BS EN 50522 National Annex C.
2211 Spacings that are too short may not identify the lower layer resistivities which can
2212 introduce large positive or negative error into design calculations;

2213 (d) low resistivity soils, especially at long wenner spacings, require relatively small
2214 resistances to be measured at the surface. Instrumentation with an inadequate lower
2215 range may reach its limit and incorrectly indicate higher resistivity values than exist;

2216 (e) care must be taken in interpreting the measurement data. If using computer software
2217 tools, it should be remembered that the result is a 'model' of the soil conditions which
2218 is largely determined by automatic curve-fitting routines or user judgement. To
2219 increase confidence it is good practice to 'test' the model by comparing it to other
2220 geological data available for the site and the expected range of resistivity values for
2221 the materials known to be present. Measured resistances of vertical rods installed at
2222 the site can also be compared to calculated values obtained using the soil model to
2223 increase confidence. It should be recognised that the soil resistivity model may need
2224 to be refined throughout the project as more supporting information becomes
2225 available.

2226 7.4.5 Driven Rod Method

2227 The driven rod method is an alternative to the Wenner Method which is particularly useful in
2228 built-up urban areas where there is inadequate open land to run out test leads. This method
2229 should be used with caution and measures must be taken to avoid the possibility of damage
2230 to buried services, in particular HV cables. Where the absence of buried services cannot be

established, rods must not be driven. An earth rod is driven vertically into the ground and its earth resistance measured as each section is installed using either of the methods from Sections 12.5 and 12.6. Using a simple equation (for uniform soil equivalence – refer to ENA EREC S34) or computer simulation (for multi-layer analysis) the soil resistivity may be deduced from the measured rod resistance and its length in contact with the soil. This method can be cost-effective as the rods can be used as part of the earthing installation. Where possible the results from driven rods at a number of locations around the site should be used together with any available Wenner Method data to improve confidence in the derived soil resistivity model.

7.5 Earth Resistance/Impedance Measurements

7.5.1 Objective

The substation earth resistance or impedance is normally measured where practicable on commissioning of a new substation and subsequently at maintenance intervals. The measurement will include all earthing components connected at the time of the test and the result represents the value which is normally multiplied by the ground return current to determine the EPR. This method may also be used to measure the earth resistance or impedance of individual electrodes, tower footings or tower line chain impedances. (Refer to ENA EREC S34 for details of chain impedance and relevant calculations).

7.5.2 Method

The most commonly used method of measuring substation earth resistance or impedance is the fall-of-potential method and this is described in BS EN 50522 UK National Annex C. It requires temporary electrodes to be installed in the ground some distance from the substation and connected back via trailing leads. A standard four-pole earth tester should be used (as opposed to a three-pole tester – refer to 7.5.4(e) to inject a small test current into the earth electrode and returned via a remote probe. A voltage gradient is set up around the electrode and a second probe is used to measure this with respect to the electrode voltage rise. The resistance is calculated and results are normally presented as a curve of resistance versus distance from the substation along a particular route. Voltage measurements may be taken along any route but traverses which are parallel or orthogonal to the current lead are most commonly used and are more readily interpreted using standard methods.

Most commercially available earth testers use a switched DC square wave signal. Where it is possible to select a very low switching frequency (below 5 Hz) the measured values will approach the DC resistance which will be accurate for small earth electrode systems in medium to high soil resistivity. When higher switching frequencies are used (128 Hz is common) inductive effects may be evident in the results. Where an appreciable inductive component is expected and long parallel test leads are used it is advisable to use an AC waveform, so that mutual coupling between the test lead may be subtracted and a true AC impedance obtained. Because of the appreciable standing voltage commonly found on live substation earth electrodes, AC test signals are normally selected to avoid the fundamental and harmonic frequencies. For the most accurate results, measurements should be taken using frequencies either side of the power frequency to allow interpolation. Additional guidance may be found in IEEE 81 (add ref).

It may not be possible to use the fall-of-potential method where no suitable routes exist for the test lead / probe set up, e.g. in urban or industrial areas. Alternative methods must be used in these locations as described in Section 7.6.

The substation earth resistance or impedance can also be measured by injecting a current from a generator connected to a remote substation earthing system via a de-energised power line. The rise in electrode potential is then measured with respect to another remote earth electrode such as a telecommunication circuit earth. This method is more costly in

2280 terms of equipment resources and circuit outages; it is rarely used in the UK. Experience has
2281 shown that care must be taken to ensure that there are no unwanted metallic paths between
2282 the substation electrode and either of the reference electrodes as this will divert current and
2283 introduce errors, unless the diverted current can be measured and a correction applied. This
2284 is especially difficult to achieve in urban environments, otherwise this technique would be a
2285 good option where no suitable area for a fall-of-potential measurement exist.

2286 7.5.3 Interpretation of Results

2287 Earth resistance or impedance measurement results are normally in the form of a series of
2288 points on a curve which must be interpreted using a mathematical rule or procedure. Care
2289 must be taken in selecting a suitable method and their limitations must be understood. More
2290 detail on the methods available is given in BS EN 50522 UK National Annex C.

2291 7.5.4 Sources of Error

2292 There are a number of sources of measurement error which must be considered when
2293 planning and carrying out these measurements. These include, but are not limited to:

2294 (a) influence of buried metallic structures such as bare cable armouring/sheaths, earth
2295 electrodes, pipes, etc. Measurements taken above or near buried metallic services
2296 will generally underestimate the substation resistance. Measurement locations must
2297 be carefully planned to avoid interference from metallic structures by consulting
2298 service records and, where there remains uncertainty, the use of scanning methods
2299 on site. Measurement results that have been influenced by a parallel buried metallic
2300 structure will typically be lower than expected and the resistance curve will be flat. A
2301 metallic structure crossing the measurement traverse at right-angles will result in a
2302 depression in the resistance curve. If interference is suspected the measurement
2303 should be repeated along a different route or an alternative method used;

2304 (b) the distance between the substation and the remote current probe is important to the
2305 accuracy of the measurement. The theoretical recommended distance is between five
2306 and ten times the maximum dimension of the earth electrode with the larger
2307 separations required where there is underlying rock. In practice, where there is
2308 insufficient land to achieve this, the current probe should be located as far away from
2309 the substation as possible. Measurements taken using relatively short distances
2310 between the substation and return electrode may not be accurately interpreted using
2311 standard methods and require analysis using more advanced methods. Typical
2312 distances used range from 400 m for standard 33/11 kV Primary Substations up to
2313 1000 m or greater for large transmission substations or for large combined systems;

2314 (c) interference caused by standing voltage ('noise') on a substation earthing system
2315 may result in standard earth testers failing to produce satisfactory results. This is
2316 normally evident as fluctuating readings, reduced resolution or via a warning/error
2317 message. Typical environments where this may be experienced include transmission
2318 substations (275 kV and 400 kV), railway supply substations or substations supplying
2319 large industrial processes such as arc furnaces or smelters;

2320 (d) results must be interpreted using an appropriate method and compared to
2321 calculations. Where there is significant difference further investigation is required.
2322 Detailed analysis using computer software may give greater accuracy for multi
2323 layered soils; the 61.8% rule or slope methods may not be appropriate in all
2324 circumstances;[MD to refine]

2325 (e) use of a three-pole earth tester is acceptable where the resistance of the single lead
2326 connecting the instrument to the electrode is insignificant compared to the electrode
2327 resistance. These instruments are generally suitable only for measuring small

Commented [RW17]: [WPD commented]: The text need to mention problems with Slope Method interpretation and 61.8% rule for multilayer soils. It is common for people not to appreciate the inaccuracies these approaches can introduce.

electrode components such as rods or a small group of rods in medium to high resistivity soils. For larger substations or low resistance electrodes a four-pole instrument is essential to eliminate the connecting lead resistances which would otherwise introduce a significant error.

7.6 Comparative Method of Measuring Earth Resistance

7.6.1 Objective

To measure the earth resistance of small individual electrode components within a large interconnected earthing system. This method is most effective where a relatively high resistance electrode is measured in comparison to a 'reference earthing system' which has a much lower resistance.

7.6.2 Method

Two different approaches may be used as follows:

- The first method, illustrated in Figure 12.1, requires that the electrode being tested is disconnected from the remainder of the substation earthing system, e.g. immediately after installation prior to the connection being made or via opening of a test link at existing sites. A standard four-pole earth tester may be used with terminals C1 and P1 connected to the electrode component being tested. Terminals C2 and P2 are connected to the 'reference earth'. Current is circulated around the earth loop containing the electrode and the reference earth resistances and the voltage developed across them is measured. Using Ohm's Law the series 'loop resistance' is calculated and if the reference earth resistance is sufficiently low relative to the electrode resistance the measured value will approach the electrode resistance.
- The second method, illustrated in Figure 12.2 uses a similar principle but does not require disconnection of the electrode. A clamp type meter is placed around the connection to the electrode which generates and measures current and voltage in the electrode loop and displays the 'loop resistance'. The advantage of this method is that the earth electrodes may be tested without disconnection hence avoiding the associated safety risks and the need to apply earth disconnection procedures. This is the preferred method for safety and facilities should be included in the design to allow access to rods for testing with a clamp meter.

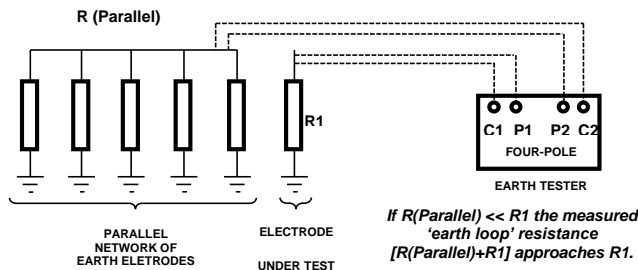



Figure 12.1 — Illustration of Earth Resistance Measurement using the Comparative Method and a Four-Pole Earth Tester (Test Electrode Disconnected).

Commented [PR18]: Rob- I think the figure heading should be in Caption but 10pt instead of 9 (it's the same a figure headings but 1 pt. down and not centrally aligned) I think the title should be above with the figure reference below?



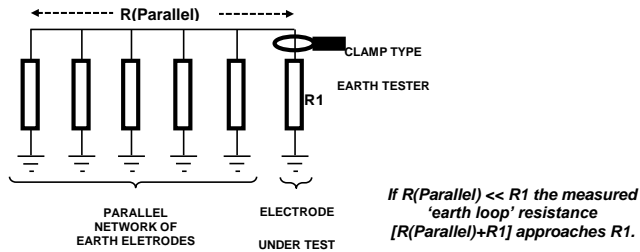


Figure 12.2 Illustration of Earth Resistance Measurement using the Comparative Method and a Clamp Type Resistance Meter (Test Electrode Connected)

7.6.3 Interpretation of Results

In order to accurately measure an electrode resistance via this method it is necessary to have a very low reference earthing system resistance compared to the electrode resistance (10% or lower is recommended). It is also necessary to have a reasonable physical separation between the electrode and reference earth to reduce mutual coupling through the soil.

If the reference earth resistance is too high the measured result will be significantly higher than the Electrode resistance (if it is known it can be subtracted). If the electrode and reference earths are too close together then a value lower than the electrode resistance may be measured. These errors may be acceptable if the purpose of the measurement is a maintenance check where it is only necessary to compare periodic readings with historical results to identify unexpected increases, e.g. due to corrosion or theft.

If several different electrodes can be tested with respect to the same reference earth more detailed interpretation methods may be developed to increase confidence in the individual electrode resistances and in some circumstances allow the reference earth resistance to be deduced.

7.6.4 Sources of Error

- If the reference earth resistance is too high relative to the electrode resistance the measured value may be significantly higher than the electrode resistance. An approximate assessment of this may be made by comparing the physical area covered by the respective earthing systems, e.g. a rod electrode measured with respect to a large substation earth grid would be expected to provide a reasonable accurate resistance for the rod electrode.
- Where the test electrode and reference earth are in close proximity to each other there will be significant mutual coupling via the soil which may result in an apparently lower reading than the true electrode resistance.
- The electrode under test may be inadvertently in contact with the reference electrode below ground level, or otherwise connected to it. The test current is then circulated around a loop and does not represent the intended earth electrode resistance.
- This method cannot be directly used to measure the overall substation earth resistance which requires the use of the fall-of-potential method described in Section 12.6.

7.7 Earth Connection Resistance Measurements (Equipment Bonding Tests)

7.7.1 Objective

To measure the resistance between a plant item and the main substation earth electrode to check bonding adequacy. This is essential during commissioning of a new substation to confirm that each item of plant is effectively connected to the earth electrode system. It is also useful as an on-going maintenance check and for operational procedures, e.g. post-theft surveys.

7.7.2 Method

The procedure is based upon the principle of measuring the resistance between a set point (or points) on the main electrode system and individual items of earthed equipment. A micro-ohmmeter is used and the connection arrangement is illustrated in Figure 12.3. Measurements can be taken from one central point (such as the switchgear earth bar) or, to avoid the use of unduly long leads, once a point is confirmed as being adequately connected, it can be used as a reference point for the next test and so on.

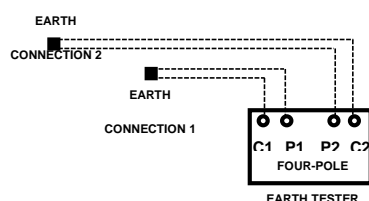


Figure 12.3 Connections for Earth Bonding Conductor Resistance Measurements

To establish that a satisfactory connection exists between the grid and any exposed metalwork it is necessary to measure in the micro-ohms or milli-ohms range. An injection current of at least 100 mA is recommended.

The probable path of the injected current must be considered and where the substation uses a bus-zone protection scheme care must be taken to ensure that any test current does not produce enough current to operate protection systems.

Special procedures must be adopted when checking bonding between a substation earthing electrode and a terminal transmission tower. If the bond is ineffective or missing a potential difference may exist which may pose a shock hazard or damage to a test instrument. Normally these methods will include checking current flow in the terminal tower legs prior to testing as a higher proportion of current will flow in a leg with an effective connection to the substation. This would be supplemented by voltage measurements using suitably insulated probes and meters and buried electrode location techniques.

7.7.3 Interpretation of Results

The measured resistance between the two connection points will depend on the length, cross-sectional area, material and number of earth conductors between them. Based on a maximum distance of 50 m between connection points, a threshold value of 20 mOhm will provide a good indication of when further investigation is required.

7.8 Earth Conductor Joint Resistance Measurements

7.8.1 Objective

To measure the resistance across an earth conductor joint to check its electrical integrity. This is normally performed for every joint created at a new substation prior to backfilling. It is also carried out during periodic maintenance assessments.

7.8.2 Method

The method described uses a micro-ohmmeter to measure electrical resistance and is suitable for bolted, compression, brazed and welded joints. It does not check the mechanical integrity of welds or for voids inside a joint.

Most micro-ohmmeters are supplied with standard leads with two sharp pins that can penetrate through paint or surface corrosion to reach the metal underneath. The first set of leads is connected to one side of the joint and the second set to the other as illustrated in Figure 12.4. Ideally, the connectors should be no more than 25 mm either side of the joint. A suitable scale must be selected on the instrument (normally a minimum current of 10 A is required to measure in the micro-Ohm range) and an average value recorded after the test polarity has been reversed.

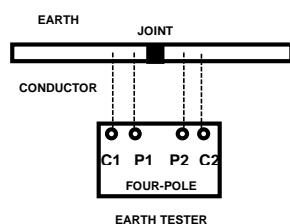


Figure 12.4 Connections for Earth Conductor Joint Resistance Measurements

Joints must also be mechanically robust and survive a firm tap with a steel hammer.

7.8.3 Interpretation of Results

The measured resistance should not significantly exceed that of an equivalent length of conductor without a joint. Joints which exceed this by more than 50% must be remade. Where different sized tapes are involved, the threshold value used should be that of the smaller tape.

At new installations it is recommended that a few sample joints are made under controlled conditions (e.g. in a workshop), their resistance measured and the median of these values used as the benchmark for all other similar joints made at the installation.

7.9 Earth Potential Measurements

7.9.1 Objective

To measure Touch, Step and Transfer Voltages (e.g. 'Hot Zones') for comparison with calculated values. These measurements may be required to confirm that the installed design complies with the main safety limits (see Section 4.4). Advanced techniques and equipment are required to perform these measurements at live substations and guidance on the different methods available can be found in IEEE 81 (add ref).

7.9.2 Method

Earth potential measurements may be measured by injecting a current into the substation electrode and returning through a remote electrode via a connecting conductor. The return electrode may be another substation electrode connected via a de-energised power line or a temporary test lead and set of probes. Providing the return electrode is located at a large distance from the substation (relative to the size of the substation electrode) a potential profile will be set up around the substation proportional to that which would exist during fault conditions. The voltage between the substation electrode and different points on the surface can then be measured and related to Touch Voltage. Step Voltage can also be determined from measurements of the potential difference between points on the surface which are 1 m apart. In both cases the actual touch voltage can be found by scaling in the ratio of the test current and fault current.

In a similar way, the potential gradients may be measured around the substation, for example emanating out from each corner, and equipotential contours derived to provide Hot Zone information. Measurements may also be carried out to determine the voltage transferred from a substation electrode to a nearby metallic structure, e.g. a steel pipe or the earthing system associated with a different electrical system.

7.9.3 Interpretation of Results

The measurement results must be interpreted by competent engineers and compared to calculated values. It is recommended that a series of measurements are taken at a number of locations around the substation where high touch or step voltages are expected (normally at the corners or in areas where the electrode mesh is less dense). This will enable the trends in the voltage gradients to be assessed to identify spurious data points. Where the return electrode is not located sufficiently far away from the test electrode large errors may be introduced. These errors may be corrected using a detailed computer model or by averaging the measurements obtained using different current return electrode locations.

7.10 Earth Electrode Separation Test

7.10.1 Objective

To assess the electrical separation of two electrodes in the soil by measurement, e.g. segregated HV and LV electrodes at an 11 kV distribution substation or a substation earth electrode and a separately earthed fence.

7.10.2 Method

This method requires that the earth resistances of the two electrodes (R_1 and R_2) have been measured separately using the fall-of-potential method described in Section 12.5.

Similar connections are then made as the bonding integrity checks (figure 12.3) and the 'earth loop' resistance (R_3) of the two electrodes via the ground is measured.

7.10.3 Interpretation of Results

If the two electrodes are separated by a large distance then the R_3 will approach the series resistance of $R_1 + R_2$. Lower measured values of R_3 indicate a degree of conductive coupling through the soil. Generally, for the purposes of checking satisfactory segregation of earth electrodes the following test is used: $R_3 > 0.9(R_1 + R_2)$. Values lower than $0.9(R_1 + R_2)$ may indicate inadequate separation and further investigation is required (refer to Section 9.7.3).

7.11 Buried Earth Electrode Location

7.11.1 Objective

At older substation sites, whilst an earthing system is in place, a record of its design may not exist or may be out of date. An earthing record is desirable to ensure that the design is satisfactory and to assist in the planning of new construction work. The record should include the position of the electrode, its burial depth, material, size and installation method (e.g. above ground, in ducts, or buried directly).

Where existing electrode needs to be located within live substations, surface detection methods are usually the lowest cost option.

7.11.2 Method

The most effective surface detection techniques, found by experience are documented below. This includes commercially available low to medium frequency systems and Ground Penetrating Radar (high frequency) systems. It should be noted that these methods are subject to interference from other buried services and often need to be supplemented by trial excavations.

A low to medium frequency system comprises a transmitter and receiver, working at frequencies from 50 Hz (detection of live mains cables) to nearly 100 kHz. The transmitter injects a signal into the earthing system which is to be traced (the "target line"). As this signal passes through the earth electrodes, it radiates an electric and magnetic field, one or both of which can be detected and interpreted by coils in the receiver. Basic receivers simply emit an audio tone as they are passed over the target line. More advanced receivers give information, such as burial depth and test current magnitude. This feature can sometimes enable one to distinguish between the target line and others which have erroneously picked up the transmitter's signal through coupling.

A ground penetrating radar system, used in conjunction with appropriate analysis software, can also be used to produce a reasonable graphical image of structures below the surface. Radar systems detect the dielectric contrast between a target and its surroundings and so are well suited for detecting conductive, metallic electrodes against soil which is relatively resistive. They are well suited to drained, high soil resistivity locations. The radar system is usually guided over the trace area in a grid pattern, with detection results being stored for later analysis by the computer.

Where neither of the above methods are conclusive, e.g. in areas with a high density of buried services, selected trial holes may be required.

8 MAINTENANCE

8.1 Introduction

Earthing systems shall be inspected, maintained and repaired so as to ensure they will operate in the manner required on an ongoing basis.

8.1.1 Inspection

This falls into two main categories:

- (a) Visual Inspection
- (b) Detailed Physical Examination and Testing

When setting inspection, testing and maintenance regimes for a substation consideration shall be given to identifying and where necessary rectifying issues arising from:

- physical deterioration and damage/theft;
- inappropriate installation alterations or third party actions which prejudice the principal of operation of the earthing system;
- inappropriate installation / design;
- changes to system operating regimes or construction which alter the magnitude, flow and / or duration of earth fault current to values outside the original earthing system design parameters;
- magnitude of EPR and how close touch and step potentials are to safety limits.

The frequency of inspection and testing should be set according to EPR, risk of theft, damage, and deterioration. It may be revised from time to time if circumstances change.

If an extraordinary event occurs (e.g. delayed fault clearance) then additional ad hoc inspection and testing may be required

8.1.2 Maintenance and Repairs

When undertaking repairs or minor alterations to damaged earth conductor and buried electrode the procedures adopted must take into account:

- Broken conductors may operate at elevated voltages even when the rest of the associated network is operating normally.
- The possibility of transient or sustained system earths fault occurring while repairs are being undertaken.

Inspection, testing and maintenance work must be undertaken in accordance with company operational and safety procedures. Where required risk assessments and method statements will be prepared. Inspectors must wear company specified personal protective equipment and only approach plant and equipment when it is safe to do so. See Sections 8.3 and 8.4 for further issues.

8.2 Types of Inspection

8.2.1 Introduction

The main types of inspection may be summarised as:

- a frequent basic visual inspection to check there is no visible damage, theft or obvious impairment of the earthing system;
- a less frequent and more detailed visual inspection to review the standard of construction and condition as well as checking for damage, theft and impairment;
- an infrequent more thorough visual inspection combined with testing, measurement and analysis.

For an open busbar substation typical areas to be inspected include earth connections associated with:

- aluminium, steel, concrete and wood structures;
- towers, earthed poles and above ground cable connections within or adjacent to the substation site.
- isolator mechanisms, fault-throwing switches, earth switches and control kiosks including associated surface and buried earth mats;
- transformers, reactors, VTs, CVTs, CTs, surge-arresters and arcing horns;
- transformer neutral links and switches and associated connections to earth either direct or via earthing resistors, reactors or earthing transformers;
- metallic Fencing and gates;
- indoor switchgear (if present) including connections to plant, cables, structural steel work and earth bars.

8.2.2 Frequent Visual Inspection

This can form part of a normal routine substation inspection procedure or be a part of the procedures operation staff conduct when entering a substation. The objective is to frequently and quickly check for visible damage, theft or obvious impairment of the earthing system.

During routine visual inspections accessible earth connections associated with key items of electrical plant in the substation should be checked. Procedures such as lifting trench covers will normally be avoided unless the initial inspection gives cause for concern.

8.2.3 Infrequent Detailed Visual Inspection

Before commencing a detailed examination, the substation earthing records should be checked to confirm they correspond to the actual layout. The inspector should be aware of the fence earthing arrangement and whether it is independently earthed or bonded to the earth grid or a mixture of both.

The key items covered in the Frequent Inspection plus all other accessible connections to plant, circuits and civil infrastructure should be inspected thoroughly. As well as condition, the standard of construction should be reviewed against present practices and any inadequacies reported. Checks for damage, theft and impairment of the earthing system should also be carried out. Visual checks should be carried out on less accessible earthing

conductors not covered in the Frequent Inspection such as those located under trench covers or located in basements.

The results of all inspections must be documented in accordance with company procedures.

A pre-prepared check list for each site will assist consistent reporting and record keeping.

8.2.4 Detailed Visual Inspection, Testing and Analysis

This consists of four related parts:

- A thorough detailed visual inspection and review of the earth connections to all electrical plant, circuits and civil infrastructure as per 8.2.3
- Carrying out specific testing and measurement of the earthing installation as per 8.2.4.1
- Selecting portions of the buried electrode system for examination via trial holes as per 8.2.4.2
- Analysis and recording of results including review of EPR related issues as per 8.2.4.3

8.2.4.1 Testing

See Section 7 for specific measurement and analysis techniques.

Testing may include:

- (i) Measurement of the overall substation earth resistance/impedance value;
- (ii) Measuring resistance of:
 - Individual earth electrodes
 - Rod and plate groups
 - Fence earth rods
 - Test electrodes (where fitted).
 - Surge arrester, CVT and GIS high frequency earths;
- (iii) Measurement of soil resistivity;
- (iv) Resistance tests across a representative sample of important joints using a micro-ohmmeter. The value should be recorded and compared with the values recommended by the manufacturer, or taken for similar joints elsewhere. Any joint where the resistance value is excessive will require to be broken down, cleaned and remade, or replaced;
- (v) Confirmation of continuity between key items such as transformers, switchgear, terminal tower(s) etc. and the main substation earth grid using a micro-ohmmeter. This is especially important for items where corrosion, theft or damage is considered to have prejudiced the integrity of the connection;
- (vi) Confirmation of continuity between adjacent site earthing systems;
- (vii) Confirmation of whether metallic fences are isolated from or bonded to the main substation earth grid by carrying out a separation test;
- (viii) For substations fitted with frame leakage earth fault protection checking the integrity of the segregation between earth zones by testing and/or visual

Commented [PR19]: G0 - Sub divisions of lists should be in Roman numerals, consider changing main list to a, b, c and sub to i, ii etc.

2663 inspection and also testing across cable terminations where island glands are
2664 fitted;

2665 (ix) Measurement of Soil pH value;

2666 (x) Tracing of buried electrode if required to update the substation earthing drawing;

2667 (xi) Segregation tests and review of segregation between distribution substation HV
2668 and LV earths. (Refer to Sections 7.10 and 9.7);

2669 8.2.4.2 Selected Excavation and Examination of Buried Earth Electrode

2670 Since the earth electrode system is largely buried, it is impracticable to carry out a detailed
2671 examination of the whole installation. However, it cannot be assumed that the buried
2672 electrode system, once installed will remain in good condition.

2673 Particularly where a substation site is associated with former industrial use such as a coal
2674 power station or foundry which may have produced corrosive material used as landfill there
2675 is enhanced risk of corrosion of buried copper conductor. A similar risk may also arise if
2676 material from such sites is imported to construct a substation. It is recommended that
2677 representative locations be chosen to excavate and expose the buried electrode, in order to
2678 check its condition.

2679 These should include some below ground connections, e.g. an earth rod connection position,
2680 or other locations where the electrode is jointed. Several connections from above ground
2681 plant should be uncovered back to the connection to the buried earth tape/grid, to check their
2682 condition through the layers of chippings and soil. Conductor size should be compared with
2683 records.

2684 Whilst carrying out excavation, the soil pH value should be checked. This should lie between
2685 6.0 and 10.0. For pH values outside these limits, it is probable that corrosion of the copper
2686 conductors/connectors will be evident. In the past, power station ash has been used as
2687 bedding for earth electrodes. This is known to be acidic, and is likely to cause corrosion of
2688 the conductors.

2689 Where tests show the pH value of the soil to be outside the limits, if the copper electrode is
2690 corroded, then repairs or a new electrode system and either some imported soil or an inert
2691 backfill (such as bentonite) is required. If the electrode has limited corrosion, then a soil /
2692 corrosion investigation is necessary to assess the risk of future corrosion and any
2693 precautions necessary. Normally the corrosion rate will be uneven, with severe corrosion in
2694 some areas and none in others. Severely corroded electrodes will need to be replaced, whilst
2695 that elsewhere will need to be monitored and measures taken to limit corrosion in all
2696 important areas.

2697 Should examination of the exposed conductors or connections give cause for concern, then
2698 additional excavations elsewhere on site may be necessary to assess the extent of the
2699 problem.

2700 8.2.4.3 Analysis and Recording of Test Results

2701 Resistance values for the substation, individual electrode groups and for joints should be
2702 recorded and where previous values are available compared to indicate any trend.

2703 The earthing drawing should be updated if required with revised electrode sizes and
2704 positions.

2705 Once a new substation earth resistance is obtained it should be used to recalculate the
2706 substation EPR using up to date earth fault current data and earth fault current return paths

2707 (earth wires/cable sheaths etc). Safety voltages and conductor current ratings should be
2708 recalculated and any deficiencies identified.

2709 The presence (or otherwise), values and configuration of any resistances / impedances
2710 placed in high voltage transformer neutrals should be recorded and aligned with those
2711 contained in the company power system model.

2712 Defects should be listed and prioritised for remedial action.

2713 **8.3 Maintenance and Repair of Earthing Systems**

2714 In some cases, earthing related maintenance and repair work will be reactive, following theft
2715 or damage revealed by an inspection.

2716 Before undertaking earthing system repair or measurement work, the responsible person in
2717 charge of the work must familiarise themselves with the site specific risks and consequences
2718 of:

- 2719 • Working on or touching unsound earthing systems;
- 2720 • Open circuiting (even for a short time) earth conductor circuits;
- 2721 • Extending (even temporally) earthing systems from sites where touch and step potentials
2722 are controlled;
- 2723 • Working on broken earthing conductors;
- 2724 • An earth fault occurring on the system being worked on. For primary substations
2725 supplying extended high voltage rural overhead line networks this can be a relatively
2726 frequent occurrence (e.g. at least once a week). Supervisors should avoid work or testing
2727 being carried out in high risk periods such as during storms or fault switching.

2728 There is risk of serious or fatal electric shock when working on intact and depleted/damaged
2729 earthing systems. The responsible person in charge of any remedial work should be suitably
2730 qualified to undertake this area of work. Network Operators should develop their own
2731 policies/procedures for dealing with depleted earthing systems.

2732 Specialised equipment including insulated rods, shorting leads and conductor clamps are
2733 required to make repairs. PPE including insulated footwear and gloves must be available if
2734 required.

2735 High voltages can appear on earth system conductors even under normal running conditions.
2736 Items requiring particular caution include connections associated with CVTs, transformer
2737 neutrals, underground cable bonding arrangements and connections between main earth
2738 grids and overhead line towers.

2739 Examples of situations requiring remedial work include:

- 2740 • broken or damaged below ground earthing conductors which have been exposed in the
2741 course of excavation work;
- 2742 • broken or damaged bonding conductors on underground cable systems (such as cross-
2743 bonding connections that can be expected to carry significant current under normal
2744 operating conditions);
- 2745 • repairs to/replacement of high resistance earth connections (Para 8.4);
- 2746 • minor alterations to/diversions of earthing systems for construction work;

- repairs after theft of earthing conductors (Remedial work on depleted earthing systems is normally the subject of a bespoke company instruction and is outside the scope of this document).

8.4 Procedure for the Remaking Defective Joints or Repairing Conductor Breaks

8.4.1 Introduction

It may be necessary to remake a joint or repair a break on the earth electrode system at a substation for a number of reasons:

- (a) The joint is obviously damaged.
- (b) The joint has failed a micro-ohmmeter test.
- (c) An earth electrode has been severed.
- (d) A minor diversion of the electrode system or other repair work may be proposed.

Should a fault occur during the period when a repair is being carried out, to prevent danger from a high voltage, which could appear across the joint, precautions must be taken.

The design of the earth grid (if present) may or may not be adequate to eliminate danger to personnel when touching a bare broken conductor even after a temporary earth continuity conductor has been applied.

Before carrying out any repairs, the joint or break to be repaired must be short-circuited by connecting a fully-rated conductor to positions either side of the break or defective joint. This short must be applied using an approved procedure involving insulated rods.

If company policy so states or any doubt exists the operator shall wear insulating footwear and gloves designed for electrical application when handling earth conductor to make a permanent repair.

Whilst carrying out work, the operator should stand within the boundaries of the earth grid, or immediately above a bare buried earth conductor.

For example, if a terminal tower earth connection is broken, a significant potential difference may be present between the tower and earth grid. Arcing and current flow will occur when trying to remake the connection. Insulated rods and approved connectors are required to apply the initial short-circuit. The repairs, as detailed in the next paragraph, can then be carried out.

Similarly high voltages may appear across open circuited cross bonding conductors on high voltage underground cable circuits.

8.4.2 Joint Repair Methods

- (i) Compression Joint – Cannot be repaired, must be replaced.
- (ii) Mechanical Connector - Disconnect, clean all contact surfaces, apply a company approved contact lubricant, reconnect and re-tighten.
- (iii) Cold-weld/Exothermic weld Joint - If defective this type of joint must be replaced.

On completion of repair of any joint, having first connected the instrument across the joint, the temporary earth continuity conductor* should be removed; a micro-ohmmeter resistance test must then be carried out across the joint.

2787 * Shorting strap

2788 **8.4.3 Flexible Braids**

2789 Flexible bonding braids or laminations should be inspected for signs of fracture and corrosion
2790 and changed as required. A protective compound may be applied to flexible braids where
2791 corrosive conditions exist.

9 Ground Mounted Distribution Substation Earthing

9.1 Introduction

Whilst the general principles of earthing can be applied to all voltage levels, small (distribution) substations providing supply to LV networks can present their own additional challenges. The key earthing related differences between distribution (or 'secondary') substations, and larger ('primary', or 'grid' substations) include:

- high voltage distribution apparatus is often located in densely populated areas in close proximity to the public;
- earth fault clearance times on distribution systems are usually longer;
- many older 'legacy' installations do not have the benefit of a comprehensive earth grid environment, as they rely on metallic sheath cable systems to control touch and step potentials;
- low-voltage earth connections may be combined with HV earthing systems, or in close proximity to them;
- connections from the low voltage distribution system are taken into almost every property;
- for new connections distribution network operators have a legal obligation to provide a low voltage earth terminal to their customers as long as it is safe to do so;
- the low voltage system must be earthed such that earth potential rise due to high voltage earth faults does not cause shock or injury (to installation users, public or staff) or damage to internal electrical installations, distribution equipment or telecommunication systems.

The design issues, therefore, can be summarised as: a) achieving safety in and around the HV:LV substation, and b) ensuring that danger does not arise on the LV system as a consequence of HV faults.

The design approach outlined in Section 5.1 applies equally to distribution substations, and special considerations are described below.

9.2 Relocation of Pole Mounted Equipment to Ground Level

Due to the high EPR that can appear on pole mounted equipment, metallic items must not be re-located at ground level (e.g. replacing a pole transformer with a small padmount substation) without appropriate modifications to the earthing system.

Ground mounted substations will introduce a touch potential risk that is absent from pole mounted installations, and consequently require an electrode system that not only limits EPR, but controls touch and step voltages to safe limits.

Similarly, care should be exercised if other earthed equipment on the pole (e.g. auto-reclose relay cabinet) is within reach of those on the ground.

Section 10 describes pole mounted installations in detail. In either case, the decision to operate with combined HV and LV, or otherwise, must consider the voltage that will be impressed on the LV system under HV fault conditions (Section 9.5).

9.3 General design requirements

In common with any earthing system, the design of any new build substation must satisfy requirements for EPR, touch/step voltages, transfer voltages, and stress voltages. If major

changes are to be made to an existing substation, the effects of these proposed changes on the existing earthing system need to be considered. A significant consideration in all cases is the transfer potential that will be impressed on the LV network under HV fault conditions. See 9.5

9.3.1 Design Data Requirements

The data required is similar to that described in Section 5.5, as necessary to determine the current flow into the electrode system, and the fault duration. These include:

- 1) fault level at the new substation, or at the source (primary);
- 2) resistance of the earthing system at the primary substation (R_a), and at the new distribution substation (R_b);
- 3) circuit length and cable type(s);
- 4) whether there is any overhead line in the circuit.

For worst case studies, if there is any overhead line, the ground return current (I_{gr}) can be assumed equal to the earth fault current at the distribution substation (i.e. $I_{gr}\% = 100\%$).

9.3.2 Conductor and electrode sizing [New]

Earth conductors at distribution substations will usually connect key items of plant such as transformer(s), ring main unit / switchgear, and low voltage cabinets. In many 'unit substations' these items may be supplied with bonding connections in place. These bonds must be sized as described in 5.6.1; in general they must be sized for the maximum foreseeable earth fault level. For ASC systems the limited ASC current must not be used. DNOs may wish to use the earth fault level at the primary substation, or higher value allowing for growth and uncertainty, up to the 3-phase fault current.

Electrodes must have sufficient surface area to meet the requirements of Sections 5.5.4 and 5.6.2. The worst case foreseeable 'electrode current' should be used for design purposes, this may be taken as the maximum earth-fault current at the substation or its source, or the larger of cross-country fault current or bypass fault current on ASC systems.

Note: If detailed modelling of current distribution is carried out, it will be seen that the 'ground return current', if calculated using a contribution from a wide area network, will be significantly higher than the local 'electrode current'. The electrode current or ground return currents may be used for electrode design purposes, providing that connection to the wider network contribution is reliable. If any doubt exists as to the prolonged integrity of sheath return paths and/or auxiliary electrode connections, the larger earth fault level (calculated for a zero ohm fault) should be used.

9.3.3 Target resistance

A HV electrode system must be established for the substation, that is of sufficiently low resistance to ensure reliable protection operation and to limit EPR (and touch/step voltages) to acceptable levels. The design process in this respect is no different to that outlined in Section 5.4. The resistance that must be achieved is termed the 'target resistance', and may be specified with and without contribution from parallel systems. Use of a target resistance for the substation's earthing system, which ensures compliance with the safety criteria, is useful as it is a more readily understood parameter that can be achieved and tested by installers. 'Network contribution' is discussed in Section 9.4.3.

For ground mounted substations, traditional custom and practice (permitted by previous versions of this standard) was to apply a target resistance (before connection to the network) of 1 ohm. If this could be achieved, it was permissible to combine the HV and LV earthing systems. No perimeter or grading electrodes were installed in such 'legacy' systems, and often only one vertical rod or horizontal electrode would be installed. This approach relied

Commented [PR20]: All lists starting with a colon with incomplete sentences no full stops (except on the last line) or capitals.G0 pg.25

2879 heavily on contributions from lead sheathed cables radiating away from the substation, and
2880 often passing under the operator's position. In this way, these cables provided a degree of
2881 potential grading (thus reducing touch potentials) as well as reducing the overall (combined)
2882 earth resistance of the substation. Experience has shown that this approach is no longer
2883 applicable, particularly given the now widespread use of polymeric (insulated sheath) cables.

2884 Network operators may find that different 'target values' for earth resistance are generally
2885 applicable in different geographical areas, and for overhead or underground networks, and
2886 thus may choose to adopt a 'rule of thumb' to assist designers and other connections
2887 providers. In any case, calculations or measurements sufficient to demonstrate that the
2888 installed system will be safe must be carried out at the design stage. Refer to 9.3.7.

2889 Target resistance values should consider all foreseeable running arrangements or network
2890 configurations, especially if the network is automated or remote controlled. Refer to Section
2891 9.9.

2892 9.3.4 EPR design limit

2893 A natural EPR design limit is imposed by a) consideration of transfer voltage onto the LV
2894 systems for combined HV/LV systems, and b) insulation withstand (stress voltage) between
2895 the HV and LV systems for segregated systems. See section 9.5 for more detail regarding
2896 separation distances. These considerations may for example, lead to typical design EPR
2897 limits of 3 kV (or higher, depending on equipment withstand voltage) for segregated systems,
2898 and 466 V* for combined systems.

2899 9.3.5 Calculation of EPR

2900 The EPR for a distribution substation, for faults at that substation, is calculated in the
2901 conventional manner, i.e. by multiplying the ground return current by the overall (combined)
2902 substation earth resistance.

2903 9.3.5.1 Factors to consider:

2904 The ground return current value is influenced by the earth fault current 'split' between the soil
2905 return path and the cable sheath. The impedance of the cable sheath(s) is made up of a 'self
2906 impedance' (fixed), and a 'mutual impedance' that is dependent on a number of factors.

2907 The earth fault current is influenced by the resistance of the earthing system and the
2908 impedance of the cable sheath. The source impedance (primary substation), the resistance
2909 of the primary substation earthing system, and in particular the method of neutral earthing
2910 will have an effect.

2911 For most accuracy, some form of iterative calculation or computer model will be required to
2912 explore the relationship between fault current, EPR, and substation resistance. However, in
2913 any such design there are often other factors or unknowns / variables which may be of more
2914 significance. For this reason it may be sufficient for a design to err on the side of caution by
2915 using a 'zero-ohm' earth fault level (the maximum theoretical fault level at the distribution
2916 substation calculated using zero sequence impedances for the circuit). Fault impedance can
2917 then be introduced only if necessary to achieve an economic or practicable solution.

2918 ENA EREC S34 provides a detailed discussion of EPR calculations and includes worked
2919 examples to assist with the calculation of ground return current.

Commented [MD21]: Check if this is covered in S.34 and if so delete from 41-24

* This value is 2x the 1 second touch voltage limit of 233 volts, and replaces the previous design figure of 430 Volts.

9.3.5.2 Transfer Potential from source

A second contribution to EPR comes from **Transfer Potential** 'exported' from the source substation, since any EPR at the source will be conveyed along the cable sheath and will appear (in part) at the new substation.

Transfer potential need not be considered if there is any overhead line in the circuit, or if the new substation is not the first on the feeder and transfer potential is known to be of no significance at previous distribution substations.

In determining the acceptable transfer potential from source, the relevant protection clearance time at the source should be used in touch/step calculations.

9.3.6 **Step/Touch Potentials at the Substation**

Many network operators or connection providers opt for a 'standard' design of distribution substation, and it is possible to establish, by modelling or calculation, the step and touch potentials as a % of EPR for each 'standard' layout. These values are influenced to a small degree by the depth of rods and the proximity of other earthed metalwork, but for design purposes can be taken as fixed for each layout. Typical values for touch potential within a 3x3m 'unit substation' that has a perimeter 'grading ring' and corner electrodes are 20-40% of EPR. A substation built on a fine (and bonded) rebar mesh might present a touch voltage in the region of 10% or less of EPR.

Substations that employ a single rod electrode, or similar 'legacy' design, are unlikely to limit touch potentials to less than 75% of EPR away from the electrode, and may have unacceptably high step potentials (gradients) in the vicinity of the electrode, depending on its depth of burial. Computer modelling using an appropriate package and soil model will normally be necessary to demonstrate safety unless the system is simple enough to permit 'first principle' calculations such as those presented in EREC S34 or other relevant standards.

The appropriate design limits for touch and step potential are given in Table 2 and are dependent on normal (calculated or worst case) protection operation.

9.3.7 **Simplified approach**

In some cases, a safe system can be achieved without detailed design calculations; DNOs may wish to instead adopt simple rules in certain geographic areas, provided these rules can be shown to produce a site with acceptable touch, step and transfer voltages. For example, a 'standard' layout (perhaps consisting of a perimeter electrode and corner rods) might be appropriate if:

- a) 11 kV fault current is limited by reactor or resistor, and;
- b) there is a continuous cable connection to the primary substation, and;
- c) there is interconnection to the wider (HV and LV) network, and;
- d) the transfer potential from the Primary Substation is below the permissible touch voltage (taking into consideration clearance times at the primary);
- e) there is some 'potential grading' to limit step/touch to 50% or less of EPR (this assumes that site EPR will not exceed 2x permissible touch voltage limits).

This approach is broadly consistent with that outlined in the design flowchart (Section 5.1).

2962 Circumstances where the simplified approach is not appropriate:

2963 More detailed assessments might be needed if one or more of the following apply:

- 2964 a) there is any overhead line in circuit, or other break in the earth-return path;
- 2965 b) the substation is not interconnected to the HV or LV network;
- 2966 c) the secondary winding of the main transformer at the primary substation is solidly
2967 earthed.
- 2968 d) dedicated earth fault protection is not installed;
- 2969 e) the primary substation is a site where the EPR is greater than twice the permissible
2970 touch voltage limit for the applicable fault clearance times and there is a cable
2971 connection giving a transfer voltage consideration.

2972 In difficult circumstances a 'HPR*' but 'Safe (step/touch) voltage' design is allowable by
2973 appropriate use of grading electrode/mesh to control step and touch voltages. Alternatively,
2974 the EPR may be reduced by appropriate means (refer to Section 5.7.2 - Methods to improve
2975 design).

2976 * High (earth) Potential Rise

2977 **9.4 Network and other contributions**

2978 Distribution substations are commonly connected to larger metallic systems which can serve
2979 as an electrode. The following sub-sections describe typical contributions which may be
2980 included in design calculations.

2981 **9.4.1 Additional Electrode**

2982 In many cases it will be possible to supplement the substation's electrode system by laying
2983 bare copper, or a long 'rod nest' beneath incoming or outgoing cables (subject to
2984 separation/segregation where required), although when there are several parties involved in
2985 a project it may not be possible for the substation installer to do so without agreement with
2986 the cable installers (and landowners) at the design stage. Test facilities (e.g. an accessible
2987 loop) may be provided so that the integrity of buried horizontal electrode can be tested
2988 periodically.

2989 Electrode contribution such as this may be considered in calculations for EPR, touch/step
2990 voltages, and surface current density. It should not be included in design calculations if it is
2991 vulnerable to theft and/or damage. Suitable precautions should be taken to ensure the
2992 integrity of any such connections if they are safety critical.

2993 **9.4.2 Parallel contributions from interconnected HV and LV networks**

2994 If it is not practicable to achieve a 'safe' (compliant) design based on HV electrode (and
2995 additional electrode) contribution alone, then a reasonable 'parallel' contribution from the HV
2996 network may be included in the design (Section 9.4.3 below). However, this '**network
2997 contribution**' must not be the sole means of earthing and it is recommended that the local
2998 (HV) electrode contribution does not exceed **40 Ohms** or value sufficient to ensure reliable
2999 protection operation. In this way, there is some protection against failure of cable
3000 sheath/glands.

3001 The LV network contribution may also be used if it can be shown that it is safe to combine
3002 the HV and LV networks. Consideration should be given to the magnitude of fault current
3003 that will flow into other (parallel) systems, particularly in the case of solidly earthed HV

3004 systems, to ensure that the thermal ratings of any conductor or cable sheath are not
3005 exceeded.

3006 The thermal rating and surface current density requirements of sections 0 and **Error!**
3007 **Reference source not found.** should ideally be satisfied where possible without reliance on
3008 network contribution, thus allowing the earthing system to withstand fault current without
3009 damage should the cable sheath/gland connections fail.

3010 9.4.3 Ascertaining Network Contribution

3011 The HV network or LV network, (if applicable), can serve as an effective electrode system,
3012 and will provide a reduction in earth resistance when combined with the substation earth.

3013 The 'Network Contribution' element is difficult to establish accurately at the design stage, and
3014 measurements of the LV and HV network may be necessary to inform the design. However,
3015 due to the relatively routine nature of most **11 kV** (or HV) connections, a conservative
3016 estimate is often made to expedite the design process.

3017 The contribution from the network is (for older networks) made up of horizontal electrodes
3018 (un-insulated cable sheaths) and 'point' electrodes at distribution substations.

3019 The cable connected distribution substations (whether connected with polymeric HV cables
3020 or otherwise) can be modelled as a 'ladder network', with cable sheath impedances forming
3021 the series elements, and earth electrode resistances forming the parallel parts. This is
3022 termed the 'chain impedance', and is akin to the treatment of metal EHV towers in ENA
3023 **EREC S34**. The 'chain impedance' contribution from the HV network substations falls as
3024 distance increases from the new substation. In practice the substations within a 1-2 km
3025 radius are those which need to be considered.

3026 The 'horizontal electrode' contribution from any lead sheathed or hessian served HV cable
3027 sheaths can be treated in the same way as a buried horizontal conductor (**EREC S.34**). In
3028 practice, each conductor will have an effective length, beyond which no additional
3029 contribution can be assumed. A practical HV network will radiate from a substation in more
3030 than one direction, and a contribution can be assumed from each 'leg' provided their areas of
3031 influence do not overlap. In cases of doubt, these systems should be modelled using
3032 appropriate computer software, or measurements carried out (taking care to use a method
3033 appropriate to the size of the network).

3034 Calculated values for network contribution are often pessimistic in dense urban areas, where
3035 numerous parallel contributions (such as water and gas pipes, building foundations, etc.)
3036 may exist. If this is so, the designer may commission a measurement of network contribution
3037 (if possible), or may use an estimated value for network contribution, or may be able to
3038 demonstrate that the area is a Global Earthing System (GES) – see next section.

3039 **[Include reference to worked example here – focussing on 'ladder network' for distribution s/s**
3040 **with plastic sheathed cables – or to S34?]**

3041 9.4.4 Global Earthing Systems

3042 A 'Global Earthing System' (GES), is a system where all equipment is bonded together, and
3043 the ground is saturated with metallic 'electrode contributions' in the form of metallic cable
3044 sheaths or bare conductors laid direct in soil. In such a system, the voltage on the surface of
3045 the soil will rise in sympathy with that of bonded HV steelwork under fault conditions, and the
3046 voltage differences (leading to touch voltage risk) are minimal. The term is often used to
3047 describe dense urban networks where measurements or detailed calculation of network
3048 contribution is not practical. Refer to annex O (informative) in BS EN 50522-1 for more
3049 detail.

Commented [RW22]: Remove duplication – already said earlier

3050 Network operators may wish to designate certain geographic areas as 'GES', in which case
3051 they will need to carry out measurements or analysis to demonstrate that the designation is
3052 appropriate. In addition they should carry out calculations to assess the 'target resistance'
3053 required in these areas; this is most easily achieved by assuming a low value of network
3054 contribution and designing an electrode system that is sufficient to satisfy protection
3055 operation, current density and thermal ratings in the absence of this network contribution. A
3056 standard design using perimeter electrode/rebar mesh etc. is usually still warranted for these
3057 reasons, using an appropriate resistance value to ensure safety.

3058 GES networks by definition operate with combined HV/LV earthing. It should be noted that
3059 touch potentials in GES networks can arise from transferred sources that may not be locally
3060 bonded, e.g. cable sheaths bonded to remote systems, metallic gas/water pipes with
3061 insulated covering, **pilot** communications cables, and HV or LV insulated sheathed cables
3062 connected to metallic plant that is not bonded to the local 'global' earthing system. Such
3063 arrangements can cause 'islands' of higher potential inside a 'GES', and thus the benefits of
3064 a GES do not apply.

3065 **9.5 Transfer Potential onto LV network**

3066 **9.5.1 General**

3067 ESQC Regulations (2002) require that danger will not arise on the LV system as a
3068 consequence of HV faults. In practice, this means that the HV and LV earthing systems must
3069 be separated if the HV EPR cannot be limited to the applicable limit.

3070 NOTE: Previously, a design limit of 430 V has been applied, i.e. the HV and LV systems could be combined if the
3071 HV EPR was ≤ 430 V; in practice, this EPR would be impressed on the LV neutral/earth (star point). The voltage
3072 ultimately transferred to a consumer's LV earth terminal would be less than this, and the touch voltage appearing
3073 within an installation would be even lower.

3074 **9.5.2 Touch voltage on LV system as a result of HV faults**

3075 EN 50522 Section 6.1 Table 2 introduces the concept of 'F' factors. In order to combine HV
3076 and LV earthing systems, the HV EPR must not exceed $F \times U_{Tp}$, where U_{Tp} is the acceptable
3077 touch voltage as a function of HV fault clearance time.

3078 The 'F' factor described above relates to the percentage of EPR that will appear as a touch
3079 voltage on the LV network; it relates to the potential grading that will occur within an
3080 installation, as well as the decay in exported potential along a multiple earthed neutral
3081 conductor. The resultant touch voltage within the consumer's installation is necessarily
3082 subject to a number of factors beyond the control of any network operator.

3083 It is recommended that in the UK, a value of $F = 2$ is used unless:

- 3084 • The LV neutral/earth conductor is earthed at only one point, and:
- 3085 • The LV supplies only a small system that is isolated from the general mass of earth (e.g.
3086 a metal pillar on a concrete plinth without outgoing circuits).

3087 In such circumstances note (d) of EN 50522 Table 2 applies, which states: "*If the PEN or
3088 neutral conductor of the low voltage system is connected to earth only at the HV earthing
3089 system, the value of F shall be 1.*"

3090 In such circumstances a reduced EPR limit is applicable (e.g. 233 volts for a 1 second fault,
3091 see Table 1) because it must be assumed that the full EPR could appear as a touch voltage.

3092 In practice, for typical arrangements in the UK where $F = 2$, the HV EPR must not exceed
3093 466 volts if the systems are to be combined. This assumes a 1 second fault clearance time.
3094 Lower limits will apply for longer fault durations.

9.5.3 Stress Voltage

The Stress Voltage is the voltage across any two points in a substation or connected circuits. The Stress Voltage Limit relates to the insulation withstand requirement of cables and equipment.

If HV and LV systems are combined then stress voltage limits are unlikely to be exceeded in the substation.

For segregated HV and LV systems, stress voltage includes the difference in potential between the HV and LV earths, and may be assumed equal to the EPR of the substation. Typically this needs to be considered in the insulation withstand of the LV neutral bushing, LV neutral busbar supports, and LV cable screen where these are in close proximity to HV steelwork (a value of 3 kV or more is often quoted for modern equipment).

Care is needed if bringing (remotely earthed) LV supplies into such sites, particularly if feeding into metal equipment cabinets that are earthed to HV steelwork. In such circumstances the insulation withstand within the equipment should be verified to ensure that that breakdown between LV phase/neutral/earth and HV steelwork cannot occur internally. Isolation transformers may be required to ensure that HV and LV systems do not flash across under HV fault conditions.

Where these criteria are met, the requirements of BS EN 50522 (Table 2) will be achieved.

9.6 Combined HV and LV earthing

HV and LV earthing systems will generally be combined if the EPR on HV steelwork does not exceed LV transfer voltage limits described above (Section 9.5).

In general:

- combine HV & LV earths if voltage rise due to an HV or EHV earth fault is safe to apply to the transformer LV earth;
- segregate HV & LV earths if voltage rise on LV transformer earth is unacceptable.

A substation with EPR limited to 466V will usually be suitable for combined earthing if supplying a PME network*. This limit is subject to the caveats described in Section 9.5.2.

9.7 Segregated HV and LV earthing

For segregated earth systems, it is necessary to ensure that the LV electrode system is sited at sufficient distance from the HV electrode so that the voltage rise on the LV network is acceptable.

9.7.1 Separation Distance

Table 11 below provide an approximate minimum separation distance based on the EPR and acceptable LV transfer limits. The values are not significantly dependent on soil resistivity once the EPR is known, although a uniform soil model is assumed.

The tables are calculated for 3x3m substations and 5x5m substations, assuming both have a perimeter electrode. These are calculated values as given by EREC S34 Equation P3. They have been compared with modelled results (for uniform soil) and the most conservative values are presented in these tables; this represents the voltage contour furthest from the

* A factor of 2 can be assumed for PME networks compliant with ENA ER G12/4, i.e. the voltage appearing at the customer's earth terminal is expected to be no more than 50% of the substation EPR. This paragraph also assumes that HV faults will clear within 1 second.

substation, such that any LV electrode beyond this distance from the substation boundary will be at or below the stated V_x figure under HV fault conditions.

Table 11 - Separation distance (m) from 3x3m substation.

V_x (V) \ EPR(V)	1000	2000	3000	5000
233	3.0	7.6	12.2	21.5
324	1.8	5.0	8.3	15.0
376	1.4	4.2	7.0	12.7
466	0.8	3.0	5.3	9.9

Table 12 – Separation distance (m) from 5x5m substation.

V_x (V) \ EPR(V)	1000	2000	3000	5000
233	5.0	12.7	20.4	35.8
324	3.0	8.4	13.9	25.0
376	2.3	6.9	11.7	21.2
466	1.4	5.1	8.9	16.6

NOTE: The following voltage limits are tabulated. For other values refer to Table 1:

233 V = 1 second touch voltage limit (or EPR limit with $F=1$);
324 V = 162 V x 2, EPR limit applicable to 3 second faults with $F=2$;
376 V = 188 V x 2, EPR limit applicable to 1.5 second faults with $F=2$;
466 V = 233 V x 2, EPR limit applicable to 1 second faults with $F=1$.

These figures relate to the distance of the voltage contour at its furthest point from the substation; in some cases (multiple earthed systems) the first LV neutral/earth electrode may be sited inside the appropriate contour, refer to Section 9.7.4 and to worked examples in ENA EREC S34.

9.7.2 Transfer voltage to third parties

For substations that are close to third parties, refer to Section 4.3.3. Consideration must be given to railways, pipelines, telecommunications, cable TV, etc. if such utilities pass through an area of high potential. The formulae in EREC S34 (ref xxx) may be used to provide an indication of the EPR that may be transferred to nearby objects.

9.7.3 Further Considerations

The precise separation distance to be maintained between the HV and LV earthing systems is dependent on the EPR, the soil layer structure, and the physical layout of the earth electrodes. If necessary, it should be calculated during the design phase using the methods contained in **EREC S34** or via detailed simulation and must include the effect of electrodes located away from the substation (See Section 9.7.4).

For existing substations or during commissioning of a new installation the transfer potential should be determined by measurement where practicable to confirm the calculated value. A 'Separation Factor' of 0.9 or greater should be achieved (as described in Section 7.10).

9.7.4 Multiple LV electrodes on segregated systems

The separation distances above are those relating to the potential contour, such that the LV electrode(s) is/are sited beyond this. In practice, if these distances cannot be maintained, one or more electrodes on a multiple earthed neutral (e.g. PME system) may be sited within a higher voltage contour (but no closer than 3m) provided that the majority of the PME LV electrodes are sited beyond this. An above ground separation of 2m or more must be maintained to prevent simultaneous (hand-hand) contact between the systems.

This assumes that the remainder of the LV system as a whole will have a resistance lower than that of the LV neutral electrode. The LV earthing system will have a 'centre of gravity' that lies outside the relevant contour, i.e. the transfer voltage will be the weighted average of that appearing at all LV electrodes. Any design based on these assumptions should be backed up by a measurement of separation factor for the installed arrangement.

Refer also to **EREC S34** for calculations / worked examples.

This relaxation does not apply to SNE systems or PNB systems where the neutral/earth is earthed at only one point.

Where calculations based on the local LV electrode (closest to the substation) indicate impractical separation distances or excessive transfer potentials, the design should be reviewed and further LV electrodes installed at the end of LV feeder cables, connected via the neutral earth conductor. To maximise this beneficial effect, they should be located as far away from the HV electrode as possible and have a lower resistance than the LV electrode at the substation.

9.8 Situations where HV/LV systems cannot be segregated

In some situations it is not possible to segregate HV and LV systems safely without additional measures. One example is where an LV system exists within a HV system, or there are other similar physical constraints meaning that systems cannot reasonably be kept apart. Refer to BS EN 50522.

In such circumstances, consideration should be given to combining the HV and LV systems and augmenting the electrode system(s) such that EPR and HV-LV transfer voltage is acceptable. If this is not practical, insulated mats/barriers could be considered in relevant areas.

If necessary, the building or area could operate with a combined HV/LV system, safely yet with a high EPR provided all sources of transfer potential into/out of the 'high EPR area' can be excluded, and touch voltages are managed in and around the building. Refer to guidance on stress voltage given in Section 9.5.3 above.

9.9 Practical Considerations

HV networks are usually capable of being manually, or automatically reconfigured. The change in 'running arrangements' will change various parameters including fault level, protection clearance time, and sheath return current/percentage.

This complication means that a bespoke design for a distribution substation may not be valid if the running arrangement changes, and therefore the value of detailed design calculations on a 'dynamic' network is questionable. It is recommended that the design considers all foreseeable running arrangements, or (for simplicity) makes worst case assumptions regarding fault level, protection clearance time, and ground return current.

A network operator may wish to adopt or provide a target resistance value (tailored to different geographic areas and different system earthing/protection scenarios), or other simplification of these design rules, for these reasons.

9.10 LV installations near High EPR sites

LV electrodes (segregated systems) as described above must be clear of the relevant voltage contour. The consideration also applies to any customer's TT electrode. If necessary the electrode(s) should be relocated or the shape of the high EPR zone altered by careful positioning of HV electrodes. In addition, where possible, LV electrode locations should place them clear of any fallen HV or EHV conductors.

The siting of LV earths must consider zones with elevated potential e.g. some properties close to high EPR substations or EHV towers may themselves be in an area of high EPR, in which case provision of an LV earth derived from outside that zone may introduce a touch voltage risk at the installation, due to the LV earth being a remote earth reference. The arrangement can also pose a risk to other customers on the LV network if it will permit dangerous voltages to be impressed on the LV neutral/earth.

Detailed modelling of HV/LV networks may demonstrate that voltage differences are not significant, due to the influence of the network on the shape of the contours; however such modelling may not be practicable. If any doubt exists, customers should not be offered an earth terminal, and no LV network earths shall be located in the area of high EPR. Cables passing through the area should be ducted or otherwise insulated to limit stress voltage to permissible limits. Typically a customer will use their own TT earth electrode; however if properties are in an area where EPR exceeds 1200 V, it is possible that they will experience L-E or N-E insulation failures in HV or EHV fault conditions; isolation transformers (or careful siting of HV:LV transformers and electrode systems) may be required; refer to Sections 0, and Section 11 below .

For PME electrode locations, reference should be made to ENA EREC G12.

9.11 Supplies to/from High EPR (HPR) sites

Network supplies into HPR sites invariably need care if the network earth is to remain segregated from the HPR site earth. In remaining separate, this can introduce touch voltage risk within the site. It is normally necessary to use a careful combination of bonding and segregation to ensure that danger does not arise within the site, or on the wider network. Sheath breaks (insulated glands) or unearthed overhead line sections are often convenient mechanisms to segregate the earthing systems.

Similar considerations are required for LV supplies derived from HPR sites if these are to 'export' to a wider area. Typically the LV neutral will be earthed outside the contours of highest potential and will be kept separate from all HPR steelwork in accordance with normal best practice. It may be necessary to apply ducting or additional insulation to prevent

3245 insulation breakdown and resultant fault current diversion from the HPR site into the wider
3246 network.

3247 Refer to **EREC S34** for specific examples, and to Section 12 (Case Studies).

3248 **9.11.1 Special Arrangements**

3249 Where a standard substation earthing arrangement is not applicable, alternative options may
3250 include:

- 3251 • combining HV & LV earths and managing touch and step potentials by installing an earth
3252 grid to enclose the installation supplied, i.e. effectively producing a large 'equipotential'
3253 safe zone, irrespective of EPR. (The design must take into account any metallic services
3254 such as Telecoms entering or leaving the installation, and is most useful in rural areas);
- 3255 • using an isolation transformer with a separate earthing system where an LV supply has to
3256 be taken outside a HPR substation site with a bonded HV/LV earth system;
- 3257 • use of isolation transformers to provide small capacity LV supplies to HPR ground
3258 mounted substations. E.g. LV supplies to tele-control equipment located within
3259 substations with segregated HV/LV earths (as described in 9.5.3). The (alternative) use
3260 of TT supplies (derived outside the High EPR zone) in such circumstance does not
3261 protect against insulation failure/flashover between the LV phase/neutral conductors and
3262 HV steelwork and could lead to the systems becoming inadvertently combined.
- 3263 • For supplies to mobile phone base stations refer to ENA EREC G78.
3264

Commented [MD23]: Put name in references section.

10 Pole Mounted Substation and Equipment Earthing

This section describes earthing associated with HV Distribution Overhead Line Networks (excluding Tower lines).

10.1 General Comments & Assumptions

Extreme care must be taken when replacing pole mounted equipment with ground mounted equipment, since any existing earthing system is unlikely to be adequate to limit touch voltages to safe levels on the new installation.

10.2 Pole Mounted Transformers

Pole mounted transformers (PMTs) typically operate with a segregated HV and LV earthing system* (see section 9.6), and (since the metalwork is out of reach), a high EPR can be tolerated on the HV steelwork, provided that the LV electrode system is suitably separated from the HV system. The limiting factor for EPR is usually insulation withstand (stress voltage) on the LV cables, insulators and bushings at the pole-top; often a design value of 2 kV to 5 kV is assumed, depending on equipment specifications. A high EPR (with a small electrode system) is often inevitable on systems supplied by unearthed overhead lines as these do not enjoy the 'return path' offered by a metallic cable sheath/armour.

The HV electrode must be sited and designed so that it will not present a danger in terms of hazardous step potentials (voltage gradient) around it. In this respect it is no different to that of ground mounted systems described above, except that PMTs are often in fields, close to livestock/animals, and with high ground return currents. Refer to Section 10.3.

[Include diagram of PMT and earthing arrangements below]

10.3 Electrode Configuration for Pole Mounted Equipment

The following earth electrode designs assume that the overhead network does not have a return earth conductor. With this type of system the earth potential rise (EPR) of the local earth electrode typically will exceed tolerable touch, step and transfer potentials under earth fault conditions.

Due to the possible hazardous touch potentials, earth conductors above ground shall be suitably insulated and provided with mechanical protection for a minimum height of 3 m or above the height of the anti-climbing device, whichever is greater. In addition the main earth conductor shall be suitably insulated for a minimum of 500 mm below ground level. Where the separation of electrodes is required guidance will be given in the relevant section.

It is not always reasonably practicable to ensure in all situations that step potentials directly above an installed earth electrode system remain below permissible limits under earth fault conditions†. It is generally considered that the probability of an earth fault occurring whilst an individual happens, by chance, to be walking across the earth electrode at the same time, is extremely small. Therefore, in most circumstances no special precautions are required. However, at sensitive locations that are often frequented‡ by people, particularly children, and concentrations of livestock in stables or pens for example, precautions may be justified to eliminate or minimise the risk. This can usually be achieved by careful site selection or at the time of installation by installing the earth electrode in a direction away from the area of

* In some network areas, combined HV/LV systems were employed, so this cannot be assumed.

† This is now less of an issue as step voltage limits have been considerably relaxed compared with previous versions of this specification.

‡ Refer to BS EN 50341-1 clause 6.2.4.2 for definition

3305 concern, burying the electrode as deep as practicable, and/or fencing the electrode off to
3306 prevent access.

3307 A similar situation also applies to personnel carrying out live operations such as HV drop-out
3308 fuse replacement, live-line tapping at earthed locations or ABSD switching using hook stick
3309 (hot-stick or insulated rods) techniques on earthed poles.

3310 **10.4 HV Earth Electrode Value**

3311 The HV electrode is (usually) the only return path for HV fault current (except relatively rare
3312 instances of cable fed PMTs, or cable terminations), and its resistance must generally be low
3313 enough to operate HV protection within design limits for the network (typically 1 to 1.5
3314 seconds maximum); electrode resistance values between 10 Ohm and 40 Ohm are often
3315 quoted for design purposes, with lower values providing increased resilience to lightning
3316 strikes. (Lower resistance values will limit the voltage rise on HV steelwork, and can prevent
3317 'back flashover' across LV bushings resulting from lightning surges, which would otherwise
3318 destroy the transformer winding).

3319 In general the lower the earth electrode resistance the more earth fault current will flow,
3320 resulting in more reliable operation of the circuit protection. Where surge arresters are used it
3321 is generally accepted that 10 Ohm is the preferred maximum value of earth electrode
3322 resistance for satisfactory operation of the arrester. This is in line with the preferred 10 Ohm
3323 value in BS EN 62305 for high frequency lightning earth electrodes.

3324 **10.5 Electrode Arrangement Selection Method**

3325 A common arrangement of rods used for earth electrodes associated with overhead line
3326 equipment is a run of parallel rods interconnected with a horizontal conductor.

3327 Resistance values may be calculated using formulae in **EREC S34**. The calculated values
3328 are considered to be conservative and are based on uniform soil resistivity.

3329 Calculated resistance values for the same rod and soil arrangements, using earthing design
3330 software are approximately 30% lower. Where the ground conditions are difficult, i.e. of high
3331 resistivity and/or rocky, the cost of obtaining the required earth electrode resistance value
3332 may warrant carrying out a site specific design.

3333

10.6 Earthed Operating Mechanisms Accessible From Ground Level

This section deals with pole mounted auto-reclosers (PMARs), sectionalisers, and air break switch disconnectors, that are all capable of being manually operated via an earthed metallic control box or switch mechanism. It is important to note that where a low voltage supply is required for control circuits, the supply should be derived from a dedicated transformer whose LV neutral is earthed directly to the installation's main HV earth conductor.

There are several methods of minimising the risk from possibly hazardous touch and step potentials at such installations. In selecting the most appropriate method due account should be taken of the nature of the site, the accessibility of the equipment to third parties and the EPR level under fault conditions.

(1) Use of wireless remote control for a unit mounted on the pole out of reach from ground level. With this method, an HV earth electrode system may be required where surge arresters are fitted or where the manufacturer of the equipment specifies. Where equipment is unearthed its mounting height shall comply with the relevant regulations.

(2) Place the control box out of reach from ground level, access being via an insulated ladder. Again, with this method an HV earth electrode system may be required where surge arresters are fitted or where the manufacturer of the equipment specifies. Where equipment is unearthed its mounting height shall comply with the relevant regulations.

Install an operator's earth mat and grading conductors to help provide an equipotential zone for the operator. Figure 4 and Figure 6 show an example of how this may be achieved. Whilst this minimises the hazards for the operator it requires that the installation be carried out with great diligence. It is also important that the future integrity of the earth electrode is ensured. Misplacement of the earth electrode conductors can result in the operator being exposed to hazardous touch and step potentials. Consideration needs to be given to the selection of the site prior to installation to ensure that the required earth electrode configuration can be installed correctly, and maintained adequately into the future. Use of suitable personal protective equipment for switching operations may also be considered as an additional risk control measure; dielectric (insulated) footwear rated at >7 kV is now commonly used to protect operators against step potentials when stepping on/off the platform.

(3) Where mechanical damage is likely, for example in farmland, protective measures need to be considered to ensure the integrity of the earth electrode and the earth mat. An example would be to install and fix the earth mat on or in a raft of concrete or fence off the area surrounding the earth mat.

The use of grading conductors to minimise step potentials in the immediate vicinity of the operator's earth mat may prove impractical in some circumstances, particularly where there is a danger of them being damaged by ploughing. Burying the grading conductors at a greater depth will significantly reduce their effectiveness. Keeping step potentials within tolerable limits can be extremely difficult and in some case impracticable. In such circumstances alternative mitigation should be considered.

Factors such as, soil structure, operating voltage, type of HV system earthing (solid or resistance) and system impedance all have an effect on the value of step and touch potentials created around the earth electrode, whereas protection clearance times will have a bearing in determining the tolerable touch and step potential limits. At some sites it may be prudent to restrict access to the control box, for example by use of insulating barriers or


3382 fences, so that it is not possible for third parties to touch the control box and where operators
3383 can only touch the control box when standing on the earth mat.

3384 It should be noted that burying the operator's earth mat will increase the touch potential
3385 between the control box and the surface of the ground above the earth mat; the greater the
3386 depth of the mat, the greater the potential difference between the soil surface above the mat
3387 and the control box. The hazard this presents can be managed by covering the mat with a
3388 high resistivity material which will increase the impedance path between the hands and feet.
3389 Burying the mat will also have the effect of reducing the step potentials for an operator
3390 stepping off the mat. However, the prime concern is to minimise the touch potentials as these
3391 are considered to be more hazardous than step potentials. Where the mat is buried the touch
3392 potential and the hazard it presents will be site specific, being dependent upon the actual
3393 EPR and the protection clearance times for the given site, therefore a site specific design is
3394 recommended. The surface mat shown in Figure 4 results in negligible touch potentials for
3395 the operator standing on the mat, irrespective of the EPR.

3396 In all cases it is an option to use control measures to mitigate risk if a company deems this is
3397 the most appropriate solution in the circumstances.


3398

3399

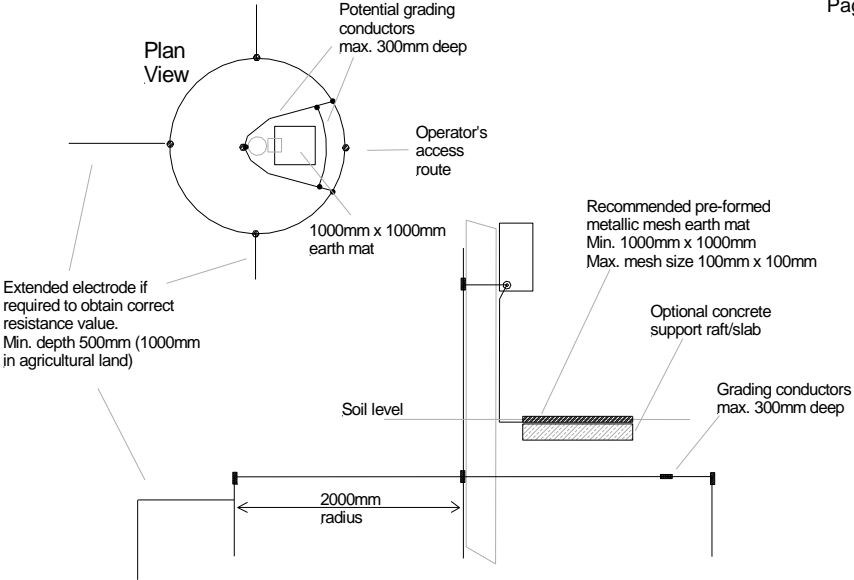

NOTE: This arrangement does not exclude the use of a portable earth mat.

Figure 4 — Earthing Arrangement for a PMAR with Ground Level Control Box.

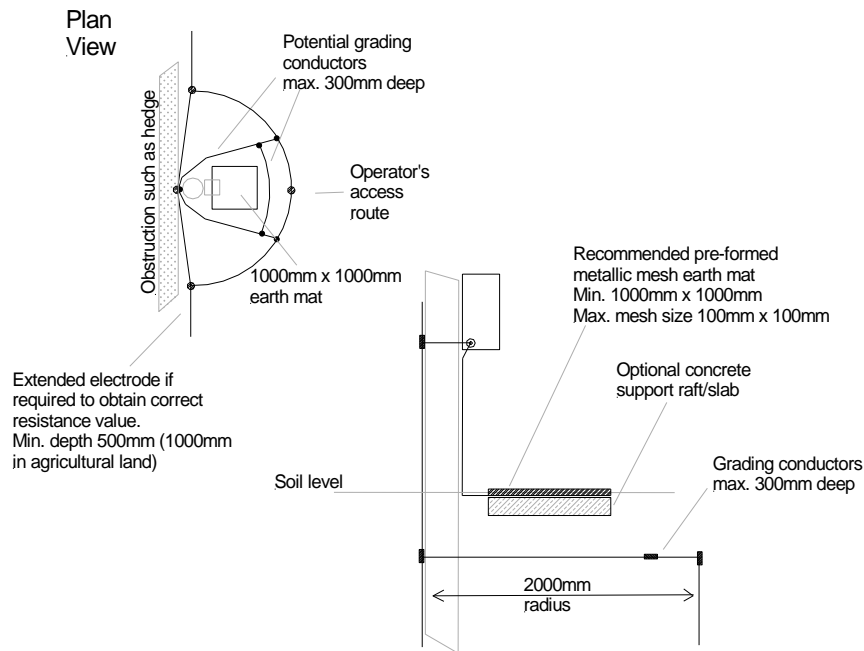

3403

3404 **Figure 5 — Alternative Earthing Arrangement for a PMAR with Ground Level Control Box.**

3405

3406 **10.7 Air Break Switch Disconnect (ABSD) with an isolated operating mechanism**

3407 There are several methods of controlling hazardous touch and step potentials, at pole
3408 mounted ABSDs.

3409 Install an insulated rod operated ABSD at high level that does not require an earth electrode.
3410 Where equipment is unearthed its mounting height shall comply with the relevant regulations.
3411 This option removes the risk of the operator being exposed to the hazard of touch and step
3412 potentials that could occur under certain earth fault conditions when adopting method 2
3413 below.

3414 (1) Install an ABSD that is operated manually from ground level with a separate HV
3415 earth electrode and operator's earth mat. This approach relies on effective
3416 separation of the HV earth electrode that connects the HV steelwork to earth, and
3417 the operator's earth mat connected to the operating handle. This arrangement is
3418 typical of existing earthed ABSD equipment found on rural overhead line distribution
3419 networks.

3420 Separation is achieved by placing the HV earth electrode a minimum of 5m away from the
3421 base of the operator's earth mat using insulated earth conductor from the electrode to the HV
3422 steel work, and by insulating the operating handle from the switch mechanism using an
3423 insulating insert in the operating rod. The top of the insert needs to be a minimum of 3m from
3424 ground level when in its lowest position. The operating handle needs to be connected to an
3425 earth mat positioned where the operator will stand to operate the handle. If the earth mat is
3426 installed such that it is visible the operator can verify its existence and its connection to the
3427 handle prior to operating the handle. The continuing effective segregation of the HV earth
3428 electrode and the operator's earth mat is the most important aspect of the way in which this
3429 arrangement seeks to control the touch and step potentials around the operator's earth mat
3430 position. To minimise the possibility of contact between the buried insulated earth conductor
3431 and the surrounding soil, should the earth conductor's insulation fail, the conductor could be
3432 installed in plastic ducting.

3433 Where mechanical damage is possible, for example in farmland, protective measures may
3434 need to be considered to ensure the integrity of the earth electrode and the earth mat. An
3435 example would be to install and fix the earth mat on or in a raft of concrete or fence off the
3436 area surrounding the earth mat using non-conducting fencing.

3437 Under earth fault conditions the HV earth electrode will rise in potential with respect to
3438 remote earth. A potential gradient will be produced around the electrode; the potentials being
3439 highest immediately above the electrode and reducing rapidly with distance. The earth mat
3440 will be located within the potential gradient surrounding the HV earth electrode, but due to
3441 the separation distance of 5m the potential at that point with respect to remote earth will be
3442 relatively small. The surface level earth mat for the operating handle and the handle itself will
3443 rise in potential but there will be effectively no potential difference between the mat and
3444 handle.

3445 Under earth fault conditions, assuming the correct separation distance between the HV earth
3446 electrode and the operating handle earth mat, should the operator have one foot on the mat
3447 and one off the mat, touch and step potentials surrounding the earth mat should not exceed
3448 tolerable limits. However, there is a risk of hazardous touch and step potentials arising if the
3449 HV earth electrode short circuits to the operating handle earth mat. The risk of such a short
3450 circuit occurring is extremely small provided that the earth installation is correctly installed,
3451 inspected and maintained.

3452 The actual size and shape of the earth mat shall be such as to ensure that the operator will
3453 be standing towards its centre whilst operating the handle. Notwithstanding this requirement

3454 the minimum size of earth mat should be 1 m by 1 m. Due consideration needs to be taken of
3455 the type of handle, whether it is a two handed or single handed operation and whether the
3456 operator may be left or right handed. A purpose made mat is recommended in preference to
3457 a mat formed on site out of bare conductor, as this eliminates problems of variation in shape
3458 and size that can occur with the latter. Where a buried earth mat is used, the maximum depth
3459 of the mat should be no greater than 300 mm.

3460 Under normal earth fault conditions the touch potential for both buried and surface
3461 mounted scenarios will be negligible. When deciding between the use of a buried
3462 earth mat and a surface mounted mat the following issues shall be considered:

- 3463 • A surface mounted mat will allow the operator to visually confirm both the
3464 position of the earth mat relative to the handle and also the integrity of the
3465 connection between the earth mat and the handle.
- 3466 • A surface mounted mat will minimise any touch potentials between the soil
3467 surface on the mat and the handle, both under normal earth fault conditions
3468 and under second fault conditions where the handle and the earth mat
3469 become energised although this scenario should be less likely because
3470 effective segregation can be visually confirmed before operation.
- 3471 • Conversely a surface mounted mat will maximise the step potential around
3472 the mat although this will only be an issue if the mat and handle become
3473 energised under a second fault scenario.
- 3474 • A buried earth mat will not allow the operator to visually confirm either its
3475 position relative to the handle, or the integrity of its physical connection to the
3476 handle before operation.
- 3477 • Burying the earth mat will increase the value of any touch potential between
3478 the handle and the soil above the earth mat, this potential will increase with
3479 depth.
- 3480 • To maintain the same effective soil surface area with a buried earth mat for
3481 the operator to stand on and minimise any resulting touch potentials requires
3482 a significantly larger mat than for a surface mounted mat.
- 3483 • Where a second fault occurs that energises the operating handle and earth
3484 mat, with a buried earth mat the touch potential could exceed tolerable
3485 levels.
- 3486 • Conversely burying the mat will have the effect of reducing the step
3487 potentials under such conditions for an operator stepping off the mat.

3488 The use of suitably rated PPE in these situations would assist in minimising the risk of
3489 exposure to possibly hazardous potentials.

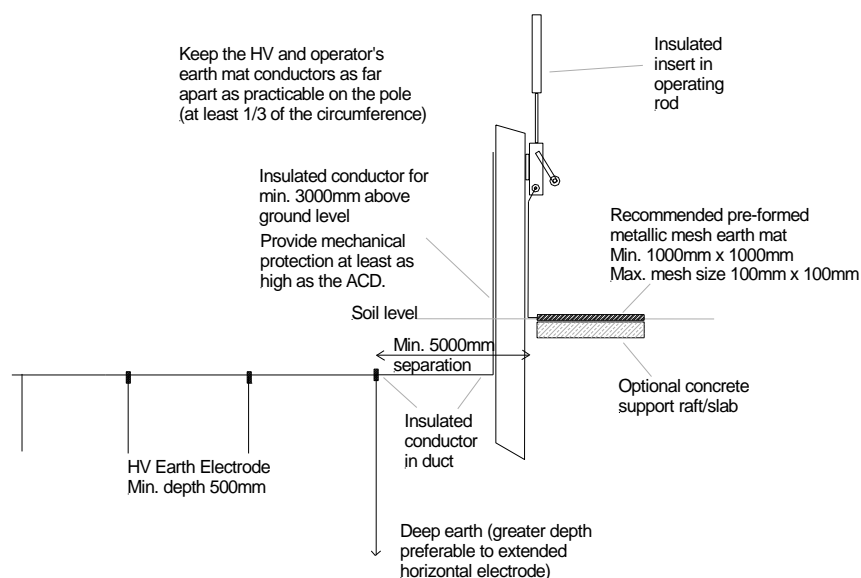


Figure 6 - Recommended Earthing Arrangement for an ABSD.

10.8 Surge Arresters

The preferred value for the surge arrester earth electrode resistance is 10 Ohm or less. Ideally this electrode system should be installed as close to the base of the pole as possible. However, for some locations where it may be necessary for an operator to carry out switching operations on the HV networks at that pole this may create unacceptable step potential hazards. In such cases the HV earth electrode should be installed away from the pole at a location where the step potential is calculated to be safe (typically 5m) for the operator to stand when carrying out any switching operations, see section 15.8. It is preferable to have a small number of deep earth rods rather than many shallow rods or plain horizontal conductor. The earth conductor connecting the base of the surge arresters to the earth electrode system should be as straight as possible, having as few bends in as is practicable. Refer to Section 6.14 for further details.

Where other HV equipment is situated on the same pole and requires an earth electrode, only one HV earth electrode needs to be installed*. The preference is to install an earth conductor directly from the surge arresters to the buried HV earth electrode, and then connect the earths of the other items of HV equipment to it on the pole. At sites where switching may take place the earth lead should be insulated to the first earth rod which should be a minimum of 5m from the operating mat for an ABSD or 5m from the operating position for equipment that requires the use of hot-sticks or insulated rods. Additional protection may be achieved by placing the earth lead in ducting to that point.

* Note: This practice differs for that in substations as described in Section 6.14, where separate power frequency and high frequency earths are required.

10.9 Cable Terminations

Typically, cable terminations on poles are associated with surge arresters or other HV equipment, in which case the cable sheath or screen is connected directly to the surge

3517 arrester or HV equipment main earth conductor. In the absence of surge arresters or other
3518 earthed HV equipment the cable will require the installation of an earth electrode.

3519 **10.10 Operations at Earthed Equipment Locations**

3520 At earthed installations fed via overhead line systems, it is essential to have robust
3521 operational procedures to minimise the risk from the possible hazards associated with the
3522 high rise of earth potential under earth fault conditions. It should be noted that the risk
3523 increases during live fault switching operations. It is beyond the scope of this document to
3524 detail such procedures but consideration should be given to the following points.

3525 Earth systems are usually designed to minimise hazards under main protection operation.
3526 They are not designed, unless specifically required, to minimise hazards under secondary or
3527 backup protection conditions. This is an important point to note when developing fault
3528 switching operational procedures. Temporarily disabling parts of the protection system,
3529 reconfiguring the network, or raising protection settings to aid in fault location during fault
3530 switching can give rise to touch, step and transfer potentials of a duration that the associated
3531 earth systems have not been designed to take account of.

3532 Precautions shall be taken, by virtue of the equipment design and earthing arrangements to
3533 minimise any touch and step potential hazards. For example, where rod operated (insulated
3534 hot sticks) equipment is used, the simplest way of minimising hazards from touch and step
3535 potentials is by, where practicable, placing the earthing electrode, not serving as grading
3536 conductors, away from the position where the operator will be standing. Where several
3537 people are present during operations, any person not actively carrying out operations should
3538 stand well clear of the installed earth electrode.

3539 **10.11 Installation**

3540 The following points should be considered when installing an earth electrode system for
3541 overhead line equipment:

- 3542 (1) Materials and jointing methods shall comply with the requirements of BS 7430.
- 3543 (2) Installation teams should have a basic understanding of the functions of an earth
3544 system, and should carry out installations to a detailed specification.
- 3545 (3) Typically, installing a horizontal earth electrode system at a greater depth than 500mm
3546 will not have any significant effect on reducing the earth electrode's resistance value.
3547 However, it is recommended that the electrode is buried as deep as is practically
3548 possible to minimise surface potentials and the possibility of mechanical damage.
3549 Where ploughing is a concern the electrode should be buried at a minimum depth of
3550 1m.
- 3551 (4) Ensure maximum separation is achieved on the pole between HV earth conductors and
3552 ABSD handle earth mat conductors.
- 3553 (5) It is recommended that a test point is made available for future connection of an earth
3554 tester above ground so that the earth electrode resistance can be measured. This test
3555 point should be installed and constructed so as to prevent unauthorised access, and on
3556 ABSD's prevent possible flashover to the operator's handle and associated earth mat.
- 3557 (6) Welded, brazed or compression connections are preferable to bolted connections for
3558 underground joints.
- 3559 (7) Corrosive materials and high resistivity materials such as sand should not be used as a
3560 backfill immediately around the electrode.

- 3561 (8) The earth resistance of the installed electrode should be measured and recorded.
- 3562 (9) Where a buried operator's earth mat has been installed, the mat should have two
3563 connections made to the operating handle.

3564 **10.12 Inspection & Maintenance of Earth Installations**

3565 **10.12.1 Items to Inspect**

3566 During routine line inspections it is recommended that the following items are visually
3567 inspected and their condition recorded, with any defects being rectified in a timely manner:

- 3568 (1) ABSD earth mat and connection to operating handle.
- 3569 (2) Separation of HV and operator's handle earth on an ABSD.
- 3570 (3) Separation of HV and LV earth conductors on the pole.
- 3571 (4) Check that the anti-climbing device does not compromise the separation between the
3572 HV earth conductor and the operating handle.
- 3573 (5) Insulation of HV and LV earth conductors.
- 3574 (6) Mechanical protection of HV and LV earth conductors.
- 3575 (7) Bonding of plant and equipment.
- 3576 (8) State of connections, including any test point.
- 3577 (9) Signs of possible mechanical damage to earth electrode and buried earth mats.

3578 **10.12.2 Items to Examine**

3579 Periodically examine a random sample of buried earth electrodes and buried ABSD handle
3580 earth mats, and rectify any defects found. The examination should check for the following:

- 3581 (1) position of earth mat and electrode locations relative to ABSD handle and operator's
3582 position;
- 3583 (2) insulating insert in the ABSD operating rod;
- 3584 (3) state of underground connections;
- 3585 (4) state of earth electrode components, particularly galvanised steel rods;
- 3586 (5) state of insulation on underground earth conductors where separation of electrodes is
3587 required.

3588 NOTE: When carrying out this work protective measures shall be taken to ensure the safety of personnel during
3589 fault conditions.

3590 The results of the examinations can then be used to assist in developing ongoing inspection
3591 and maintenance policy, and procedures.

3592 **10.12.3 Items to Test**

- 3593 (1) Periodically test the earth electrode resistance. For the relatively small earth systems
3594 typically associated with overhead line equipment, a small 3 terminal earth tester is
3595 adequate. The test should be carried out in accordance with the manufacturer's
3596 instructions.

- 3597 (2) Regularly test the continuity between operating handle and the operator's earth mat.
- 3598 (3) Regularly test the continuity of buried earth mats.
- 3599 (4) Periodically test a random sample of insulating inserts used in ABSD operating
3600 mechanisms.
- 3601 Important: When carrying out these measurements the equipment should be made dead or
3602 where this is not practicable a risk assessment should be carried out and suitable test
3603 procedures should be adopted which safeguard the operator from any rise of earth potential.
3604 Such procedures may for example include the use of insulating gloves and boots, mats and /
3605 or fully insulated test equipment.
- 3606
- 3607
- 3608

3609

3610 **11 Case studies / examples**

3611 [All examples currently removed (Feb 2015) pending group discussion on what to include].

3612

3613 Suggested topics:

3614

3615 1) Risk assessment case studies.

3616 2) Large substation design, fed from tower line (already in S34 so leave out?) [S34 includes 33kV OH
3617 and U/G substation design and 132kV Neutral current reduction and reduction factors]

3618 3) Small distribution substation with cable connection [Physical layout and practical issues; refer to
3619 (and include) calculations and results in S34]

3620 4) LV Supply into HOT (HPR) site [1 or 2 examples]

3621

3622
3623
3624
3625
3626
3627
3628
3629
3630
3631
3632
3633
3634
3635
3636
3637
3638
3639
3640
3641
3642
3643
3644
3645
3646
3647
3648
3649
3650
3651
3652

This page deliberately left blank.

