PRODUCED BY THE OPERATIONS DIRECTORATE OF ENERGY NETWORKS ASSOCIATION

Engineering Recommendation EREC S34

Draft Issue 2 2014

A GUIDE FOR ASSESSING THE RISE OF EARTH POTENTIAL AT ELECTRICAL INSTALLATIONS

www.energynetworks.org

© 2014 Energy Networks Association

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Energy Networks Association. Specific enquiries concerning this document should be addressed to:

Operations Directorate
Energy Networks Association
6th Floor, Dean Bradley House
52 Horseferry Rd
London
SW1P 2AF

This document has been prepared for use by members of the Energy Networks Association to take account of the conditions which apply to them. Advice should be taken from an appropriately qualified engineer on the suitability of this document for any other purpose.

<Insert publication history here, e.g. “First published, December, 2011”>

Amendments since publication

Issue	Date	Amendment
Issue D1	12-2013	First draft in ENA template for comment within working group. .pdf version will be used to collate comments.
Issue D2	11-2014	Second draft in ENA template for further development by ENA working group and to prompt comments.

Contents

Figures

Tables

Foreword

This Engineering Recommendation (EREC) is published by the Energy Networks Association (ENA) and comes into effect from <Month, 2014>. It has been prepared under the authority of the ENA Engineering Policy and Standards Manager and has been approved for publication by the ENA Electricity Networks and Futures Group (ENFG). The approved abbreviated title of this engineering document is “EREC S34”, which replaces the previously used abbreviation “ER EREC S34”.

146

This page has been left blank

Introduction

This Engineering Recommendation is the technical supplement to TS 41-24 (2014), providing formulae, guidelines and examples of the calculations necessary to estimate the technical parameters associated with Earth Potential Rise (EPR).

TS 41-24 provides the overall rules, the design process, safety limit values and links with legislation and other standards.

1. Scope

This document describes the basic design calculations and methods used to analyse the performance of an earthing system and estimate the earth potential rise created, for the range of electrical installations within the electricity supply system in the United Kingdom, as catered for in TS 41-24. Modification to the calculations and methods~~formulae and routines~~ may be necessary before they can be applied to rail, industrial and other systems.

~~At operating voltages below 132kV, due to the large number of installations, standard spreadsheet based routines have been developed to help address the volume of work involved. At higher voltages, especially for transmission systems, 'site or project specific' studies are generally necessary. These systems consist of a smaller number of installations, the earth fault currents are high and there are multiple sources (including large generation and/or transformer infeeds.) Their power circuits, in particular those using buried cable, are usually custom designed. Therefore the routines provided here are only suitable for first estimates or feasibility studies.~~

~~Most of the content of this document addresses electricity substations at 132kV and below, i.e. within sub-transmission and distribution systems.~~

~~The formulae and routines in this document are only applicable to UK public electricity supply distribution and transmission networks and their associated equipment. Modification to the formulae and routines may be necessary before they can be applied to rail, industrial and other systems.~~

~~5.~~2. Normative references

TS 41-24 contains the main list of reference documents. Only reference documents used for EREC S34 and not listed in TS 41-24 are shown below.

Standards publications

BS EN 50522: 2010: Earthing of power installations exceeding 1kV a.c.

TS 41-24 (2015): Guidelines for the Design, Installation, Testing and Maintenance of Main Earthing Systems in Substations.

BS EN 60909-3: Short-circuit currents in three-phase a.c. systems. Currents during two separate simultaneous line-to-earth short-circuits and partial short-circuit currents flowing through earth

Other publications

To be added later

Formatted: Normal, Tab stops: 0 cm, Left + 1.27 cm, Left + 2.54 cm, Left + 3.81 cm, Left + 5.08 cm, Left + 6.35 cm, Left + 7.62 cm, Left + 8.89 cm, Left + 10.16 cm, Left + 11.43 cm, Left + 12.7 cm, Left + 13.97 cm, Left + 15.24 cm, Left + 16.51 cm, Left

Formatted: English (United States)

Formatted: Not Expanded by / Condensed by

Formatted: Not Expanded by / Condensed by , Not Highlight

Formatted: Not Expanded by / Condensed by

Formatted: Highlight

Commented [RW1]: still think this sentence should be part of first paragraph

Formatted: Highlight

Formatted: Highlight

Commented [RW2]: delete publications

Formatted: Highlight

~~6.~~3. Terms and definitions

3.1 Symbols used

Symbols or a similar naming convention to BS EN 50522 have been used and they are set out in Appendix A. Where these differ from the symbols used in earlier versions of this document, the previous symbols are shown alongside the new ones, to assist when checking previous calculations and formulae.

3.2 Formulae used for calculating earth installation resistance for earthing studies

The most common formulae for power installations are included in Appendix B. These are generally used to calculate the resistance of an earth electrode system comprising of horizontal and/or vertical components or potentials at points of interest.

When using formulae, to calculate earth resistances, caution is necessary, because they do not normally account for proximity effects or the longitudinal impedance of conductors.

For first estimates, the overall impedance Z_E of separate electrodes with respect to reference earth, is taken as the sum of their separate values in parallel. For the example shown in Figure 3.1, this would be:

$$Z_E = \left(\frac{1}{R_{Es}} \cancel{+ \frac{1}{R_H}} + \frac{1}{Z_{CH1}} + \frac{1}{Z_{CH2}} + \cdots\right)^{-1}$$

Commented [DC3]: ES not Es

(see Appendix A for description of symbols used)

In reality, Z_E will be higher if the separate electrodes are close enough that there is significant interaction between them (proximity effect).

Proximity effects can be accounted for in most advanced software packages. When relying on standard formulae, the following techniques can help to account for proximity when calculating Z_E:

- Include any radial electrodes that are short in relation to the substation size, into the overall calculation of the earth grid resistance.
- For radial spur electrodes or cables with an electrode effect, assume the first part of its length is insulated over a distance similar to the substation equivalent diameter. Calculate the earth resistance of the remainder of the electrode/cable and add the longitudinal impedance of the insulated part in series.
- For a tower line, assume that the line starts after one span of overhead earthwire (the longitudinal impedance of this earthwire/span would be placed in series with the tower line chain impedance).

A value of soil resistivity is needed and for the formula in Appendix B, this must be a uniform equivalent (see TS 41-24, Section 8.1.) For soils that are clearly of a multi-layer structure with significant resistivity variations between layers, the formulae must be used with caution and it is generally better to use dedicated software that accounts for this to provide results of the required level of accuracy.

3.3 Description of system response during earth fault conditions

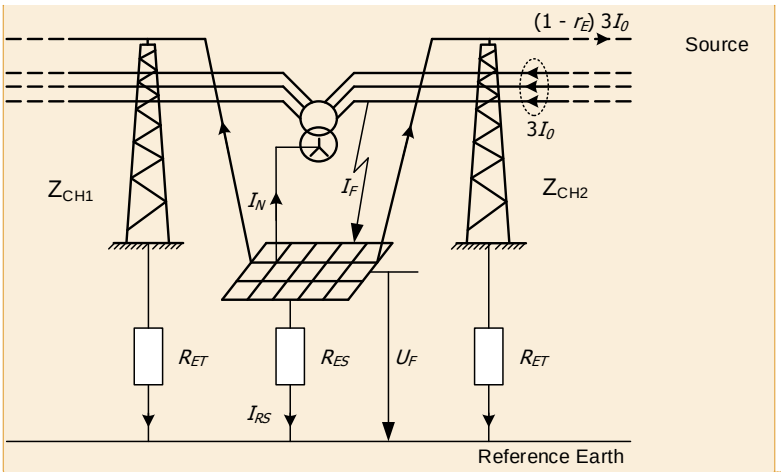

Figure 3.1 Earth fault at an installation which has an earthed tower line supply

The arrangement shown in Figure 3.1 is based upon the example described in BS EN 50522 and will be explained and developed further in this document. The EPR is the product of earth electrode impedance and the current that flows through it into the soil and back to its remote source. The description below is to show how the fault current and associated impedances are dealt with to arrive at the components that are relevant to the EPR.

The installation is a ground-mounted substation that is supplied or looped into an overhead line circuit that is supported on steel towers and has an over-running earthwire. In this simplified example, ~~the electrical energy is provided from one side only~~for clarity currents are only shown on one of the infeed circuits and each tower line supports only one (three phase) circuit.

The fault condition is a high voltage phase insulation failure to earth within the substation. It is possible to model this situation with computer software such that all of the effects are summated, calculated and results presented together. For traditional analysis in this standard, the effects are de~~un~~coupled as now described.

The total earth fault current at the point of fault (I_F) that will flow into the earth grid and associated components would be reduced initially by two components.

- The first component is that passing through the transformer star point earth connection (I_N) and returning to source via the unfaulted phase conductors. For systems that are normally multiply earthed, ie at 132kV and above, The total current excluding the I_N component is normally calculated by summating the currents in all three phases ($3I_0$) vectorially ~~at 132kV and above~~. The process is further described in Case Study 4. For lower voltage distribution systems, I_N is normally zero or sufficiently low to be ignored in calculations.
- The second reduction is due to coupling between the faulted phase and continuous earth conductor (see 4.3 below.) This part of the current is normally pre-calculated for standard line arrangements or can be individually calculated from the support structure geometry, conductor cross section and material. A similar procedure is followed for a

Commented [DC4]: U_F should be U_E; *label currents* I_{ET1} *and* I_{et2}. *Change* I_{RS} *to* I_{ES}

buried cable~~, for which spreadsheet routines have now been developed~~. Another approach is to use a reduction factor (termed r_E) based on the specific circuit geometry and material.

Once these components have been removed, the situation is shown in Figure 3.2. The earth current (I_E) is treated as flowing into the earth network, which in this example contains the substation earth grid (resistance R_{ES}) and two 'chain impedances', of value Z_{CH1} and Z_{CH2}. The two chain impedances are each a ladder network consisting of the individual tower footing resistance R_{ET} in series with the longitudinal impedance of each span of earthwire. They are treated as being equal if they have more than 20 similar towers in series and are in soil of similar resistivity. The overall impedance of the electrode network is Z_E and the current (I_E) flowing through it creates the Earth Potential Rise (U_E.)

The analysis of the performance of the system described follows the process shown in the design flow diagram (Appendix C.) The case studies in section 6 illustrate this process for a number of examples of increasing complexity.

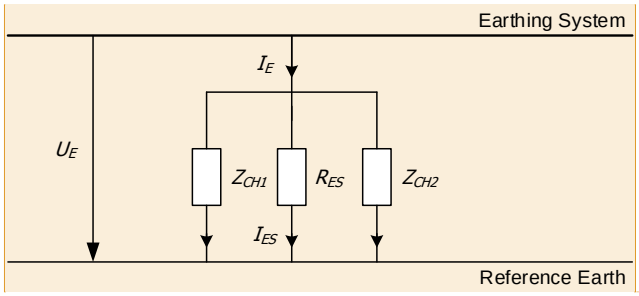

Figure 3.2 Equivalent circuit for analysis

Commented [DC5]: Wrong font for r

Commented [DC6]: Label currents I_{ET1} and I_{ET2}

~~7.~~4. Earth fault current studies

This section describes how to use the fault current data (calculated using the methodology set out in BS EN 60909 and guidance from TS 41-24, Section 8.2) for earth potential rise purposes.

4.1 Earth fault current

Commented [DC7]: Check for consistency of terminology etc against 41-24

Source earth fault current values (such as the upper limit with neutral earth resistors in place) may be used for initial feasibility studies, but for design purposes, the value used should be site specific, i.e. should account for the fault resistance and longitudinal phase impedance between the source and installation.

Once the fault current is known, the clearance time for a “normal protection” operation (as defined in TS 41-24), at this level of current should be determined and the applicable safety voltage limits obtained from TS 41-24, Section 6. This basis of a normal protection operation is used for the personnel protection assessment. Design measures should be included within installations to afford a higher level of protection to personnel in the event of a main protection failure.

For ~~signalling~~ protection and telecommunication equipment immunity studies in distribution systems, the steady state rms fault current values are normally used. At some installations, particularly where there are significant generation in-feeds, consideration should be given to sub-transient analysis. This is especially important where vulnerable equipment (such as a telephone exchange) is installed close to a generation installation.

For calculation of the EPR, it is the ground return component of the fault current (I_E) that is of concern. On some transmission systems, this can be greater for a phase-phase-earth fault (compared to a straightforward phase-earth fault) and where applicable, this value should be used for the EPR calculation.

4.2 Fault current analysis for multiple earthed systems

The methodology followed in this document assumes that the earth fault current at the substation (possibly at a defined point in the substation) has been separately calculated using power system analysis tools, symmetrical components or equivalent methods. Depending upon the complexity of the study, the data required may be a single current magnitude or the full three phase currents in all supply circuits in vector format.

4.3 Induced currents in parallel conductors

The alternating current that flows in a conductor (normally a phase conductor) will create a longitudinal emf in conductors that lie in parallel with it. These are typically cable metal screens (lead sheath, steel armour or copper strands), earthwires laid with the circuit, metal pipes, traction rails or the earthwires installed on overhead lines. This emf will increase from the point of its earth connection as a function of the length of the parallelism and other factors (such as the separation distance.) If the remote end of the parallel conductor is also connected to earth, then a current will circulate through it, in the opposite general direction to the inducing current.

The current that flows (returns) via the cable sheath or earthwire during fault conditions can be large and it has the effect of reducing the amount of current left to flow into the ground via the electrode system, resulting in a reduced EPR on it.

The following sections provide methods ~~show how~~ to account for these return currents.

4.3.1 Simple circuit representation for initial estimates

For an overhead line with a single earthwire, or a single cable core and its earth sheath, the formulae below approximate the ground return current (I_E). The main assumption is that the circuit is long enough such that the combined value of the earthing resistances at each end of the line are small compared with z_s, or for cable, small compared with r_c.

For an overhead line:

$$I_E = k(I_F - I_N) \quad \text{where } k = \left(1 - \frac{z_{mp,s}}{z_s}\right)$$

Appendix E gives calculated values of I_E presented as a percentage value of I_F and phase angle with respect to I_r for a range of the most commonly used overhead line constructions at 132 kV, 275 kV and 400 kV.

For a single core cable:

$$I_E = k(I_F - I_N) \quad \text{where } k = \left(\frac{r_c}{z_c}\right)$$

The equations are not sufficiently accurate for short circuits (less than 1km) and the results are sensitive to low values of terminal resistance.

4.3.2 More realistic circuit representation to improve the accuracy of calculations

More complete ~~equations~~ formulae are presented in Appendix D. They require a number of circuit and cable specific factors to provide sufficiently accurate results. These have been included in Table A4.1 (Appendix D), for a representative sample of cables.

~~To cater for the range of power cables used in the UK electricity industry, circuit factors have been calculated and introduced into software routines.~~ The case studies have been selected to show how to use the ~~equations~~ formulae and calculations~~or routines~~ for a range of different scenarios. The ~~software routines~~calculations generally provide results that are conservative, because parallel circuit earthwires or cables are not included in the circuit factors. The parallel earthwires or cables can be included in the circuit factors and their use in the formulae of Appendix D will then provide more accurate results.

Where single core cables are used for three phase circuits, the calculations are based upon them being installed in touching trefoil formation, earthed at each end. Where the cables are not in this arrangement, the results may be optimistic and correction factors need to be considered, (see. 4.3.3 and Appendix H.)

The ~~equations and routines~~formulae and calculations are sufficiently accurate for use at 11kV and 33kV on radial circuits. Circuit factors have not been included for 66kV cables because so little of this is present within DNOs, typically only for initial lengths of predominantly overhead line circuits. First estimates for these cables can be made using a similar 33kV cable.

At 132kV, the ~~equations and routines~~formulae and calculations are sufficiently accurate for use in feasibility studies, especially for single end fed “all cable” circuits. They should normally provide conservative results. This is because the circuit factors calculated are for the cable construction that provides the highest ground return current, due for example to having the highest longitudinal sheath impedance and/or weakest mutual impedance between the faulted and return conductors. This would result from a cable with the smallest cross section area of sheath or the least conductive material (such as all lead rather than composite, aluminium or stranded copper) and thicker insulation (older type cables which

Formatted: Space After: 6 pt

Formatted: Font: 4 pt

Formatted: Font color: Auto, (Asian) Chinese (PRC), (Other) English (United Kingdom), Expanded by 0.4 pt

Commented [RW8]: we can reduce the text a little if necessary by including bullet points that cover the application of the equations and software routines?

subsequently have a slightly weaker mutual coupling between the core and sheath~~.~~). If further refinement or confidence is required, the circuits should be modelled with the appropriate level of detail and the work would normally show that a lower ground return current is applicable (i.e. more current returning via the cable screens or metallic routes.)

The formulae and calculation~~ routiness~~s cater for simple overhead line circuits where there is no associated earthwire. For steel tower supported circuits that have an over-running earthwire, account is made of the induced current return by using the table in Appendix E.

~~Hybrid type~~ C~~c~~ircuits that contain both underground cable and earthed overhead tower line construction are not presently ~~catered for~~addressed and need to be analysed on a site specific basis.~~ It is anticipated that future research work will provide some simplified calculation methods for such circuits.~~

4.3.3 Amending calculations to account for increased ground return current in single core circuits that are not in flat or trefoil touching arrangement

The fault current analysis routines for single core cable have assumed that the cables are earthed at each end and in touching trefoil formation.

In many practical situations, the cables are separated by a nominal ~~amount~~distance, either deliberately (to reduce heating effects) or inadvertently (for example when installed in separate ducts.)

When the distance between the individual cables is increased, the coupling between the faulted and other two cables is reduced. This in turn results in more current flowing through the local electrodes (R_B and R_A) and an increase in the EPR at each point.

Some fault current studies for 11kV and 132kV cables where the cables are in touching trefoil, touching flat or the spacing is 3 x D (i.e. 3 x the cable diameter) are included in Appendix H.

These show that, compared to touching trefoil, the ground return current component increases for the other arrangements as:

- The cable length increases
- The cable screen cross sectional area (or conductivity) increases

For a flat arrangement or 3 x D spacing, the ground return current is seen to increase by up to about 6% to 7%. Accordingly, if the cables are not touching, the ground return current and EPR may be adjusted by this amount or a more accurate amount deduced from the information in Appendix H or more detailed site specific analysis. If this effect is not accounted for, the results will be optimistic.

~~8.~~5. Calculations associated with external and internal impact of the EPR

5.1 Calculation of external impact zones

5.1.1 Potential contours, such as hot zone

The EPR at the substation creates potentials in the soil external to the substation and equation P7 in Appendix B can be used to provide an estimate of the distance to the contour of interest.

The formula is as below:

$$Z_x = \sqrt{\frac{A}{\pi}}\left[\left(sin\frac{V_x\,\pi}{2\,U_E}\right)^{-1} - 1\right]$$

Where Z_x is the distance to the point from the edge of the grid to where the voltage is V_x, and A is the area of the grid in square metres.

As emphasised elsewhere in this document, this and other formulae are restricted in accuracy by their assumptions of a symmetrical electrode grid and uniform soil resistivity. More accurate plotting of contours is possible using computer software or site measurements.

5.1.3 External step potential

The step potential is the potential difference between two points that are 1m apart. This can be derived as the difference in calculated surface potential between two points that are 1m apart (Appendix B Formula P5.)

$$U_{vs} = \frac{\rho I_F}{2\pi r}\left(\arcsin\frac{r}{x} - \arcsin\frac{r+1}{x}\right) \quad \text{where} \quad r = \frac{\rho}{4R_E}$$

5.2 Calculation of touch potentials ~~within and adjacent to the installation~~

Formulae are provided in Appendix B to provide the following:

- External touch potential at the edge of the electrode (separately earthed fence) – P1.
- External touch potential at the fence (separately earthed fence) – P2.
- External touch potential at fence where there is no external perimeter electrode (bonded fence arrangement) – P1.
- External touch potential at fence with external perimeter electrode 1m away (bonded fence arrangement) – P3.
- Touch potential within substation (under consideration.)

Commented [DC9]: Move until after touch potentials

Formatted: Justified, Right: 0 cm, Line spacing: single, Widow/Orphan control, Tab stops: Not at -0.32 cm + 0 cm + 5.08 cm + 6.35 cm + 7.62 cm + 8.89 cm + 10.16 cm + 11.43 cm + 12.7 cm + 13.97 cm + 16.51 cm

Formatted: Not Expanded by / Condensed by

Formatted: Not Expanded by / Condensed by

Formatted: Not Expanded by / Condensed by

Formatted: Not Expanded by / Condensed by

Commented [RW10]: a suitable formula is needed

Formatted: Not Expanded by / Condensed by

Formatted: Default Paragraph Font, Font: Arial, Font color: Black, English (United Kingdom)

Formatted: Not Expanded by / Condensed by

5.3 Transfer potential to LV systems where the HV and LV earthing are separate.

5.3.1 Background

This issue predominantly concerns distribution type substations (typically 11kV/LV in the UK) where the HV and LV earthing systems are separate. Another application is where an LV earthing system is situated within the zone of influence of a Primary Substation with a high EPR. Previous guidance was based upon the presence of a minimum 'in ground' separation between the two electrode systems being maintained (distances of between 3m and 9m have historically been used in the UK). Operational experience suggested that there were fewer incidents than would be expected when the separation distance had been encroached on multiply earthed (i.e. TNC-S or PME arrangements). Theoretical and measurement studies (reference xx – see Bibliography) ~~(M. Davies, T. Charlton, D. Baudin, 'New Design Methods to Achieve Greater Safety in Low Voltage Systems During A High Voltage Earth Fault', CIRED Conference, Frankfurt, June 2011)~~ showed that the minimum separation distance is a secondary factor, the main ones being the size and separation distance to the dominant or average LV electrode (where there are many small electrodes rather than one or a few large ones). We refer to this as the 'centre of gravity' of the LV electrode system.

~~5.3.2~~ Basic theory

Equations are available Appendix B (P6) to calculate the surface potential a given distance away from an earth electrode. Three different electrode shapes are included as follows:

~~a)~~ A hemispherical electrode at the soil surface

~~b)~~a) A vertical earth rod
~~c)~~b) An earth grid – approximated to a horizontal circular plate.

The surface potential calculated at a point using these formulae is equal to the transfer potential to a small electrode located at that point because an isolated electrode would simply rise to the same potential as the surrounding soil.

When two or more electrodes are connected together, previous investigations have shown that the transfer potential on the combined electrode is an 'average' of the potentials that would exist on the individual components. This 'average' was found to be 'skewed' towards the surface potentials on 'dominant' electrodes, i.e. those having a lower earth resistance due mainly to being larger.

A simple method is required to explain and then account for this 'averaging' effect. Figure 5.1 shows a simple arrangement of a HV earth electrode and two nearby LV earth rods (A and B) which are representative of typical PME electrodes.

Commented [DC11]: font spacing looks different – needs format painting throughout this section(Reference xx)

Formatted: Line spacing: single

Formatted: Default Paragraph Font, Font: (Default) Arial, Font color: Black, (Asian) Chinese (PRC), (Other) English (United Kingdom), Expanded by 0.4 pt

Commented [DC12]: move to bibliography under other publications

Formatted: Default Paragraph Font, Font: (Default) Arial, Font color: Black, (Asian) Chinese (PRC), (Other) English (United Kingdom), Expanded by 0.4 pt

Formatted: English (United States)

Formatted: Not Expanded by / Condensed by

Formatted: Font color: Black, English (United States), Not Expanded by / Condensed by

Formatted: Normal, Justified

Formatted: Line spacing: single

Formatted: Normal, No bullets or numbering

Formatted: Line spacing: single

Commented [RW13]: line spacing different here

The three electrodes are located along a straight line and the soil surface potential profile along this route is also approximated in the figure.

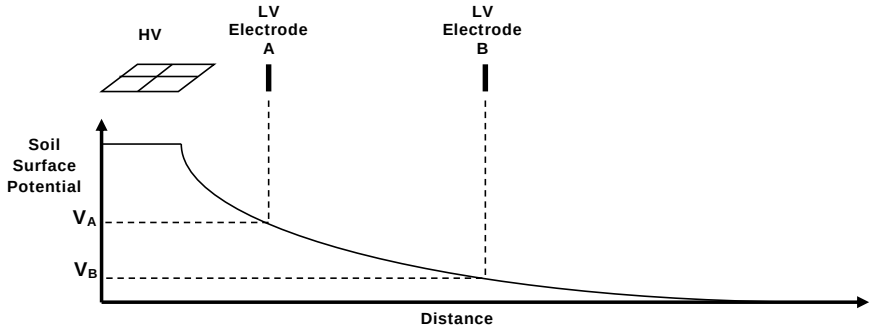

Figure 5.1 Surface potential near a simple HV and LV electrode arrangement

When there is an EPR (Earth Potential Rise) on the HV Electrode the LV Electrodes, A and B will rise to the potential of the local soil, i.e. the surface potential. In Figure 5.1, these are defined as V_A and V_B. The LV Electrodes are clearly at different potentials and this depends on the distance away from the HV electrode.

Once A and B are connected together (for example by the sheath / neutral of an LV service cable) the potential on them will change to an 'average' value, between VA and VB. In simple cases where A and B are of a similar size (and hence earth resistance in soils of similar resistivity), the average potential is accurate but where electrodes A and B are of significantly different sizes the 'average' is 'skewed' towards the dominant one (the larger one, i.e. that has the lowest earth resistance).

The 'averaging' effect can be explained by considering an equivalent circuit for the combined LV electrodes as shown in Figure 5.2. V_A and V_B are the local soil surface potentials and VT is the overall potential on the combined LV electrode. Electrodes A and B have earth resistances of R_A and R_B respectively.

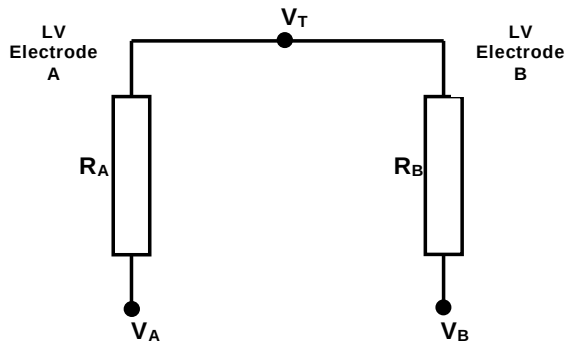

Figure 5.2 Equivalent Circuit for Combined LV Electrodes A & B

Formatted: Line spacing: single

Formatted: Not Superscript/ Subscript

Formatted: Not Superscript/ Subscript

Formatted: Font: Arial, Font color: Black, Not Expanded by / Condensed by

Formatted: Space After: 10 pt, Line spacing: single

The circuit is a potential divider and the voltage on the combined LV electrode (V_T) can be expressed by:

$$V_T = \frac{V_A R_B + V_B R_A}{R_A + R_B}$$

If the LV electrode earth resistances are equal ($R_A = R_B$) then this equation reduces to $V_T = (V_A + V_B)/2$, i.e. the average of the two potentials.

~~5.3.3~~5.3.2 Examples

(a) Equal LV Electrode Earth Resistances

It is useful to consider a worked example where assumed typical values have been used in the circuit from Figure 5.2 and the transfer voltage has been calculated. Figure 5.3 shows the circuit together with the calculated parameters.

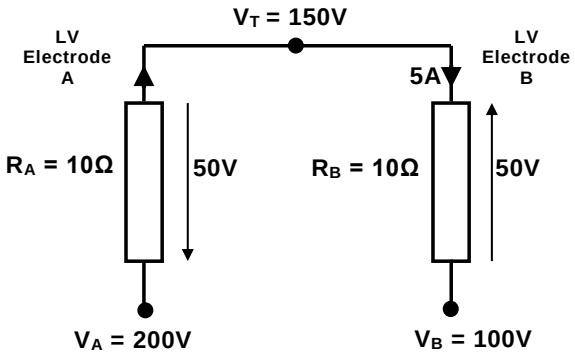

Figure 5.3 Example – Two Electrodes of Equal Resistance

From Figure 5.3, the surface potential experienced by electrodes A and B effectively act as voltage sources. Because electrodes A and B are connected together via an above ground conductor (assumed to have negligible resistance compared to the earth resistances) the potential difference of 100V across the total series resistance of 20Ω causes a current of 5A to circulate through the electrodes. This creates a voltage drop of 50V across the earth resistance of A which is negative with respect to the local surface potential. This reduces the local electrode potential (by 50V with respect to the local soil potential). Conversely at electrode B there is a 50V potential drop across the earth resistance which increases the electrode potential by 50V with respect to the local soil potential.

This is consistent with the previous work and explains the changes in surface potential contours around combined LV electrodes.

Formatted: Line spacing: single

Formatted: Line spacing: single

Formatted: Font: Arial, Font color: Black, Not Expanded by / Condensed by

Formatted: Line spacing: single

Commented [RW14]: Rb value hidden in figure (RW: fixed) and title needs to be more descriptive

Formatted: Space Before: 0 pt, After: 10 pt, Line spacing: single

Formatted: Space After: 10 pt, Line spacing: single

(b) Unequal LV Electrode Earth Resistances

Figure 5.4 shows a similar example but where Electrode B has an earth resistance 5 times lower than Electrode A.

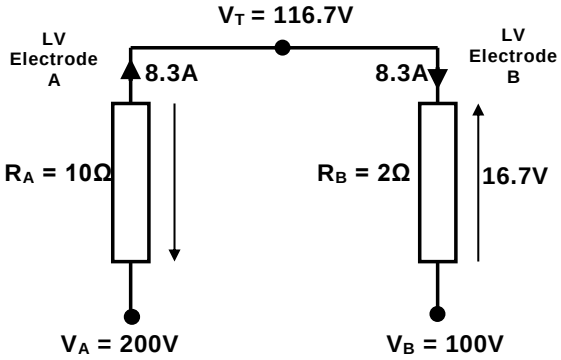

Figure 5.4 Example - Two Electrodes of Unequal Resistance

It can be seen that the potential on the combined LV electrode is much lower than the average value of 150V. Because Electrode B has a much lower resistance it has a smaller volt drop across it and so the combined electrode potential is closer to the voltage on Electrode B.

(c) More than Two LV Electrodes

A similar calculation process can be applied to combinations of more than two LV electrodes. The equation below provides the combined electrode potential for three electrodes, A, B & C.

$$V_T = \frac{V_A(R_B R_C) + V_B(R_A R_C) + V_C(R_A R_B)}{(R_B R_C) + (R_A R_C) + (R_A R_B)}$$

The equation below allows a similar calculation to be made for four combined LV electrodes, A, B, C & D.

$$V_T = \frac{V_A(R_B R_C R_D) + V_B(R_A R_C R_D) + V_C(R_A R_B R_D) + V_D(R_A R_B R_C)}{(R_B R_C R_D) + (R_A R_C R_D) + (R_A R_B R_D) + (R_A R_B R_C)}$$

Further equations for more than four combined LV electrodes can easily be produced by continuing this pattern and would be best implemented via a computer programme subroutine loop.

~~5.3.4~~5.3.3 Discussion

This method has been found to provide a conservative estimate of transfer potential to LV earthing systems when the HV earth resistance is reasonably accurate, ideally determined by measurement. If calculated, conservative results are obtained if the equation for the earth resistance of a hemispherical electrode is used.

The above method may also be applied to a horizontal electrode which may be represented as a series of equally distributed vertical rods along its route. The coarsest representation is

Formatted: Line spacing: single

Formatted: Space Before: 0 pt, Line spacing: single

Formatted: Line spacing: single

Formatted: Space Before: 0 pt, Line spacing: single

Formatted: Space Before: 0 pt, Line spacing: single

Formatted: English (United States)

Formatted: Line spacing: single

to model the horizontal electrode as two short vertical rods, the first at the point on the electrode nearest the HV electrode and the second at the furthest point. This method provides a conservative estimate of the transfer potential to the LV electrode. The greater number of rods used to model the horizontal electrode, the more accurate the calculated transfer potential becomes.

The method described above has been found to be reasonably accurate (and conservative) for soils with uniform resistivity and those where there is a lower resistivity deeper layer. Care should be taken when applying to soils where there is a high resistivity deeper layer, e.g. underlying rock, as transfer potentials may be underestimated and additional safety factors may need to be applied.

Where there is a distributed HV electrode system, e.g. where there are extended HV cables with bare sheaths in contact with the soil, the accuracy of this approach will depend on the location of the LV electrodes relative to the HV electrode. The approach may be valid if the LV electrodes are in the opposite direction to the HV electrode otherwise the transfer potential will need to be calculated by more detailed methods.

For detailed analysis of complex HV or LV electrode shapes and highly non-uniform soil resistivity structures the use of computer simulation software will be required.

~~5.3.5~~ Application to real systems

The fact that the transfer potential is governed by the distance to the 'centre of gravity' of the LV electrode system from the HV electrode has now been established, can help with the LV electrode design to minimise transfer potential. From this perspective, the best method is to install dominant parts of the LV electrode system as far as practicable from the HV electrode, i.e. towards the extremities of the LV system.

~~5.3.6~~ Worked example

Arrangement 1: Pole-Mounted 11kV/LV Substation

A typical pole-mounted 11kV substation arrangement is shown in Figure 5.5. The HV and LV earthing systems are separated; in this example the transformer LV neutral/earth electrode is located 9m away from the transformer HV earth electrode. A service cable provides an LV supply to a dwelling located 50m away from the HV earth electrode and there is a LV PME earth electrode at the property.

Formatted: Font color: Black, Not Expanded by / Condensed by

Formatted: Normal, Justified

Formatted: English (United States)

Formatted: Line spacing: single

Formatted: English (United States)

Formatted: Font color: Black, Not Expanded by / Condensed by

Formatted: Normal, Justified

Commented [RW15]: Bold font

Formatted: Default Paragraph Font, Font: (Default) Arial, Font color: Black, (Asian) Chinese (PRC), (Other) English (United Kingdom), Expanded by 0.4 pt

Formatted: Line spacing: single

The HV Earth Electrode is assumed to be a 3.6m earth rod of 16mm diameter and the soil resistivity is assumed to be 75Ωm.

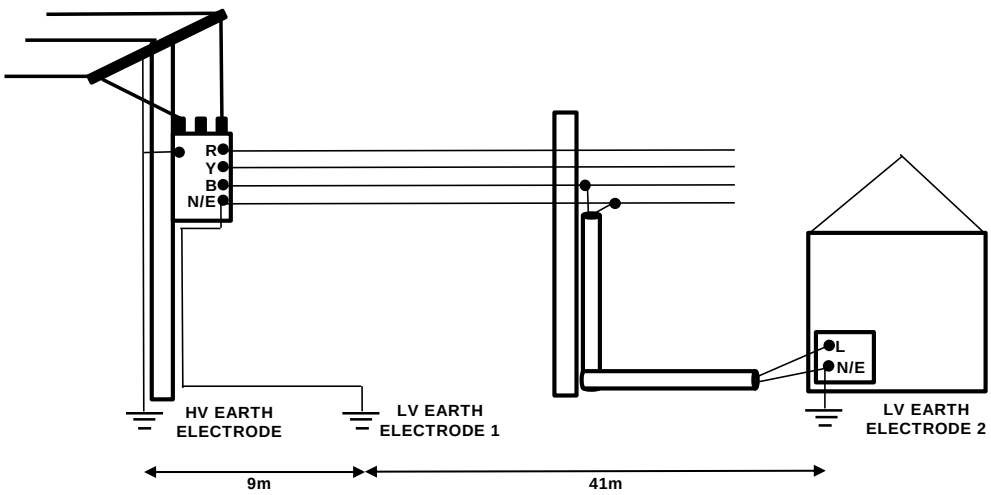

Figure 5.5 Example Pole-Mounted 11kV Substation Arrangement and LV Supply to a Dwelling

Using Formula R1 from Appendix B, the HV electrode earth resistance is calculated to be 21.5Ω. An earth fault current of 200A is assumed to flow and is assumed to be disconnected in 1s. The calculated EPR on the HV electrode is 4300V.

The Surface Potential 9m away from the HV electrode can be calculated using Equation P6.2 as 259V and would be experienced by LV Earth Electrode 1. In the absence of any additional LV earth electrodes this voltage would be propagated through the LV neutral/earth conductor and may be experienced as a Touch Voltage by the dwelling occupants. This potential exceeds the permissible Touch Voltage limit for 1s of 233V and so would not be acceptable.

Figure 5.5 shows a second LV electrode (LV Earth Electrode 2) located at the dwelling that is 50m away from the HV electrode. Use of Equation P6.2 provides a calculated Surface Potential of 48V that would be experienced by LV Earth Electrode 2.

Because LV Earth Electrodes 1 and 2 are connected via the LV neutral/earth conductor, and assuming they each have a similar earth resistance, the transfer potential on the LV earthing system (both electrodes and the interconnecting conductor) will be the average of the surface potential calculated at each LV electrode location, i.e. 154V which is below the permissible Touch Voltage limit.

If the resistance of LV Earth Electrode 2 was half that of LV Earth Electrode 1 the 'average' potential will be weighted more towards the potential at LV Electrode 2. From the equation in section 5.3.3(b), the combined potential on the LV earthing system would be (259x1 + 48x2)/3 = 118V.

This rather straightforward example illustrates how the electrode arrangement can be designed to significantly reduce the transfer potential.

Formatted: Font color: Black, Not Expanded by / Condensed by

Formatted: Justified, Line spacing: single

Formatted: Font color: Black, English (United States), Check spelling and grammar, Not Expanded by / Condensed by

Formatted: Font: Bold, Font color: Black, English (United States), Not Expanded by / Condensed by

Formatted: Normal, Justified

Formatted: Font color: Black, English (United States)

Formatted: Space Before: 0 pt, Line spacing: single

Formatted: Line spacing: single

Arrangement 2: 33/11kV Substation

A typical 33/11kV Substation earth electrode has been investigated in Case Study 1 and the 30m x 20m 'Basic Grid' had a calculated EPR of 1030V. A fault disconnection time of 0.6s is assumed which has a corresponding permissible Touch Voltage of 420V.

For this case study it is assumed that the dwelling shown in Figure A5 is located 5m from the 33/11kV substation. Using Equation P6.3 the transferred potential to LV Earth Electrode 2 at the dwelling, during a fault at the 33/11kV substation, is 477V. This is in excess of the permissible Touch Voltage limit and may indicate an unacceptable risk to occupants of the dwelling.

Using Equation P6.3 the transferred potential to LV Earth Electrode 1 (located 46m from the 33/11kV substation) can be calculated as 117V. Assuming that the two LV electrodes have a similar earth resistance the average potential transferred to the LV earthing system during an earth fault at the 33/11kV substation is 297V which is below the permissible limit.

Risk assessment (No Section numbers as will move to 41-24)

This is just a brief introduction and needs further development. The whole of this section will be placed in TS 41-24 eventually.

It can be extremely expensive to control the risks of damage, shock or electrocution to levels that are risk free. It is recognised in new standards that risks must be accepted in order to provide electrical infrastructure to society. As set out in BS EN 50522, (BS EN 50522 : 2010 - Earthing of power installations exceeding 1 kV a.c., 2010) risk assessment is one of the acceptable tools for analysis of situations where the cost of removing an identified risk appears to be disproportionately high.

When an earth fault creates a significant EPR within an installation, the following four scenarios need to be considered:

Injury or shock to persons within the installation

At locations where a person is expected to be both working and in contact with earthed metal (for example operating circuit breakers within a switchroom, a switching device in an outdoor area or working on a power transformer), the earthing system must be designed to control safety voltages such that they are below the acceptable threshold. The only unforeseeable risks are associated with a defective earthing installation or failure of the protection equipment. The design is expected to provide a high safety factor at such locations. For less frequently occupied areas or intermittent tasks where the safety thresholds may be exceeded, the risk should be managed by control measures (such as approved procedures, permanent barriers and notices etc.) If these are still not initially deemed acceptable, the decision on whether to carry out design improvements or accept the risk of an incident can be aided by use of the risk assessment method described in BS EN 50522 A2. These examples are presently quite simplistic and would need further development for widespread application.

Injury or shock to persons and animals (if applicable) outside the installation

These can be introduced by metallic transfer (fence, pipe, cable) or via the soil. Where a transferred potential can occur due to metallically conductive means, that eventuality should be removed by the introduction of insulation or other protective measures (examples include insulated sections introduced into external metal fences.) Where metal fences are bonded to the substation earthing system, the touch and step potentials external to them must be

Commented [RW16]: Bold font

Formatted: Justified

Formatted: Default Paragraph Font, Font: (Default) Arial, Font color: Black, (Asian) Chinese (PRC), (Other) English (United Kingdom), Expanded by 0.4 pt

Formatted: Line spacing: single

Formatted: Justified, Line spacing: single

controlled by the design, such that they are within the acceptable limits. In other words, most risks should be managed by design. An ideal application for risk assessment is coated type fencing (such as expanded metal) where parts of the coating may degrade over time. Where HV and LV earthing systems are combined, the EPR is transferred from the installation into domestic, commercial or industrial properties and must be at a level such that there is no risk. *(We consider some research is needed to determine the threshold voltage for this from a safety perspective (at present it is 430V – an ITU equipment limit value)).* Issues include identification of the realistic shock scenarios in a range of property types and the probability of this occurring and risking electrocution at a range of voltage levels. Where HV and LV systems are combined, the EPR (or part of it) will transfer to the LV system.

For potentials transferred via the soil, the risk is related to the EPR magnitude (together with proximity of the person, animal or property to the installation), the likely presence of humans or animals and the degree/time of exposure. If the substation has an elevated EPR, obvious concerns are shock risk to humans who do not have appropriate footwear (beach-side or camping site locations) and electrocution to animals (such as a horse – especially one that is being trained/ridden at the time).

Some guidance is needed for areas within the 430V contour – i.e. are there elevated risks or is it an irrelevant contour in relation to human safety. The situation here is related to safe touch and step potentials, not equipment thresholds. For example – risk of shock in a house (similar scenario to the HV/LV bonded issue at a distribution substation), risk of shock in a field, risk of shock to a horse whilst being ridden in an adjacent field.

Damage to equipment within the installation

This is generally covered by design practice and the need to meet the requirements of documents such as EREC S36. For example, the use of isolation units of appropriate voltage withstand on communication and protection circuits. It would be useful to have an element of risk guidance in this area too – for example, if the isolation equipment is matched to normal operating conditions, what is the risk of this being exceeded?

Damage to equipment within properties outside the installation

Communication equipment issues covered by EREC S36. (S36-1 : Identification and Recording of Hot Sites - Joint Electricity / British Telecom Procedure, 2007)

Again – some of this is covered in EREC S36 – especially for telecommunication cables and equipment. What is less obvious is the quantified risk of damage to non-communication equipment or items that are not apparent from an initial survey. These may include metal gas pipes, railway signalling, equipment within farm outbuildings etc.

5.4 Risk assessment methodology

For UK electricity industry applications, the risk of ventricular fibrillation (or electrocution) is a function of three probabilities, i.e.:

P (Probability of ventricular fibrillation) = P_F x P_E x P_{FB}

Where

P_F : Probability of fault occurrence

P_E : Probability distribution of EPR value/Probability of exposure

P_{FB}: Probability of body orientation to create fibrillation current

5.5 Methods of optimising the design (first draft)

Where the EPR is sufficient to create issues within or external to the substation, the following should be investigated and the most practicable considered for implementation.

5.5.1 More accurate evaluation of fault current

Does the value used, account for fault resistance and longitudinal circuit impedance? Have excessive factors for future fault current growth been used? For example, it may be more prudent to use the existing value and implement additional measures later, i.e. at the same time as the predicted increase in fault current.

5.5.2 Reducing the overall earth impedance

Can additional horizontal electrode be incorporated with new underground cable circuits?

Has the contribution of PILCSWA type cables in the vicinity been appropriately accounted for?

5.5.3 Reducing the touch potential within the installation

Can rebar or other non-bonded buried metalwork be connected to the electrode system?

Can other measures (such as physical barriers or isolation) be applied to certain areas?

Are the areas of high touch potential actually accessible?

6. Case study examples

The four cases included here are to demonstrate the increasing level of complexity involved when moving from an unearthed overhead supplied installation with a single supply through to a distribution or transmission installation that has several sources of supply. These also demonstrate the new design facilities that are expected at a modern installation, together with use of the fault current analysis formulae available with this document.

The following data will be used for the first three case studies.

All electrodes assumed as having an equivalent circular diameter of 0.01m and for simplicity, to be copper (the electrical properties of steel would be used for the reinforcing material.)

The soil resistivity is 75Ωm and the fault clearance time and fault current magnitude are set out in Table 6.1.

Substation A

Earth resistance of 0.25Ω, obtained via a reliable measurement (see TS 41-24, Section 12 and BS EN 50522, National Annex C) Only part of the site is shown in the diagram – i.e. the complete site encloses a larger area and this results in its low earth resistance.

The 33kV earth fault current at the source is limited to a maximum of 1kA by a neutral earthing resistor. The fault current is further attenuated by the electrode resistance at the faulted substation and the circuits' longitudinal impedance. In all cases the circuit is 3km long between A and B and of 185mm^2 aluminum conductor. Tables 6.1 and 6.2 provide the fault current data ~~necessary to tie in with~~referenced in the case study results.

Electrode (Fault) Resistance (Ω)	Fault Current (A)	Clearance Time (s)	Touch Voltage Limit (V) Inside Substation	Touch Voltage Limit (V) Outside Substation
0	610	0.4	944	837
0.25	595	0.4	944	837
0.675	584	0.4	944	837
1.22	565	0.4	944	837
1.42	560	0.4	944	837
1.59	555	0.4	944	837
1.89	545	0.4	944	837
2.0	525	0.4	944	837

Table 6.1 Fault current versus case study substation earth resistance – overhead line Substation B ~~(cable and overhead line circuit)~~

Commented [DC17]: Where is the fault position? Needs explaining

Commented [DC18]: Remove, include relevant data in each case study

Commented [DC19]: General table - Remove general table and just have the case studies with a relevant table included in each

Commented [DC20]: Check with 41-24, also inside the substation are there chippings and at what level. Insert into heading what it is.

Electrode (Fault) Resistance (Ω)	Fault Current (A)	Clearance Time (s)	Touch Voltage Limit (V) Inside Substation	Touch Voltage Limit (V) Outside Substation
0 to 2	820	0.4	944	837

Commented [DC21]: Is the 820 related to zero ohms?

Table 6.2 Fault current versus substation earth resistance (all cable circuit)

Commented [DC22]: Shift this table to Case Study 2

Substation B

The grid is 30m long, 20m wide and will be buried 0.6m deep.

6.1. Case Study 1 Overhead line fed 33kV substation

A new 33kV substation is being built at location B. It is supplied from substation A via an unearthed, wood pole supported line that terminates just outside the operational boundary of each substation. The substations are assumed to consist of just three items of plant, (HV and LV switchgear and a power transformer), each on their own individual foundation slab. This is the most straightforward example to study and will be used to demonstrate both the modern design approach and methods of addressing touch potentials.

The approach used can be applied to similar arrangements at a range of voltage levels from 6.6kV to 66kV. At 6.6kV and 11kV, the substation would generally occupy a smaller area than in the examples shown.

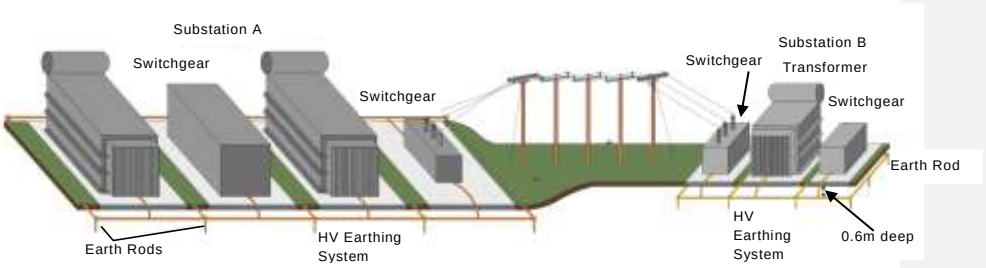

Figure 6.1 Supply arrangement for case study 1

(Overhead line fed substation)

6.1.1 Resistance calculations

For this case, the land area is assumed to be fixed. The first calculation assumes a minimum earthing system consisting of a perimeter electrode between 0.5m outside the foundation slabs and two cross members in-between the slabs (Fig.6.2.) For the next iterations, ten vertical 3.6m rods are added (Fig.6.3) and then some horizontal rebar within each foundation slab (Fig.6.4.)

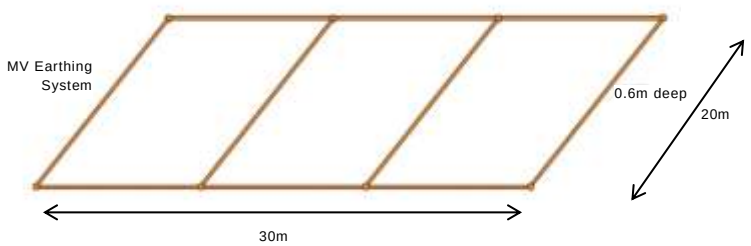

Figure 6.2 Substation B basic earth grid

Using Formula R4 from Appendix B, as below:

$$R_E = \frac{\rho}{4r} + \frac{\rho}{L}$$

Where $L =$ length of buried conductor;

$$r = \sqrt{\frac{A}{\pi}}$$

$A =$ area of grid.

Substituting the values, as below:

$$R_E = \frac{75}{4r} + \frac{75}{140}$$

Where

$$r = \sqrt{\frac{A}{\pi}} = \sqrt{\frac{600}{\pi}} = 13.8$$

$$R_E = \frac{75}{55.2} + \frac{75}{140}$$

$R_E =$1.89Ω

Adding the ten rods as below, each of 3.6m length and 16mm radius, requires the use of the more detailed formula.

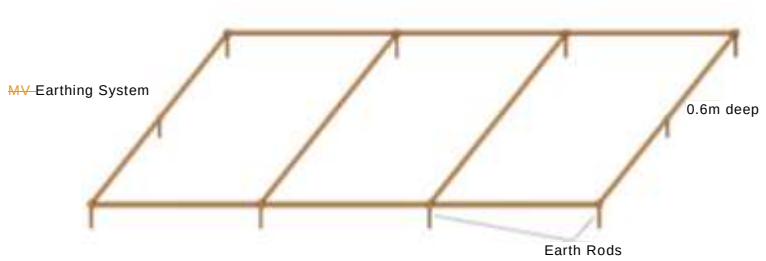

Figure 6.3 Substation B basic earth grid and rods

Using Formula R6 from Appendix B:

$$R_E = \frac{R_1 R_2 - {R_{12}}^2}{R_1 + R_2 - 2R_{12}}$$

Where:

$$R_1 = \frac{\rho}{4r} + \frac{\rho}{L}$$

L = length of buried conductor (176m);

$$r = \sqrt{\frac{A}{\pi}}$$

A = area of grid (m²)

$$R_{12} = R_1 - \frac{\rho}{\pi L}\left(log_e \frac{l}{b} - 1\right)$$

Where b is the equivalent diameter of the circular earth electrode or the width of a tape electrode.

$$R_2 = \frac{R'}{N}(1 + k\alpha)$$

$$R' = \frac{\rho}{2\pi l}\left(log_e \frac{8l}{d} - 1\right)$$

N = number of rods = 10

r_h = Radius of equiv. hemisphere for 1 rod

$$r_h = \frac{\rho}{2\pi \times R'}$$

l and d are the rod length and diameter

a is the separation between rods

$$\alpha = \frac{r_h}{a}$$

k = factor, which is 5 for 10 rods – see Appendix 2, formula R5

$$\alpha = \frac{r_h}{a} = \frac{0.55}{10} = 0.055$$

$$R' = \frac{75}{2\pi \times 3.6}(log_e(\frac{8 \times 3.6}{0.016}) - 1) = 21.6\Omega$$

Therefore;

$$R_1 = \frac{75}{4 \times 13.82} + \frac{75}{176} = 1.78\Omega$$

$$R_{12} = 1.78 - \frac{75}{\pi \times 176}\left(log_e \frac{3.6}{0.01} - 1\right) = 1.12\Omega$$

$$R_2 = \frac{21.6}{10} \times (1 + 4.9 \times 0.06) = 2.7\Omega$$

$$R_E = \frac{1.78 \times 2.7 - 1.12^2}{1.78 + 2.7 - 2 \times 1.12} = 1.6\Omega$$

Formatted: Highlight

As can be seen, the rods have reduced the resistance to 1.6 ohms~~slightly~~ from the previous calculated resistance of 1.89Ω.

For the final calculation, the rebar within the horizontal foundations have been approximated by the symmetrical meshes shown in Figure 6.4. For simplicity it is assumed that they have the same equivalent circular diameter as the copper conductor and the same electrical properties (Note 1)

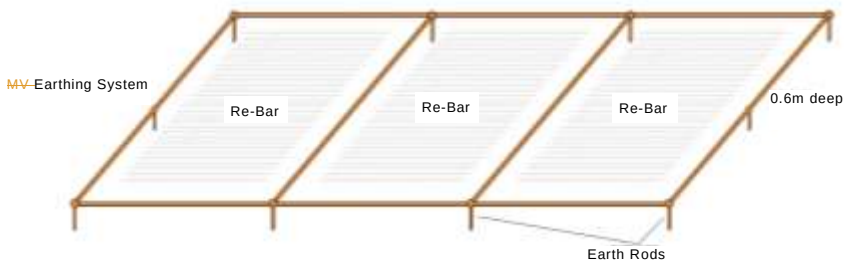

Figure 6.4 Substation B earth grid with rods and rebar

The same formula (R6) and approach would be used as previously, except that the length of conductor is increased to include the amount of rebar modelled (786m total of rebar added to that of copper).

Using Formula R6 from Appendix B:

$$R_E = \frac{R_1 R_2 - {R_{12}}^2}{R_1 + R_2 - 2R_{12}}$$

Where:

$$R_1 = \frac{\rho}{4r} + \frac{\rho}{L}$$

$$R_1 = \frac{75}{4 \times 13.82} + \frac{75}{962} = 1.45\Omega$$

$$R_{12} = 1.45 - \frac{75}{\pi \times 962}\left(log_e \frac{3.6}{0.01} - 1\right) = 1.3\Omega$$

$$R_2 = \frac{R'}{N}(1 + k\alpha)$$

$$\alpha = \frac{r_h}{a} = \frac{0.55}{10} = 0.055$$

$$R' = \frac{75}{2\pi \times 3.6}(\log_e (\frac{8 \times 3.6}{0.016}) - 1) = 21.6\Omega$$

$$R_2 = \frac{21.6}{10} \times (1 + 4.9 \times 0.055) = 2.7\Omega$$

$$R_E = \frac{1.45 \times 2.7 - 1.3^2}{1.45 + 2.7 - 2 \times 1.3} = 1.42\Omega$$

This provides a slightly lower resistance of 1.42Ω.

Note 1: For a more detailed analysis, the equivalent diameter of the different electrodes and their electrical properties and orientation would be included. In the majority of cases, this would require the use of a computer simulation package. When used, the resistance of the grid in Figure 6.4 falls to 1.22Ω.

6.1.2 Calculation of EPR

For each of the grid arrangements modelled, their resistance would be included in the fault current flow calculation to determine the likely earth fault current, as detailed in Table 6.2.

Arrangement	Resistance (Ω)	Attenuated Fault Current (A)	EPR (V)
Basic grid	1.89	545	1030
Grid & rods	1.59	555	888
Grid, rods & rebar (using formula)	1.42	560	796
Grid, rods & rebar (using computer software)	1.22	565	695

Table 6.3 EPR for different grid arrangements

As can be seen from Table 6.3, addition of the rods and rebar have each reduced the resistance and EPR, but not dramatically. The site has an EPR that exceeds the present 430V elevated EPR threshold and it is necessary to calculate the external impact, i.e., the 430V contour location etc. Similarly, if the EPR is greater than the acceptable step/touch limit, it is necessary to calculate the safety voltages. For all subsequent calculations, the resistance of 1.42Ω will be used.

6.1.3 Calculation of external voltage impact contours

This requires use of Formula P6.3 from Appendix B (Note that calculations are in radians). Formula P6.3 can be more usefully rearranged to provide the distance from the outer edge of the earth grid to a set potential point in relation to the EPR that has already been calculated.

The procedure to determine the distance to the 430V contour is as below:

$$Z_{430} = \sqrt{\frac{A}{\pi}}\left[\left(sin\frac{430 \times \pi}{2\mathrm{EPR}}\right)^{-1} - 1\right]$$

Substituting the values for A (600m^2) and the EPR (796V), provides a distance Z of 5m.

$$Z_{430} = \sqrt{\frac{600}{\pi}}\left[\left(sin\frac{430 \times \pi}{2 \times 796}\right)^{-1} - 1\right] = 5m$$

Similar calculations would be carried out for other contours of interest. It is important to note that these calculations only apply with a reasonable degree of accuracy to a grid that is close to a square shape and in uniform soil. For irregular shaped grids, such as one with radial spurs, a computer simulation or actual site measurement is necessary for sufficient accuracy.

6.1.4 Calculation of touch potentials

These calculations are included for reference purposes, but would not be needed in real studies because the EPR is less than 2 x U_{TP} (the permissible touch voltage of 837V to 944V as shown in table 6.1.) Formula P1 estimates the touch potential one metre beyond the perimeter electrode. It is usually the case that provided the internal electrode has been correctly designed (with sufficient meshes), the touch potential here will exceed that anywhere within the grid area. For unusually shaped or non-symmetrical grids, computer software tools are needed for an accurate calculation.

Commented [DC23]: Re-do study with different values of earth resistance/fault current so it is needed

The calculation procedure is as below:

For simplicity, the grid without foundation rebar is used, as in Figure 6.3. A single cross member is added later to give an initial estimate of the effect of the rebar.

6.1.4.1 External touch potential at the edge of the electrode

$$E_{t(grid)} = \frac{k_e \cdot k_d \cdot \rho \cdot I}{L}$$

$$k_e = \frac{1}{\pi}\left(\frac{1}{2} log_e \frac{h}{d} + \frac{1}{2h} + \frac{1}{(0.5+d)} + \frac{1}{D}(1 - 0.5^{n-2})\right)$$

h = 0.6m, d = 0.01m,

D = average spacing between parallel grid conductors - 20metres

Commented [DC24]: Check throughout – m not metres etc

$n = (n_A \times n_B)^{1/2}$

Where n_A = 2, n_B = 4

k_d is a factor which modifies k_e to allow for non-uniform distribution of electrode current and is given by:

$$k_d = \left(0.7 + 0.3\frac{L}{L_p}\right)$$

Where L = total length of buried electrode conductor including rods if connected (176 m ~~metres~~)

L_p = length of perimeter conductor including rods if connected (136 m ~~metres~~)

ρ = 75Ωm

I = total current passing to ground through electrode (555 A ~~amperes~~)

$U_{T(grid)}$ = 248.2V

This reduces to 224.7V when the additional central cross member along the x axis is added (this adds 30m of electrode and provides a uniform separation between mesh conductors in each direction of 10m~~.~~).

For the case where there are more cross members or to account for the rebar, the additional conductors are accounted for in the formula in a similar process to that above and will provide a lower touch potential.

For comparison purposes, when the grids are modeled using computer software, the touch potentials (based upon the computer calculated EPR of 695V) are:

- Basic grid (plus rods), touch voltage maximum is 35% on the edge of the grid and 29% inside (311V or 258V~~,~~).
- With rebar included, touch voltage maximum is 28% on the edge of the grid and only 5% inside (195V or 35V~~,~~).

These are all significantly lower than the touch voltage limit of 944V (Table 6.~~2~~1.) Since the EPR exceeds the TS 41-24 “hot” threshold, the site’s HV and LV earths would need to be separate.

For comparison purposes, when the grids are modelled using computer software and with the rebar included, the EPR is 695V, so the touch voltage maximum is 195V (28%) on the edge of the grid and just 35V (5%) inside, demonstrating the contribution towards safety that the rebar provides.

For the case where there are more grid cross members or to include the rebar, the additional conductors are accounted for in the formula in a similar process to that above and will provide a lower touch potential.

6.1.4.2 Touch potential on fence

If a metal fence is present about 2m outside the electrode system, independently earthed in accordance with TS 41-24, then by substituting the variables into Appendix B Formula P2, the touch voltage 1m external to the fence can be calculated and is 58V.

6.2 Case study 2

In this example, the data is identical except that the circuit between the substations is 3km of 185mm^2 aluminium triplex type cable, where each cable has a 35mm^2 stranded copper screen.

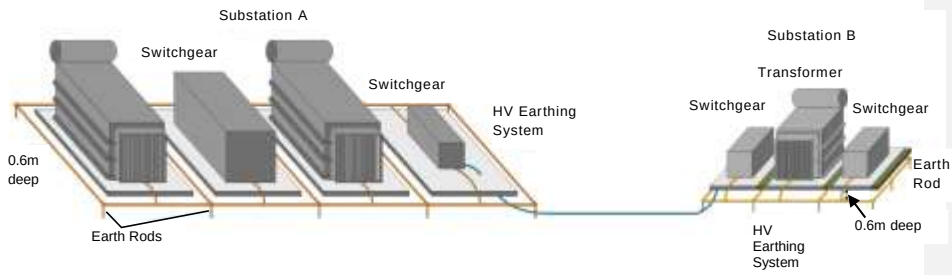

Figure 6.5 Supply arrangement for case study 2

The resistance calculations are identical to those completed for case study 1 and the initial analysis will focus on the values that include the rebar and vertical earth rods (1.22Ω computed using software.) R_A is 0.25Ω. Because the all cable circuit has a lower longitudinal phase impedance compared to a cable and overhead line one, the earth fault current at B is 820A and the other data is as shown in table 6.2.

The results shown in ~~T~~table 6.4 have been obtained using the appropriate formula and the cable data from Appendix D, table 1.

Component	Value
R_A	0.25Ω
R_B	1.22Ω
L	3km
I_F	820A
I_{ES}	17.64%
I_{ES}	144.7A
EPR_B	176.5V

~~Table 6.4~~Table 6.4 **Case study 2~~,~~ input data and results**

The amount of earth fault current that returns via the cable sheaths is so significant (more than 82%) that the current flowing through the 1.22Ω substation resistance creates an EPR of only 176V, despite the higher overall fault current. At this level, the EPR is lower than the 430V threshold (creating a "cold" site) and lower than the touch voltage limit, so no further calculations are necessary. Sensitivity studies showed that the earth resistance at B could increase to more than 20Ω and the EPR would still be significantly lower than 430V. This means that the need for the earth rods will be based more upon seasonal effects (such as reliability of soil water content over the year) than a need to reduce the grid resistance.

The worst conceivable situation would involve the loss of the sheath connections co-incident with the earth fault. This is considered an unlikely event especially for the triplex (three cable) type circuit. The EPR would increase to about 1000V (1.22Ω x 820A). However the foundation rebar and perimeter electrode would restrict the touch voltage to just 5%, i.e. 50V, which is much lower than the limit threshold of 944V. So the site would still be '"safe",

Commented [DC25]: Not consistent with 1.4 ohms

Commented [DC26]: Include Table 6.2 in this section

Commented [DC27]: Could include calculation if not too long

Commented [DC28]: Remove references to hot and cold sites and ref to 430V

although there would now be an external zone in which the surface potential would exceed 430V.

Commented [DC29]: Remove refs to 430V and "safe"

The equations in Appendix D have been used to derive the results used, with the relevant cable self and mutual impedances.

(NOTE: that it is considered improbable that all the current could return via the electrode as this would require all three individual cable screens to be open circuit con-incident with the fault.)

6.3 Case study 3

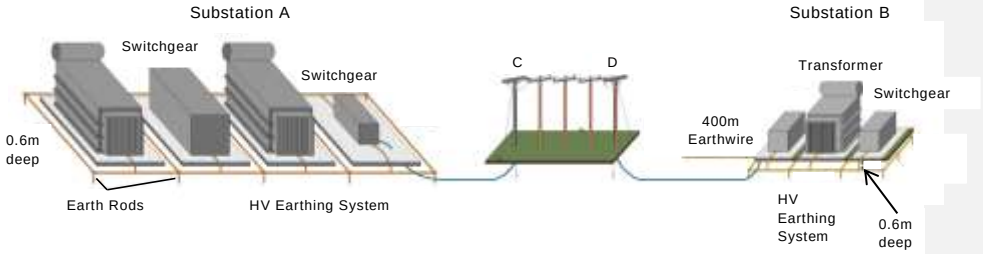

Figure 6.6 Supply arrangement for case study 3

This is a more complex example to demonstrate the issues involved in an area where there are towns or villages supplied from an overhead line network. This is a very common arrangement at 11kV and the same procedure is used to analyse that, but using the 11kV fault current routines and associated data rather than the 33kV ones used here.

The circuit length remains at 3km, with 500m of cable at each end and 2km of overhead line in the centre. The terminal poles at C and D will have their own independent electrodes (rods and/or buried earth wire) to achieve a resistance of 10Ω for insulation co-ordination purposes.

Commented [DC30]: Make clear where the fault is located (Substation B)

The resistance of substation B is the same as calculated previously. However, as is common practice, the opportunity has been taken to install some earth wire with the incoming cable that is connected to the earth grid. A length of 150m is assumed and this will have a resistance that will act in parallel with that of the grid.

If modelled in computer software, the combined resistance is 0.675Ω and this accounts for proximity effects.

If software is not available, the calculation can be carried out as follows:

Resistance of radial earth wire

Using formula R7 from Appendix B, as below:

$$R_H = \frac{\rho}{2\pi L}\left[log_e\left(\frac{L^2}{1.85hd}\right)\right]$$

The resistance of the earth wire is 1.46Ω (using the J. Endrenyi approach based on a ladder network with distributed parameters.) (Endrenyi, J : Reliability Modelling in Electric Power Systems, 1979). The resistance of the earth grid is 1.22 Ω. In parallel, the combined resistance (ignoring proximity effects) is:

Commented [DC31]: Move to bibliography

1.46Ω // 1.22Ω = 0.665Ω

When proximity effects are included, by using a computer design package, the calculated resistance value increases only slightly to 0.675Ω. The corresponding earth fault current (Table 6.1) is now 584A. These values will be used for the subsequent calculations.

As in case study 2, the formula of Appendix D and cable data in Appendix D, table 1 are used to calculate the fault current distribution.

Component	Value
R_D	10Ω
R_B	0.675Ω
L	1km
I_F	584A
I_{ES}	93.6%
I_{ES}	546.6A
EPR_B	369V

Table 6.5 Case study 3, input data and results for end part of circuit
(Note that R_A is used in formula to represent R_D)

Commented [DC32]: Should this be the other way around?

As can be seen in Table 6.5, almost all of the fault current (about 94%) flows through R_B and creates an EPR of 369V. The amount of copper conductor laid with the cable is sufficient to provide an EPR of less than 430V. Further optimization could be carried out to reduce the length of copper conductor used whilst still achieving an EPR of <430V.

Commented [DC33]: Do we need to ref 430V

Commented [DC34]: Do we need to ref 430V

Note that the small amount of current (6.4%) that flows via the cable sheaths and through R_D into the soil, will create an EPR of approximately 374V there.

Component	Value
R_C	10Ω
R_A	0.25Ω
L	1km
I_F	584A
I_{ES}	97.4%
I_{ES}	569A
EPR_A	142V

Table 6.6 Case study 3, input data and results for start part of circuit
(Note that R_B is used in the formula to represent R_C)

The same equation can be used to predict the EPR at the source substation and the first pole/cable interface at C.

As can be seen from Table 6.6, the EPR at point A is only 142V, due to the lower earth resistance there.

The EPR at locations A and B are sufficiently low that calculation of touch, step and external impact contours are not required.

6.4 Case study 4

6.4.1 Introduction

In UK transmission networks (generally operating at voltages of 132kV and above) the System Neutral is solidly and multiply earthed. This is achieved by providing a low impedance connection between the star point of each EHV transformer (primary) winding and each substation earth electrode. The low impedance neutral connection often provides a parallel path for earth fault current to flow and this reduces the amount of current flowing into the substation earth electrode. For EPR calculations in such systems, the neutral returning component of earth fault current must be considered. The current "split" between the different return paths in this study is shown by red arrows in Figure 6.7 below.

Circuits entering a substation are often via a mixture of overhead and underground cables. As explained in Section 4, a high percentage of the earth fault current flowing in an underground cable circuit will return to source via the cable sheath if bonded at both ends (typically 70% to 95%), whereas in an earthed overhead line circuit the current flowing back via the aerial earthwire is a lower percentage (typically 30% - 40%). It is therefore necessary to apply different reduction factors to the individual currents flowing in each circuit. The individual phase currents on each circuit are required for these calculations.~~to calculate these factors.~~

The detailed fault current data required is normally available at transmission level from most network modelling software packages. Any additional calculation effort at an early stage is usually justified by subsequent savings in design and installation costs that result from a lower calculated EPR.

This case study has been selected to illustrate:

a) Calculations to subtract the local neutral current in multiply earthed systems;

b) The application of different reduction factors for overhead line and underground cable circuits;

c) A situation where there are fault infeeds from two different sources

6.4.2 Case Study Arrangement

Figure 6.7 shows a simplified line-diagram of an arrangement where a 132kV single phase to earth fault is assumed at 132/33kV Substation X. Two 132kV circuits are connected to Substation X, the first is via an overhead line from a 400/132kV Substation Y and the second is via an underground cable from a further 132/33kV Substation Z which is a wind farm connection. There is a single transformer at Substation X and its primary winding is shown together with the star point connection to earth.

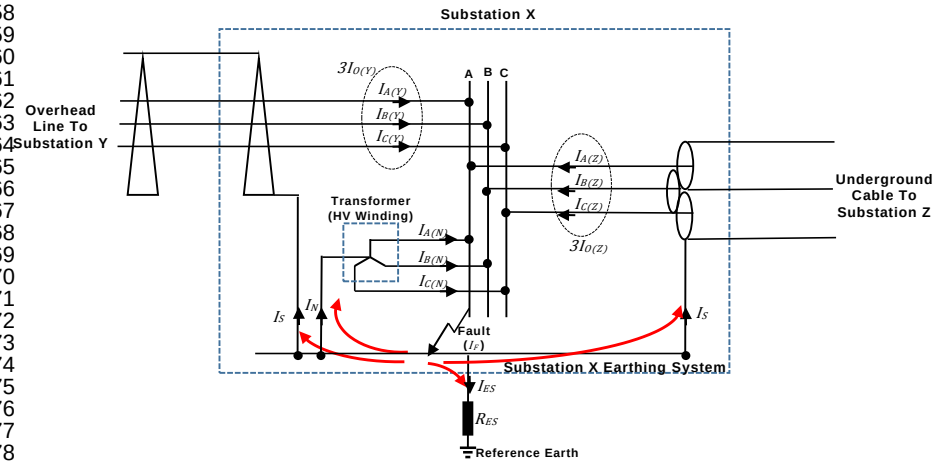

Figure 6.7 Case study arrangement
(Red arrows show current "split" from the fault point)

6.4.3 Case study data

For the single phase to earth fault on Phase A illustrated in Figure 6.7, the individual currents flowing on each phase of each circuit and in the transformer HV winding are shown in Table 6.7. This data is typical of that from short-circuit software package used for transmission studies.

Single-phase to ground fault at Substation X							
From	**Ik"A [kA]**	**Ik"A, Angle [deg]**	**Ik"B [kA]**	**Ik"B, Angle [deg]**	**Ik"C [kA]**	**Ik"C, Angle [deg]**	**$3I_0$ [kA]**
Transformer (HV Side)	0.840	62.386	0.291	76.190	0.495	63.802	1.620
Substation Y	4.163	72.533	0.766	-135.761	0.598	-93.980	2.916
Substation Z	8.093	76.072	0.541	27.674	0.233	139.316	8.559
Sum of contributions into	**Ik"A [kA]**	**Ik"A, Angle [deg]**	**Ik"B [kA]**	**Ik"B, Angle [deg]**	**Ik"C [kA]**	**Ik"C, Angle [deg]**	
Substation X	13.071	74.074	0.000	0.000	0.000	0.000	
	UA, [kV]	**UA, [deg]**	**UB, [kV]**	**UB, [deg]**	**UC, [kV]**	**UC, [deg]**	
	0.000	0.000	86.916	-146.069	84.262	91.344	

Table 6.7 Case study short-circuit data

6.4.4 Treatment of neutral current

In Table 6.7 the 'Sum of contributions into Substation X' is the vector sum of the faulted 'A' Phase contributions from the two lines and the transformer and is defined as the Total Earth Fault Current (I_F). The contribution shown as 'Transformer (HV Side)' represents the transformer star-point or 'neutral' current (I_N).

The current that returns to Substations Y and Z via Substation X Earth Electrode (I_{ES}) is separate from that flowing back via the transformer neutral (I_N) and metallic paths (neutral and healthy phases). It can be shown that $I_F - I_N = 3I_0$ where $3I_0$ is the three times the sum of zero-sequence current on all lines connected to the substation. For each line, $3I_0$ is equal to the vector sum of the individual line phase currents, i.e. $3I_0 = I_A + I_B + I_C$.

Table 6.8 provides the calculated $3I_0$ values for each of the two lines and their sum.

Contribution f~~F~~rom:	$3I_0$ Magnitude (kA)	$3I_0$ Angle (Deg)
Substation Y	2.916	76.9
Substation Z	8.559	74.8
Sum of Contributions from Y+Z	11.470	75.3

~~Table 6.8~~Table 6.8 Total three times zero sequence current ($3I_0$)

Commented [RW35]: TEC: Title needs changing

From Tables 6.7 and 6.8 it can be seen that earth fault current magnitude of 13.07kA (as indicated by the short-circuit package) reduces to 11.47kA once the local neutral current is subtracted.

As a further check of this value the sum of the currents flowing on the Transformer (HV Side) can be subtracted from the total earth fault current from the short-circuit package to arrive at the same result, i.e. 13.07∠74° - 1.62∠65.3° = 11.47∠75.3° (kA)

6.4.5 Fault current distribution

The circuit from Substation Y is via an overhead line whereas that from Substation Z is via an underground cable. Further calculations are required to calculate the fault current distribution between the substation electrode, tower line earthwire and the underground cable sheaths.

Table 6.9 lists the additional information assumed for this case study.

Line construction between Substations X and Y	132kV double circuit tower line – L4 construction. 20 spans long.
Reduction factor for line between Substations X and Y	0.708∠-9° (as per EREC S.34, Appendix E)
Line construction between Substations X and Z	132kV, 3 x 1c, 300mm^2 aluminium conductor, 135mm^2 copper-wire screen, XLPE insulated. 5km circuit length.
Substation Y Earth Resistance	0.1Ω
Substation X Earth Resistance	0.5Ω
Reduction factor for line between Substations X and Z	0.067∠178°

Table 6.9 Case study information for fault current distribution calculations

The calculated reduction factors (r_E) for each circuit type from Table 6.9 are applied to the three-times zero-sequence currents ($3I_0$) on each circuit and the total ground return current (I_E) calculated as shown in Table 6.10.

Formatted: Space Before: 0 pt, After: 10 pt

Contribution From:	$3I_0$ Magnitude (kA)	$3I_0$ Angle (Deg)	r Magnitude	r Angle (Deg)	I_E Magnitude (kA)	I_E Angle (Deg)
Substation Y	2.916	76.9	0.708	-9	2.06	67.9
Substation Z	8.559	74.8	0.067	178	0.565	252.8
Sum of Contributions from Y+Z	11.470	75.3			1.50	66.1

Table 6.10 Calculated ground return current

The total Ground Return Current magnitude (I_E) is shown to be only 1.5kA which is significantly lower than the short-circuit current at the fault point (I_F) of 13.07kA.

Formatted: Space Before: 0 pt, After: 10 pt

6.4.6 Earth potential rise

The Earth Potential Rise (EPR) can be calculated simply as the product of the Ground Return Current I_E and the overall Earth Resistance R_E at Substation X, i.e. 1.5kA x 0.5Ω = 750V

Formatted: Space Before: 0 pt, After: 10 pt

APPENDICES

A. Symbols used within formulae

B. Formulae

C. Earthing Design Methodology (block diagram)

D. Formulae for determination of ground return current for earth faults on metal sheathed cables

E. Ground current for earth faults on steel tower supported circuits with aerial earthwire

F. Chart to calculate resistance of horizontal electrode

G. Chain impedance of standard 132kV earthed tower lines

H. Sample calculations showing the effect on the ground return current for change in the separation between three single core cables

APPENDIX A – Symbols used within formulae

(Those shown in Old column were used in earlier versions of this document, but have been updated to align with BS EN 50522:2010

System components

New	*Old*	Symbol Description
CH	*CH*	chain (or ladder) network of an overhead line earthwire with its connections to earth via metal lattice towers along its route, or an insulated cable's sheath that has connections to earth via installations along its length
FT	*FT*	fault-throwing switch
EG	*G*	installation's grid electrode
h	*H*	external horizontal electrode (e.g. a copper tape, un-insulated stranded copper conductor or a power cable with no insulated serving – i.e. PILC or PILCSWA – that is laid direct in the soil)
E_P	*P*	plate electrode
E_R	*R*	rod electrode
s	*S*	line earthwire
E_T	*T*	line tower footing electrode

Electrical quantities and dimensions

I_F	I_F	total earth fault current – A
I_{ES}	I_E	component of I_F passing to ground through grid electrode – A
I_E	I_{gr}	component of I_F that flows through the electrode network and eventually all returning through the ground – A
rE	I_E	reduction factor of the overhead line
I_N	I_l	current via local transformer neutral - A
I_r	I_r	component of I_F through remote transformer neutrals – A
I_h	I_h	component of I_E passing to ground through external horizontal electrode – A
I_S	I_{Sr}	component of I_F returning through earthwire or cable sheath – A
I_{ET}	I_t	component of I_E passing to ground through tower footing – A
k	k	screening factor of conductors carrying induced current – e.g. earth-wires, cable sheaths
Z_x		distance to point where voltage on soil is x~~V~~ – m
D	D	average spacing between parallel grid electrodes – m

Commented [DC36]: E should be a subscript

Formatted: Font: Not Italic

Formatted: Font: Not Italic

New	*Old*	Symbol Description
d	d	diameter or circular electrode or width of tape electrode – m
L	l	cable length – km
L_R	l_R	length of earth rod - m
L_E	l_E	total length of electrode (e.g. in grid) - m
L_H	l_H	horizontal electrode length - m
L_p	l_P	grid or loop electrode length - m
ρ	p	earth resistivity – Ωm
r_a	r_a	cable armour resistance – Ωkm
r_c	r_c	cable sheath resistance – Ωkm
h	h	radius of equivalent hemisphere – m
R_R		resistance of single rod – Ω
R_{ER}	R_2	resistance of group of rods – Ω
R_A		earthing resistance at substation A - Ω
R_B		earthing resistance at substation B - Ω
R_E	R_e	total earthing resistance at substation – Ω
R_F	R_f	fault resistance – Ω
R_{ES}	R_l *and* R_g	grid electrode earthing resistance – Ω
R_{EH}	R_h	external horizontal electrode earthing resistance - Ω
R_{NE}	R_{ne}	neutral earthing resistance - Ω
R_{EP}	R_p	earth plate resistance – Ω
R_{ET}	R_t	tower footing resistance - Ω
s	S	line span length – km
U_E	V_e	rise of earth potential of substation – V
U_T		touch potential – V
U_S		step potential – V

Commented [DC37]: All definition of Ls need to be looked at

New	*Old*	Symbol Description
U_{VT}		prospective touch potential – V
U_{VS}		prospective step potential – V
U_{SP}		permissible step voltage – V
U_{TP}		permissible touch voltage – V
φ		earth surface potential
V_S	V_S	voltage on the surface of the soil at point s, with respect to true earth potential – V
Z_Q		tower line earthwire impedance per km - Ω
Z_C	z_c	cable sheath impedance This is the overall sheath and armour of 3-core cables or sheaths of 3 × single-core cables – Ωkm
Z_{CH}	Z_{ch}	chain (or ladder) network impedance – Ω (Referred to as Z_p in BS EN 60909-3:2010)
Z_e		substation earthing impedance – Ω
Z_E		impedance to earth
Z_∞		chain impedance (earth wire/tower footing) of the overhead line assumed to be infinite
$z_{mp,1}$	$z_{mp,1}$	mutual impedance between cable conductor and sheaths 1, 2 and 3 respectively
$z_{mp,2}$	$z_{mp,2}$	of three single core cables - Ωkm
$z_{mp,3}$	$z_{mp,3}$	
$z_{ml,2}$	$z_{mp,2}$	mutual impedance between sheaths 1, 2 and 3 of three single core cables - Ωkm
$z_{ml,3}$	$z_{mp,3}$	
$z_{m2,3}$	$z_{mp,3}$	
$z_{mp,s}$	$z_{mp,s}$	mutual impedance between line conductor and earthwire - Ωkm
$z_{mp,c}$	$z_{mp,c}$	mutual impedance between cable conductor and sheath of three core cables - Ωkm
Z_S		earthwire impedance - Ωkm
$\angle$	$\angle$	angle in degrees

Commented [DC38]: Is this dimension correct

Formatted: Font: Not Italic

Formatted: Font: Not Italic

Formatted: Font: Not Italic

Formatted: Font: Not Italic

Formatted: Font: Not Italic

1039

APPENDIX B – Formulae

Earth resistance formulae. (Note that all formulae are those from EREC S34, 1986 version, except where noted otherwise).

Symbols are defined in Appendix A unless specifically defined in this Appendix.

Refer to (BS 7430)~~(BS 7430, 2012)~~ for additional formula related to simple rod arrangements that would not generally be used at distribution or power company installations.

The formulae have been grouped as follows:-

R = earth resistance of different arrangements

C = current rating

P = potentials (surface, touch and step)

Formula R1 Rod electrode

$$R_{ER} = \frac{\rho}{2\pi L_R}\left[log_e\left(\frac{8L_R}{d}\right) - 1\right]$$

Formula R2 Plate electrode (mainly used for sheet steel foundations)

$$R_{EP} = \frac{\rho}{8r}\left(1 + \frac{r}{2.5h + r}\right)$$

where:

$$r = \sqrt{\frac{A}{\pi}}$$

$A =$ area, $h =$ depth

Formula R3 Ring electrode

$$R_E = \frac{\rho}{4\pi^2 r}\left(log_e \frac{64r^2}{dh}\right)$$

where:

h =depth (m)

r =ring radius (m) $= \sqrt{\frac{A}{\pi}}$

d=conductor diameter (m)

Formula R4 Grid/mesh resistance

$$R_{ES} = \frac{\rho}{4r} + \frac{\rho}{L_E}$$

Formatted: Font: Font color: Black

Formatted: Tab stops: Not at 0.75 cm + 2.54 cm + 3.81 cm + 5.08 cm + 6.35 cm + 7.62 cm + 8.89 cm + 10.16 cm + 11.43 cm + 12.7 cm + 13.97 cm + 15.24 cm + 16.51 cm

Commented [RW39]: or ENA TS 41-24

Formatted: Default Paragraph Font, Font: (Default) Arial, Font color: Black, (Asian) Chinese (PRC), (Other) English (United Kingdom), Expanded by 0.4 pt

Formatted: Font: Font color: Black

Formatted: Font: Font color: Black

Formatted: Font: Font color: Black

Field Code Changed

Formatted: Font: Font color: Black, Highlight

Formatted: Font: Font color: Black

Formula R5 Group of rods around periphery of grid

$$R_{ER} = \frac{\rho}{N2\pi L_H}\left(log_e \frac{8L_h}{d} - 1\right)(1 + k\alpha)$$

α = Radius of equivalent hemisphere for 1 rod = $\frac{\rho}{2\pi R}$ (metres)

k=factor from figure below:

N: total number of rods around periphery of grid

K factor for formula R5

Commented [RW40]: this can alternatively be included as a table that can be used in spreadsheet routines

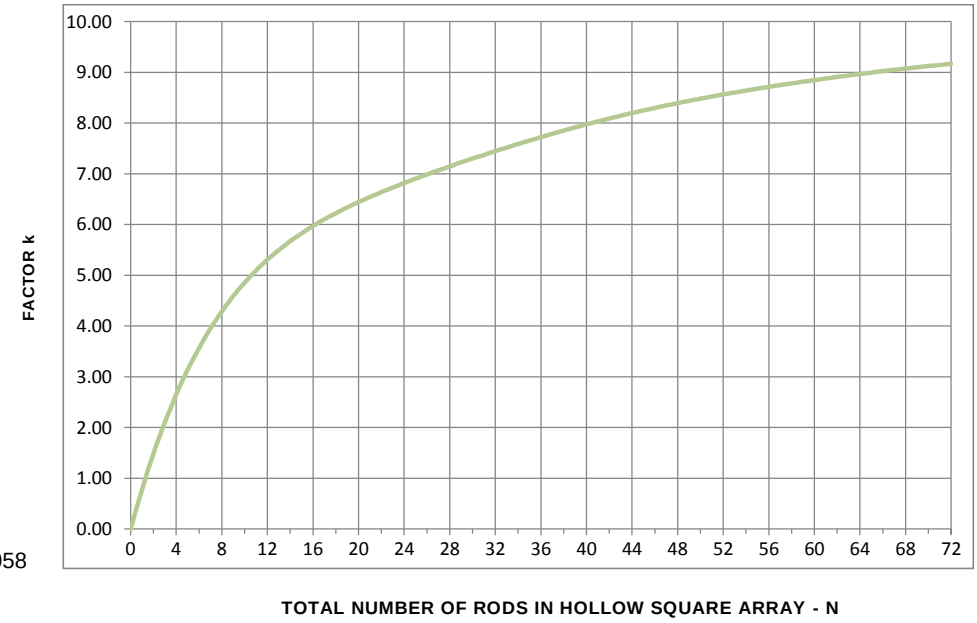

Formula R6 Combined grid and rods (rods on outside only)

$$R_{ES} = \frac{R_1 R_2 - {R_{12}}^2}{R_1 + R_2 - 2R_{12}}$$

where:

R_1= resistance of grid (Formula R4)

R_2= resistance of rods $\frac{R'}{N}(1 + k\alpha)$ (Formula R5)

$$R_{12} = R_1 - \frac{\rho}{\pi L}\left(log_e \frac{l}{b} - 1\right)$$

$b = w/\pi$

where w = width of tape electrode (m), L = length of buried conductor (m), l = rod length (m)

Note : the formula only provides sensible results for generally used dimensions – in particular for normal or rod widths/diameters.

Formula R7 Strip/tape electrode

(BS 7430)(BS 7430, 2012) – *See* Appendix F or use the formula:

$$R_H = \frac{\rho}{2\pi L_H}\left[log_e\left(\frac{{L_H}^2}{1.35hd\ x\ (burial\ depth - m)}\right)\right]$$

The above formula is only valid up to certain lengths (the effective length) which is typically about 300m for average soil and substation applications, after which the effect of adding further length is significantly diminished due to the self impedance of the electrode that is not accounted for in Formula R7. The approximate effective lengths for a single earthwire, tape or PILCSWA cable are shown in Table 1 below. For larger cables – in particular where there are several in reasonably close proximity, computer software or a more detailed equation (such as Schwartz – IEEE80 section 14.3) should be used. The advantage of using computer software is that the extended electrode cross sectional area and material can be correctly accounted for.

See also Formula R9 and Table 2 for estimates of proximity factors when electrodes are run in parallel.	
Soil Resistivity p	Effective Length m
1	60
10	180
100	500
1000	1500

Table A2.1 Approximate effective lengths for a single earthwire, tape or PILCSWA cable

Commented [RW41]: highlighted text is just to show where formula came from

Formatted: Highlight

Field Code Changed

Formula R8 Ladder networks

Long circuits. In all cases, quantities are impedances, not magnitudes.

R8.1 – Long overhead lines with earthwire (BS EN 60909-3, 2010)

$$Z_{CH} = 0.5Z_Q + \sqrt{(0.5Z_Q)^2 + R_{ET} \cdot Z_Q}$$

See (BS EN 60909-3, 2010) for description of Z_Q. Appendix G provides calculated values of Z_{CH} for a traditional UK 132kV tower line.

R8.2 – Long cable circuit with distributed earthed nodes (distribution substation electrodes) (BS EN 60909-3, 2010)

$$Z_{CH} = \frac{Z_1 + \sqrt{{Z_1}^2 + 4 \cdot Z_1 \cdot Z_2}}{2}$$

Where Z_1 = average longitudinal sheath impedance of cable/km connecting the substations (ensure parallel value is used for single core formats such as triplex)

Z_2 = average substation earthing impedance $(0j + R_B)\Omega$

Short circuits

R8.3 – short overhead lines with earthwire (typically 5 to 20 towers)

$$Z_{CH} = \frac{Z_P(Z_{EB} + Z_P)k^n + (Z_P - Z_Q)(Z_{EB} - Z_P + Z_Q)k^{-n}}{(Z_{EB} + Z_P)k^n - (Z_{EB} - Z_P + Z_Q)k^{-n}}$$

(NOTE: all impedances are in complex notation. Formula as provided in (BS EN 60909-3, 2010). Refer to BS EN 60909 for descriptions of symbols because they differ from those used in this document).

For detailed calculations, a discrete ladder network (iterative) routine or computer software should be used. The self and mutual impedance for the earthwire(s) need to be calculated, accounting for their material, cross sectional area and the circuit geometry.

Short underground cable/substation arrangements.

The approach is as follows:

Where there a significant proportion of the cable is PILCSWA, the resistance is calculated based entirely on this using Formula R6.

Where the majority of the cable is XLPE/EPR/Triplex etc., an approximate approach is to treat all the substation earth resistances as being in parallel and inflate the result by 30% to account for the longitudinal sheath impedance. This is sufficiently accurate for typical cable lengths of 200m to 450m and low sheath impedance. If more than 6 substations are be considered, a higher inflation amount needs to be considered. Detailed calculations will be needed if the substation earth resistances approach 1 ohm or less, because the sheath impedance then becomes significant.

For detailed calculations, a discrete ladder network (iterative) routine or computer software should be used.

Commented [RW42]: here and elsewhere in this Appendix, text has been added to show where the formula came from and would be removed prior to publication

Formatted: Highlight

Formatted: Highlight

See also (BS EN 60909-3, 2010) for more details of the calculations for ladder networks, including non-symmetrical arrangements.

Formula R9 Accounting for proximity effects

The resistance R_t in ohms (Ω) of *n* vertically driven rods set *s* metres apart may be calculated from:

$$R_t = \frac{l}{n}\frac{\rho}{2\pi L}\left[log_e\left(\frac{8L}{d}\right) - 1 + \frac{\lambda L}{s}\right]$$

Where:

ρ is the resistivity of soil, in ohm metres (Ωm);

L is the length of the electrode, in metres (m);

n is the number of rods;

and

λ is a group factor where: $\lambda = 2\,\boldsymbol{\Sigma}(\frac{l}{2} + \cdots + \frac{l}{n})$

NOTE: For larger values of n, λ can be approximated by: $\lambda \simeq 2\ log_e\ \frac{1.781n}{2.818}$

(Source: Sunde, E.D.: Earth conduction effects in transmission systems, Dover Publications, 1967, pp75-79)

Computer software is best used to account for proximity effects where strip electrodes or PILCSWA type cables run in parallel. An approximation of this effect can be made using proximity factors such as those illustrated in Table A2.2 below. Strip electrodes of about 120m in uniform soil are a set distance apart. Each provides a resistance of 2Ω in uniform soil and in the absence of the effect, a parallel resistance of 1Ω would be anticipated. The table shows the higher resistance and proximity factor that applies, clearly increasing when the electrodes are closer together.

Separation distance m	Overall resistance Ω	Proximity factor
1	1.57	1.57
5	1.38	1.38
10	1.3	1.3
20	1.22	1.22
50	1.125	1.125
100	1.07	1.07

Table A2.2 Proximity effect of electrodes run in parallel (calculated using computer software)

Formula R10 Overall earth resistance

$$Z_E = \left(\frac{1}{R_{Es}} + \frac{1}{R_H} + \frac{1}{Z_{CH1}} + \frac{1}{Z_{CH2}} + \cdots\right)^{-1}$$

Formula C1 Current rating formula

For fault currents which are interrupted in less than 5s the cross-section of earthing conductor or earth electrode shall be calculated from the following formula D.1 (IEC 60287 - 3-1 Ed 1.1b, 1999)

$$A = \frac{I}{K}\sqrt{\frac{t_f}{log_e\left(\frac{\Theta_f + \beta}{\Theta_i + \beta}\right)}}$$

(Source: IEC 60949, formula D1)

where:

A	is the cross-section in mm^2
I	is the conductor current in amperes (RMS value)
t_f	is the duration of the fault in seconds
K	is a constant depending on the material of the current-carrying component; Table D.1 of IEC 60949 provides values for the most common materials assuming an initial temperature of 20°C
β	is the reciprocal of the temperature coefficient of resistance of the current-carrying component at 0°C (see Table below).
Θ_i	is the initial temperature in degrees Celsius. Values may be taken from (IEC 60287-3-1 Ed. 1.1 b : 1999, Electric cables - Calculation of the current rating - Part 3-1: Sections on operating conditions - Reference operating conditions and selection of cable type, 1999). If no value is laid down in the national tables, 20°C as ambient ground temperature at a depth of 1m should be adopted.
Θ_f	Is the final temperature in degrees Celsius

Commented [RW43]: these were imported from 41-24

Surface potential formulae

For substations with separately earthed fence and normal buried grid depths (typically 0.6 m)

Formula P1 External touch potential at the edge of the electrode

$$E_{t(grid)} = \frac{k_e \cdot k_d \cdot \rho \cdot I}{L} \text{(V) or } L = \frac{k_e \cdot k_d \cdot \rho \cdot I}{E_{touch}} \text{(m)}$$

$$k_e = \frac{1}{\pi}\left(\frac{1}{2} log_e \frac{h}{d} + \frac{1}{2h} + \frac{1}{(0.5 + D)} + \frac{1}{D}(1 - 0.5^{n-2})\right)$$

k_e is a factor that allows for the effect of a uniformly distributed electrode current over the grid and is given by:

h = grid depth (m)

d = equivalent diameter of conductor $= \frac{\text{circumference of conductor}}{\pi}$ (m)

ρ = soil resistivity (Ω m)

I = total current passing to ground through electrode (A)

D = average spacing between parallel grid conductors (m)

$$n = (n_A \times n_B)^{1/2}$$

where n_A = number of parallel grid conductors in one direction

where n_B = number of parallel grid conductors in the other direction

k_d is a factor, which modifies k_e to allow for the non-uniform distribution of electrode current, and is given by:

$$k_d = \left(0.7 + 0.3\frac{L}{L_p}\right)$$

where

L = total length of buried electrode conductor including rods if connected (m)

L_p = perimeter length of buried electrode conductor including rods if connected (m)

I = total current passing to ground through electrode (A)

E_{touch} = resulting “touch” potential or, when assessing length L, the safe “touch” potential from Figure 2

Formula P2 External 'Touch' potential at the fence

The ground current density is significantly diminished at the fence compared to that at the edge of the grid electrode. As a result, a new factor, k_f, based on a two metre separation between fence and grid electrode, is applied in place of k_e in the above formulae.

Hence:

$$\mathrm{U}_{\mathrm{VT(fence)}} = \frac{k_f \cdot k_d \cdot \rho \cdot I}{L}(V) \; or \; L = \frac{k_f \cdot k_d \cdot \rho \cdot I}{E_{touch}}(m)$$

where k_f = 0.26k_e

Substation with integrally earthed fence

There are two situations to be considered. The first is where the fence is situated at the edge of the substation electrode. The second has a peripheral electrode conductor buried half a metre below the surface, one metre beyond the fence and regularly bonded to it.

External touch potential at fence with no external peripheral electrode

$E_{t(fence)}$E$_{\text{t (fence)}}$ is the same as $E_{t(grid)}$E$_{\text{t (grid)}}$ using P1 as above.

Formula P3 External touch potential at fence with external buried peripheral conductor 1m from fence

$$\mathrm{U}_{\mathrm{VT(fence)}} = \frac{k_{fe} \cdot k_d \cdot \rho \cdot I}{L}(V) \; or \; L = \frac{k_{fe} \cdot k_d \cdot \rho \cdot I}{E_{touch}}(m)$$

Where $k_{fe} = \left(\frac{1}{2} log_e \frac{h}{d} - \frac{1}{4} log_e (S^2 + 0.5^2)^2 + \frac{1}{4} log_e (S^4 + S^2)\right)$

h and d are as in formula P1

S = distance between the outermost buried grid conductor and the next nearest parallel conductor (m)

Formula P4 Touch voltage within grid (from IEEE80)

Notes:

Formula 16.5.1 (quite complex and has a number of correction factors)

Annex D has simpler formulae.

Formula P5 Step voltage on outside edge of grid

$U_{VS} = \frac{\rho I_F}{2\pi r}\left(arcsin\frac{r}{x} - arcsin\frac{r+1}{x}\right)$ where $r = \frac{\rho}{4R_E}$

Formula P6 Voltage profile around earth electrode

COLUMN	P6.1	P6.2	P6.3
ELECTRODE DESCRIPTION	HEMISPHERE	VERTICAL ROD	BURIED GRID
CONFIGURATION		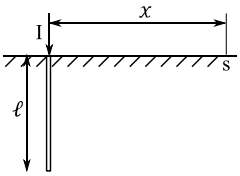	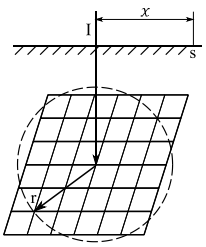
VOLTAGE ON THE SURFACE OF THE GROUND AT POINT 'S' WITH RESPECT TO TRUE EARTH	$V_S = \frac{\rho I}{2\pi x}$	$V_S = \frac{\rho I}{2\pi \ell} \log_e \left(\frac{\ell}{x} + \sqrt{1 + \frac{\ell^2}{x^2}} \right)$	$V_S = \frac{\rho I}{2\pi \ell} \arcsin \frac{r}{x}$ where $r = \frac{\rho}{4R_g}$ $\arcsin \frac{r}{x}$ (in radians)

Formula P7 Calculation of specific external potential contours

$$Z_x = \sqrt{\frac{A}{\pi}}\left[\left(sin\frac{V_x\,\pi}{2U_E}\right)^{-1} - 1\right]$$

where Z_x is the distance in metres to a point where the surface potential is V_x volts.

$$Z_{430} = \sqrt{\frac{A}{\pi}}\left[\left(sin\frac{215\pi}{U_E}\right)^{-1} - 1\right]$$

$$Z_{650} = \sqrt{\frac{A}{\pi}}\left[\left(sin\frac{325\pi}{U_E}\right)^{-1} - 1\right]$$

where Z_{430} and Z_{650} are in metres.

A = superficial area of grid electrode in square metres.

U_E = earth potential rise in volts.

These formulae apply on the basis that the earthing installation may be treated as equivalent to a symmetrical grid.

Substation fences are usually earthed independently from the main earthing system and may be up to 2m from it. By using the above formulae as the “hot zone” radii, a factor of safety is introduced when they are applied measured from the substation fence. Some discretion may be necessary in assessing the “hot zone” radius of a substation where the fence is bonded to the earthing installation or there is a large distance from the fence to the edge of the earthing system.

Clearly this formula does not apply when U_E is lower than the voltage contour of interest.

Obtain Basic Data (ENA TS 41-24 Ch8):

- Substation Plan
- Earth Fault Currents (S34 Ch..)
- Fault Duration

APPENDIX C – Earthing design methodology

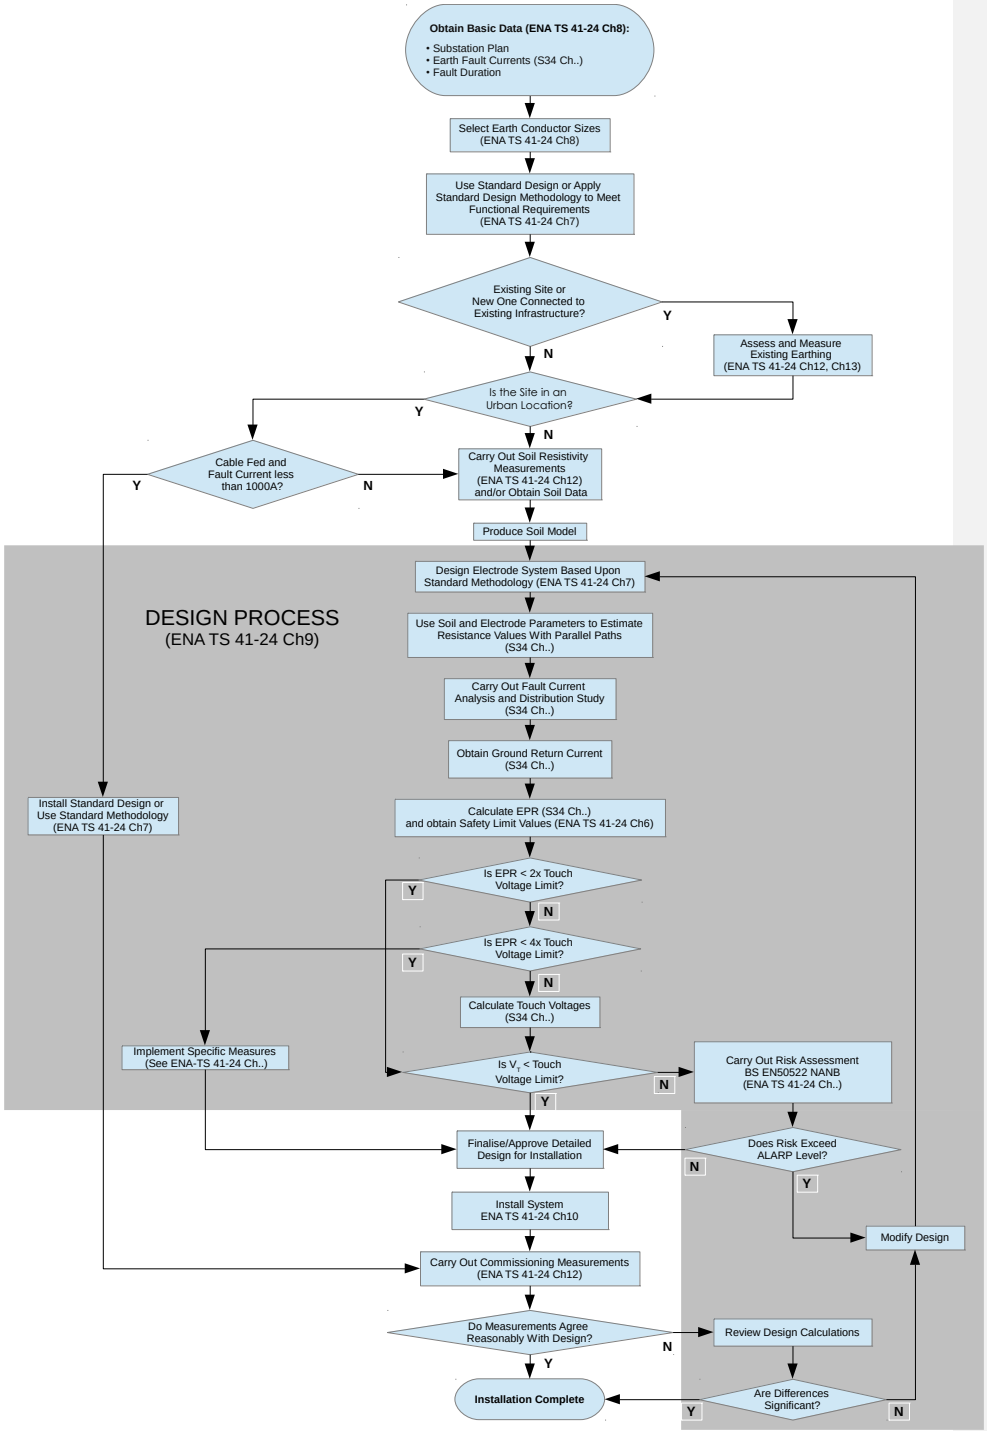

APPENDIX D – Formulae for determination of ground return current for earth faults on metal sheathed cables

The current in the core of a single-core cable or the unbalance of current in the cores of a multicore cable induces a voltage in the metallic sheath/armour of the cable. If the sheath/armour is connected to earth at each end of its length, a current will be driven through the sheath/armour earth loop which constitutes part of the earth fault current returning from the fault, the remainder being that returning in the ground. The quantity of current returning in the cable sheath/armour is, inter alia, dependent on the location of the cable in the system with respect to the source of fault current infeed and to the position of the fault as well as on the values of the sheath/armour terminating earth resistances.

Formulae for the computation of the ground current are given below, in respect of a cable terminated and earthed at points A and B.

1a. Three-core cable (unarmoured), source of infeed at point A and fault at point B. See diagram Fig. 7.

$$I_{Es} = -I_F\left[\frac{l(z_c - z_{mp,c})}{lz_c + R_A + R_B}\right] = -I_F\left[\frac{lr_c}{lz_c + R_A + R_B}\right]$$

1b. Three-core cable (armoured), source of infeed at point A and fault at point B. See diagram Figs. 7 and S.

$$I_{Es} = -I_F\left[\frac{l\left(\frac{r_c \times r_a}{r_c + r_a}\right)}{l\left(\left(\frac{r_c \times r_a}{r_c + r_a}\right) + r_e + j\omega(L_c + L_a)\right) + R_A + R_B}\right]$$

2a. Three-core cable (unarmoured), source of infeed beyond point A and fault beyond point B. See diagram Fig. 9.

$$I_{Es} = -I_F\left[\frac{l(z_c - z_{mp,c}) + R_A + R_B}{lz_c + R_A + R_B}\right] = -I_F\left[\frac{lr_c + R_A + R_B}{lz_c + R_A + R_B}\right]$$

2b. Three-core cable (armoured), source of infeed beyond point A and fault beyond point B. See diagram Figs. 9 and 10.

$$I_{Es} = -I_F\left[\frac{l\left(\frac{r_c \times r_a}{r_c + r_a}\right)R_A + R_B}{l\left(\left(\frac{r_c \times r_a}{r_c + r_a}\right) + r_e + j\omega(L_c + L_a)\right) + R_A + R_B}\right]$$

Commented [DC44]: figures need to come back into S34

Formatted: Highlight

Formatted: Highlight

Formatted: Highlight

Formatted: Highlight

3a. Three-core cable (unarmoured), source of infeed beyond point A and fault at point B, or source of infeed at point B and fault beyond point A. See diagram Fig. 12.

Formatted: Highlight

$$I_{Es} = -I_F\left[\frac{l(z_c - z_{mp,c}) + R_A}{lz_c + R_A + R_B}\right] = -I_F\left[\frac{lr_c + R_A}{lz_c + R_A + R_B}\right]$$

3b. Three-core cable (armoured), source of infeed at point A and fault at point B, or source of infeed at point B and fault beyond point A. See diagram Figs. 11 and 13.

Formatted: Highlight

$$I_{Es} = -I_F\left[\frac{l\left(\frac{r_c \times r_a}{r_c + r_a}\right)R_A}{l\left(\left(\frac{r_c \times r_a}{r_c + r_a}\right) + r_e + j\omega(L_c + L_a)\right) + R_A}\right]$$

4. Three single-core cables, source of infeed at point A and fault at point B; the cable sheaths are referenced 1, 2, 3. See diagram Fig. 14, Evaluate sheath currents 11, 12 and 13 and determine IEs from the following:

$$\begin{bmatrix} (R_A + lz_{c1} + R_B) & (R_A + lz_{m1,2} + R_B) & (R_A + lz_{m1,3} + R_B) \\ (R_A + lz_{m1,2} + R_B) & (R_A + lz_{c2} + R_B) & (R_A + lz_{m2,3} + R_B) \\ (R_A + lz_{m1,3} + R_B) & (R_A + lz_{m2,3} + R_B) & (R_A + lz_{c3} + R_B) \end{bmatrix}\begin{bmatrix} I_1 \\ I_2 \\ I_3 \end{bmatrix} = -I_F\begin{bmatrix} (R_A + lz_{mp,1} + R_B) \\ (R_A + lz_{mp,2} + R_B) \\ (R_A + lz_{mp,3} + R_B) \end{bmatrix}$$

5. Three single-core cables, source of infeed beyond point A and fault beyond point B. See diagram Fig. 15.

Formatted: Highlight

Evaluate sheath currents 11, I2 and 13 and determine I_{Es} from the following:

$$\begin{bmatrix}\text{IMPEDANCE COEFFICIENTS} \\ \text{AS IN (4) ABOVE}\end{bmatrix}\begin{bmatrix} I_1 \\ I_2 \\ I_3 \end{bmatrix} = -I_F\begin{bmatrix} (lz_{mp,1}) \\ (lz_{mp,2}) \\ (z_{mp,3}) \end{bmatrix}$$

6. Three single-core cables, source of infeed beyond point A and fault at point B, or source of infeed at point B and fault beyond point A. See diagrams Figs. 16 and 17.

Formatted: Highlight

Evaluate sheath currents 11, 12 and 13 and determine I_{Es} from the following:

$$\begin{bmatrix}\text{IMPEDANCE COEFFICIENTS} \\ \text{AS IN (4) ABOVE}\end{bmatrix}\begin{bmatrix} I_1 \\ I_2 \\ I_3 \end{bmatrix} = -I_F\begin{bmatrix} (lz_{mp,1} + R_B) \\ (lz_{mp,2} + R_B) \\ (z_{mp,3} + R_B) \end{bmatrix}$$

The parameters used in the above formulae are as given in the list of symbols shown in Section 3.1 or as defined below.

The quantities z_c ; z_{c1} ; z_{c2} ; z_{c3} are the sheath to earth self impedances at 50 Hz.

$$= r_c + \left(49.4 + j62.8\, log_e \frac{93.2\sqrt{\rho}}{c_g}\right) \times \frac{10^{-3}\Omega}{km}$$

where c_g is the GMR of the sheath in metres.

The quantity R_E is the resistive component of the ground return path of the sheath to earth self impedance.

$$= 5\pi^2 10^{-3}\Omega/\mathrm{km}$$

$$= \left(0.2\, log_e \frac{93.2\sqrt{\rho}}{c_g}\right) \times 10^{-3}\Omega/km$$

The quantity L_c is the inductive component of the sheath to earth self impedance.

The quantity L_a is the effective inductance of the armour wire.

$$= \left(\frac{0.4\mu t}{d_i + t}\right) \times \frac{10^{-3}H}{km}$$

Where t is the thickness of the armour wire in metres.

d_i is the internal diameter of the armour wire in metres.

μ is the relative permeability of the armour wires

The quantities $z_{mp,c}$; $z_{mp,1}$; $z_{mp,2}$ and $z_{mp,3}$ are the faulty conductor to sheath mutual impedances and $z_{m1,2}$; $z_{m1,3}$ and $z_{m2,3}$ are the sheath-to-sheath mutual impedances at 50 Hz.

$$= \left(49.4 + j62.8\, log_e \frac{93.2\sqrt{\rho}}{d}\right) \times \frac{10^{-3}\Omega}{km}$$

where *d* is the centre to centre distance in metres between the conductors/sheaths.

In calculating $z_{mp,c}$; $z_{mp,1}$; $z_{mp,2}$ and $z_{mp,3}$ the value of d has been substituted for c_g (where c_g is the GMR of the sheath in metres).

In the following table, the values of z_c and $z_{mp,c}$ for three-core cables in common use are listed for an assumed value of *p* of 100 Ωm.

System Voltage	Cable Type	Impedances in Ω/km for cables of Cross-sectional Area of:					
		0.1 in2		185 sq mm		300 sq mm	
		z_c	$z_{mp,c}$	z_c	$z_{mp,c}$	z_c	$z_{mp,c}$
11 kV	PILC SWA	1.221 ∠33.24°	0.672 ∠85.8°	1.099 ∠41.6°	0.674 ∠85.8°	0.873 ∠49.1°	0.622 ∠85.8°
	PILC	1.228 ∠33.77°	0.686 ∠85.88°	0.999 ∠41.66°	0.667 ∠85.77°	0.858 ∠49.53°	0.656 ∠85.69°
	PICAS			0.677 ∠77.33°	0.662 ∠85.6°	0.658 ∠79.6°	0.649 ∠85.7°
	TRIPLEX			0.89 ∠51.8°	0.703 ∠86°	0.875 ∠52°	0.691 ∠85.92°
	Cable CSA	0.2 in2	0.2 in2	185 sq mm	185 sq mm	300 sq mm	300 sq mm
33 kV	PILC SWA	0.753 ∠58.62°	0.646 ∠85.62°	0.769 ∠56.4°	0.651 ∠85.7°	0.735 ∠60.3°	0.641 ∠85.6°
	PILC	0.753 ∠58.63°	0.646 ∠85.63°	0.771 ∠56.35°	0.644 ∠85.62°		
	PICAS			0.684 ∠74°	0.659 ∠85.7°	0.667 ∠76.3°	0.65 ∠85.7°
	TRIPLEX			0.87 ∠51.8°	0.683 ∠85.87°	0.856 ∠51.5°	0.672 ∠85.8°
	Cable CSA			185 sq mm	185 sq mm	300 sq mm	300 sq mm
132 kV	PILC SWA			0.652 ∠76°	0.635 ∠85.6°	0.645 ∠76.7°	0.63 ∠85.5°
	TRIPLEX (135mm^2 Cu screen)			0.63 ∠80.71°	0.625 ∠85.48°	0.67 ∠74.78°	0.649 ∠85.65°
	PICAS			0.636 ∠79.6°	0.628 ∠85.5°	0.63 ∠80.2°	0.623 ∠85.5°
	PILC			0.771 ∠56.35°	0.644 ∠85.62°	0.725 ∠60.98°	0.637 ∠85.57°

Table A4.1 Self and mutual impedances for a sample of distribution cables

(NOTE: that in all cases the phase angle is negative)

PILCSWA = paper insulated lead sheath covered steel wire armour

PILC= paper insulated lead sheath covered

PICAS= Paper insulated corrugated aluminium sheathed

TRIPLEX= 3 x single core cables with XLPE or EPR insulation and 35mm^2 stranded copper screen/cable (11kV and 33kV) or 135mm^2 screen (132kV)

APPENDIX E – Ground current for earth faults on steel tower supported circuits with an aerial earthwire

Values of ground current I_E as a percentage of I_F and corresponding phase angle $Ø_E$ with respect to I_F for 132 kV, 275 kV and 400 kV line constructions

Type of Line and Conductor Size (mm^2)	I_E as a percentage of I_F	Phase Angle of I_E with respect to I_F ($Ø_E$ degrees lead)
132 kV (L4) (1 × 175)	70.8	171
132 kV (L7) (2 × 175)	63.6	177
275 kV (L3) (2 × 175)	66.9	178
275 kV (L2) (2 × 400)	68.6	178
400 kV (L8) (2 × 400)	70.0	179
400 kV (L6) (4 × 400)	69.2	179
400 kV (L9) (4 × 400)	64.0	179

APPENDIX F – Chart to calculate resistance of horizontal electrode

Commented [RW45]: decision to be taken on whether to update this figure or remove it

Appendix G

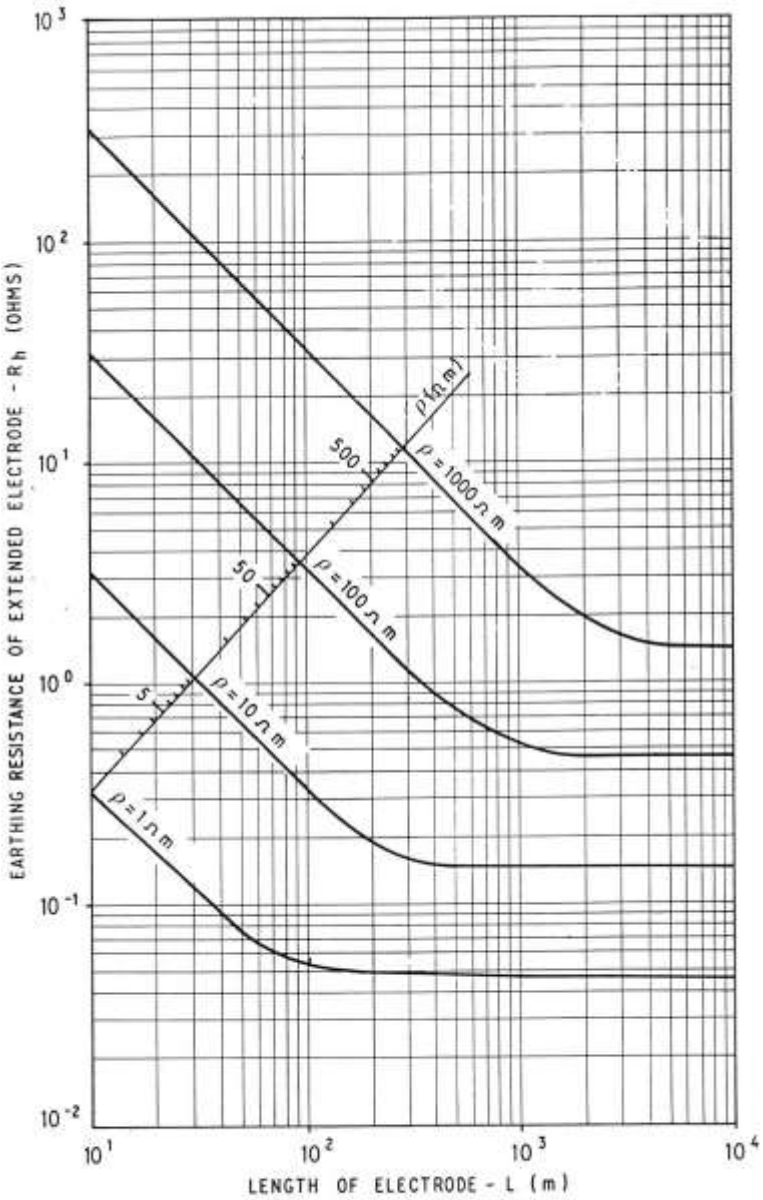

FIGURE 4:
EARTHING RESISTANCE OF EXTENDED BURIED HORIZONTAL ELECTRODE (e.g. WIRE, STRIP OR EFFECTIVELY UNINSULATED CABLE SHEATH) AS A FUNCTION OF LENGTH AND SOIL RESISTIVITY

APPENDIX G – Chain impedance of standard 132kV earthed tower lines

The table below provides chain impedances for a 132kV L4 type construction with three towers/km and a horse earthwire (approx 70mm^2 aluminium ACSR, to BS215 pt5 1970).

Longitudinal impedance of earthwire is 0.443 + j 0.757 ohm/km (calculated using Carson Clem formula).

The values assume more than 20 towers in series.

Footing resistance (ohm)	Chain impedance r + j x ohm	Chain impedance Z ∠° ohm
1	0.543+j0.414	0.683∠37.35
2	0.737+j0.52	0.902∠35.21
3	0.886+j0.603	1.072∠34.24
4	1.012+j0.674	1.215∠33.7
5	1.122+j0.736	1.342∠33.26
6	1.222+j0.793	1.457∠32.96
7	1.314+j0.845	1.562∠32.73
8	1.4+j0.893	1.661∠32.55
9	1.48+j0.939	1.753∠32.39
10	1.556+j0.982	1.841∠32.26
15	1.89+j1.172	2.224∠31.82
20	2.17+j1.333	2.547∠31.55
25	2.42+j1.474	2.832∠31.37
40	3.039+j1.83	3.547∠31.05

APPENDIX H – Sample calculations showing the effect on the ground return current for change in the separation distance between three single core cables laid flat or in trefoil

For the studies, three representative cables were selected for 11kV and 132kV voltage levels. Their details are given in Table A8.1.

Formatted: Normal, Justified, Space After: 18 pt

Operating voltage (kV)	Cable number	Phase conductor size mm^2	Insulation type	Insulation thickness mm	Core / Screen type + size mm^2	Reference cable code
132	1	630	XLPE	15	Lead	132_01_12
132	2	630	XLPE	21	Lead	132_01_13
132	3	630	XLPE	15	Copper wire 135	132_01_17
11	4	70	EPR		Copper wire 12	11_3_SZ
11	5	300	EPR		Copper wire 35	11_225_EPR
11	6	300	XLPE		Copper wire 70	11_21_S

Table A8.1 Technical details of cables modelled

The geometric arrangements considered are Trefoil and Flat. They are analysed on the basis that they are installed such that the cables are touching and again assuming they are a symmetrical distance 3 x D apart (where D is the outer cable diameter in mm). See Table A8.2 for details.

Formatted: Space After: 18 pt, Line spacing: single

	TREFOIL	FLAT
Adjacent	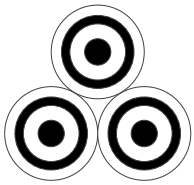	
Distance with 3xD	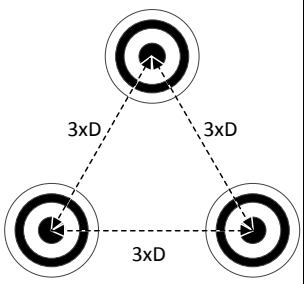	

Table A8.2 The geometric placement of cables

The 132kV cables were selected to show the difference that the sheath/screen configuration makes for the same size phase conductor. One standard cable contains a tubular conductor made of aluminum foil in addition to its stranded copper conductor. The cross-sectional view for this cable (trefoil format) is shown in Figure A8.1.

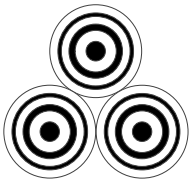

Figure A8.1 Cross-sectional view for Cable 3

The circuit used to simulate the different cable arrangements and determine the effect on the earth return current is shown in Figure A8.2

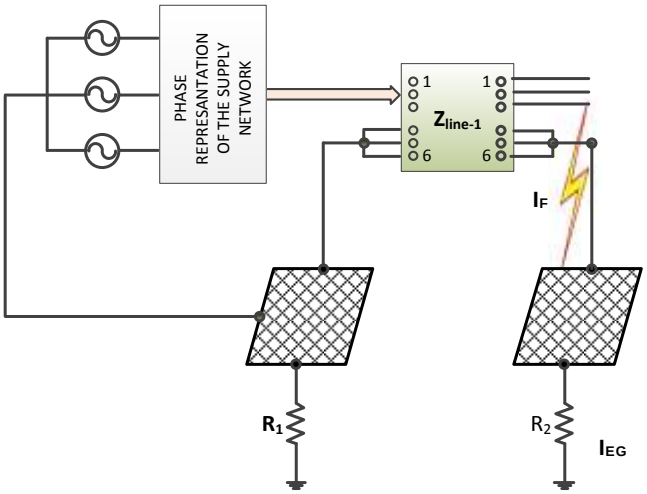

Figure A8.2 Circuit used for analysis purposes

Using the circuit described, studies were carried out for each of the cables of Table 1, and the ground return current calculated for a set range of cable lengths. For each cable, four sets of studies were carried out, i.e. one for each physical arrangement of the individual cables.

The results are shown in Figures A8.3 and A8.4, with the ground return current I_{ES} shown as a percentage of the total earth fault current I_F.

Formatted: Space After: 18 pt, Line spacing: single

Formatted: Space After: 18 pt, Line spacing: single

Formatted: Space After: 18 pt, Line spacing: single

Formatted: Justified, Space After: 18 pt, Line spacing: single

Formatted

Formatted

Formatted

Formatted

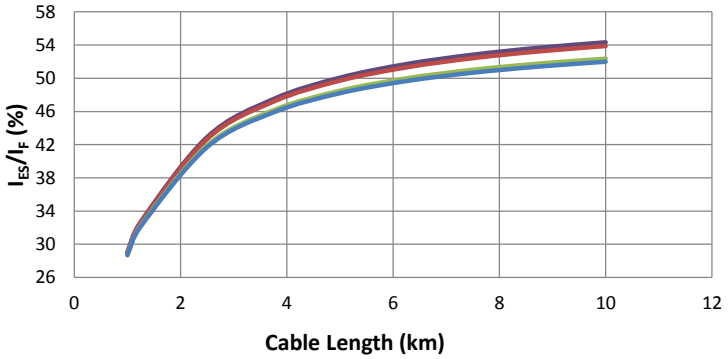

Cable 1: 630mm² with 15mm XLPE, lead sheathed

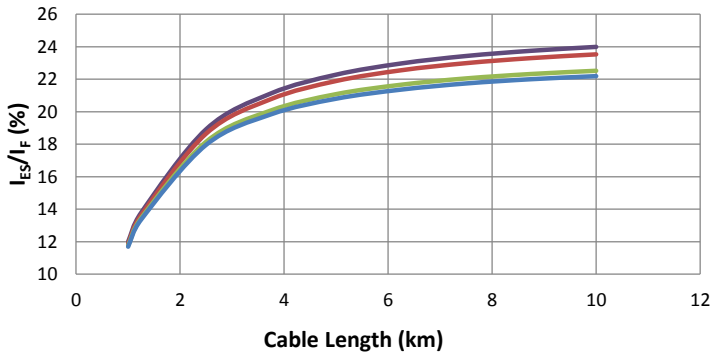

Cable 2: 630mm² with 21mm XLPE, lead sheathed

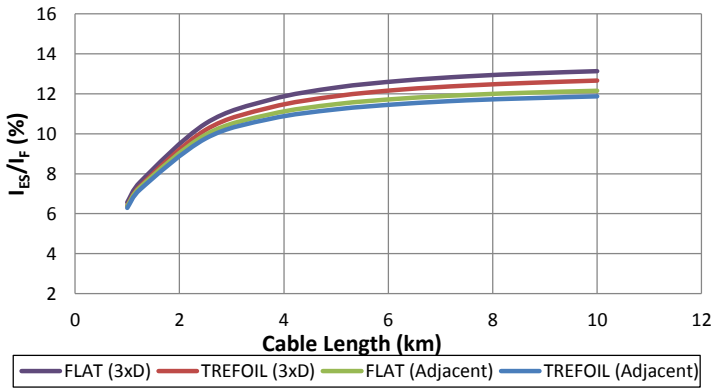

Cable 3: 630mm² with 15mm XLPE and composite screen/sheath (135mm²Cu and 45mm² A_l)

Figure A8.3 Ground return current (I_{ES}) as a percentage of (I_F) against circuit length for difference 132kV cable installation arrangements

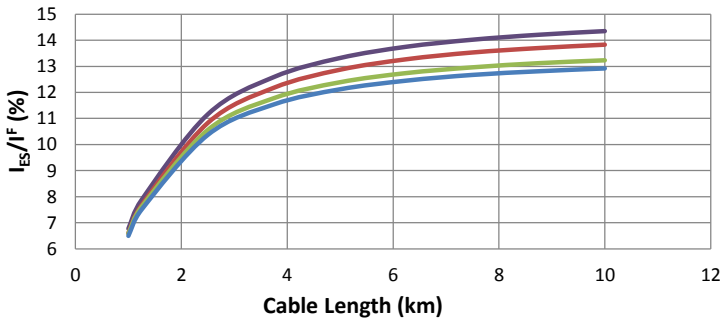

Cable 4: (70mm² with 12mm² Cu screen)

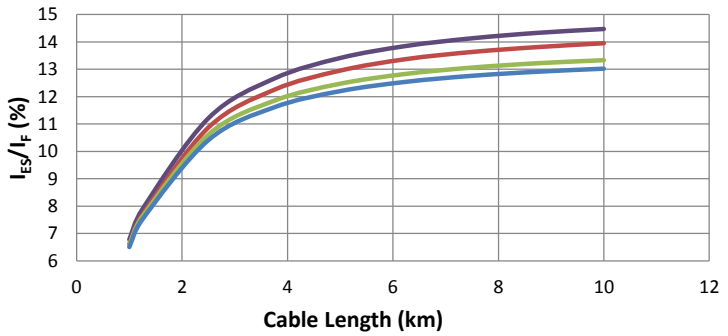

Cable 5: (300mm² with 35mm² Cu screen)

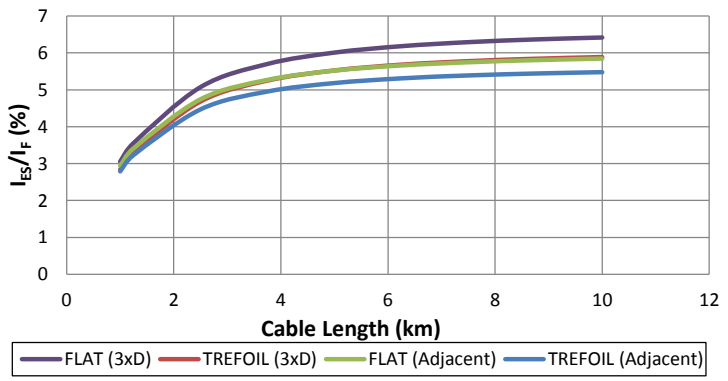

Cable 6: (300mm² with 70mm² Cu screen)

Figure A8.4 Ground return current (I_{ES}) as a percentage of (I_F) against circuit length for different 11kV cable installation arrangements

The results show that earth return current increases when the distance between adjacent cables is increased. The percentage increase in I_{gr} compared to the touching trefoil arrangement is shown in tables A8.3 and A8.4. The difference is seen to increase with circuit length and cable separation distance.

	Cable 1		Cable 2		Cable 3	
	1 km	10 km	1 km	10 km	1 km	10 km
Difference trefoil (3xD) - trefoil (%)	1.7	7.0	1.6	7.1	1.8	7.5
Difference flat - trefoil (%)	1.3	2.4	1.3	2.4	5.5	6.7
Difference flat (3xD) - trefoil (%)	4.2	11.0	4.2	11.1	9.5	17.1

Table A8.3 Effect of physical cable arrangement on ground return current I_{ES} for 132 kV cables

	Cable 4		Cable 5		Cable 6	
	1 km	10 km	1 km	10 km	1 km	10 km
Difference trefoil (3xD) - trefoil (%)	1.1	3.6	1.5	6.0	1.7	6.7
Difference flat - trefoil (%)	0.2	0.7	0.6	1.5	1.4	2.4
Difference flat (3xD) - trefoil (%)	1.4	4.5	2.6	8.1	4.4	10.6

Table A8.4 Effect of physical cable arrangement on ground return current I_{ES} for 11kV cables

Conclusions:

From figures A8.3 and A8.4, the following can be deduced:-

~~1.~~ Touching trefoil is the most effective arrangement in terms of minimising the ground return current. This is as expected, due to the more symmetrical arrangement and its impact on maximising mutual coupling effects. The ground return current increases in all cases in the order touching trefoil, touching flat, 3 x D trefoil and 3 x D flat.

~~2.~~ The difference between trefoil and flat arrangements is less than 0.5% of the total and can be disregarded for most studies.

~~3.~~ Increasing the separation between the individual cables generally increases the ground return current by less than 1% of the total.

~~4.~~ The decrease in cable core insulation thickness from 21mm (in older cables) to 15mm does reduce the ground return current, but by an insignificant amount in relation to other factors (such as measurement errors) and can be ignored for the majority of cases.

~~5.~~ The two dominant factors influencing the ground return current in these studies are the circuit length and the electrical conductivity of the sheath/screen. The latter is most visibly seen when comparing the 132kV composite screen (copper and aluminium) against a similar cable with a lead screen. The ground return current is more than doubled for the latter. The same effect is apparent with the 11kV cables and cable 4 with its relatively small

Formatted: English (United States)
Formatted: Space After: 18 pt
Formatted: English (United States)
Formatted: English (United States)
Formatted: English (United States)
Formatted: English (United States)
Formatted: Justified, Space After: 18 pt
Formatted: English (United States), Not Expanded by / Condensed by
Formatted: Normal, Justified, Space After: 18 pt, No bullets or numbering
Formatted: English (United States)
Formatted: English (United States), Not Expanded by / Condensed by
Formatted: English (United States)
Formatted: English (United States), Not Expanded by / Condensed by
Formatted: English (United States)
Formatted: English (United States), Not Expanded by / Condensed by
Formatted: English (United States)
Formatted: English (United States), Not Expanded by / Condensed by

screen of 12mm2/cable shows the importance of considering the screen size because the ground return current can reach almost 54% for this cable.

Tables A8.3 and A8.4 are included for completeness and show the increase in the actual ground return current with changes in physical arrangement, as a percentage of the ground return current for the touching trefoil arrangement.

Formatted: English (United States)

Formatted: Space After: 18 pt

Formatted: English (United States), Not Expanded by / Condensed by

Bibliography

Commented [RW46]: this is a first start and needs updating and correcting

Standards publications

(1986). *A Guide for Assessing the Rise of Earth Potential at Substation Sites.* Energy Networks Association.

(2011). *BS 7430 - Code of practice for protective earthing of electrical installations.* BSI.

(2012). *BS 7430.*

(2010). *BS EN 50522 : 2010 - Earthing of power installations exceeding 1 kV a.c.* BSI.

(2010). *BS EN 50522.*

(2010). *BS EN 60909-3 : Short-circuit currents in three-phase a.c systems. Currents during two separate simultaneous line-to-earth short-circuits and partial short-circuit currents flowing through earth.* BSI.

(2010). *BS EN 60909-3.*

(2012). *BS EN 7430 - Code of practice for protective earthing of electrical installations (incorporating corrigendum No. 1), 2011.* BSI.

(1992). *ENA TS 41-24 : Issue 1 - Guidelines For The Design, Installation, Testing And Maintenance Of Main Earthing Systems In Substations.* Energy Networks Association.

(1992). *ENA TS 41-24 : Issue 1.*

Endrenyi, J : Reliability Modelling in Electric Power Systems. (1979). John Wiley & Sons.

(1999). *IEC 60287 - 3-1 Ed 1.1b.*

(1999). IEC 60287-3-1 Ed. 1.1 b : 1999, Electric cables - Calculation of the current rating - Part 3-1: Sections on operating conditions - Reference operating conditions and selection of cable type. International Electrotechnical Commission.

(2007). IEC 60949 Ed. 1.0 b : 1988, Calculation of thermally permissible short-circuit currents, taking into account non-adiabatic heating effects. International Electrotechnical Commission.

(2007). *S36-1 : Identification and Recording of Hot Sites - Joint Electricity / British Telecom Procedure.* Energy Networks Association.

Other publications

(M. Davies, T. Charlton, D. Baudin, 'New Design Methods to Achieve Greater Safety in Low Voltage Systems During A High Voltage Earth Fault', CIRED Conference, Frankfurt, June 2011)

Commented [DC47]: moved to bibliography under other publications